CONTROL SYNTHESIZER

S80

SERVICE MANUAL



CONTENTS

SPECIFICATIONS 3
PANEL LAYOUT 4
CIRCUIT BOARD LAYOUT 5
BLOCK DIAGRAM 6
WIRING 7
DISASSEMBLY PROCEDURE 8
LSI PIN DESCRIPTION 13
IC BLOCK DIAGRAM 18
CIRCUIT BOARDS 20
TEST PROGRAM 24/34
MIDI DATA FORMAT 44
MIDI INPLEMENTATION CHART 48
PARTS LIST
OVERALL CIRCUIT DIAGRAM

SY 011477
19991101-198000

YAMAHA
HAMAMATSU, JAPAN
1.58K-9431 Printed in Japan '99.11

IMPOR TANT NOTICE

This manual has been provided for the use of authorized Yamaha Retailers and their service personnel. It has been assumed that basic service procedures inherent to the industry, and more specifically Yamaha Products, are already known and understood by the users, and have therefore not been restated.

WARNING : Failure to follow appropriate service and safety procedures when servicing this product may result in personal injury, destruction of expensive components and failure of the product to perform as specified. For these reasons, we advise all Yamaha product owners that all service required should be performed by an authorized Yamaha Retailer or the appointed service representative.

IMPORTANT : This presentation or sale of this manual to any individual or firm does not constitute authorization certification, recognition of any applicable technical capabilities, or establish a principal-agent relationship of any form.

The data provided is belived to be accurate and applicable to the unit(s) indicated on the cover. The research engineering, and service departments of Yamaha are continually striving to improve Yamaha products. Modifications are, therefore, inevitable and changes in specification are subject to change without notice or obligation to retrofit. Should any discrepancy appear to exist, please contact the distributor's Service Division.

WARNING : Static discharges can destroy expensive components. Discharge any static electricity your body may have accumulated by grounding yourself to the ground bus in the unit (heavy gauge black wires connect to this bus.)

IMPORTANT : Turn the unit OFF during disassembly and parts replacement. Recheck all work before you apply power to the unit.

LITHIUM BA TTER Y HANDLING

This product uses a lithium battery for memory back-up.

WARNING : Lithium batteries are dangerous because they can be exploded by improper handling. Observe the following precautions when handling or replacing lithium batteries.

- Leave lithium battery replacement to qualified service personnel.
- Always replace with batteries of the same type.
- When installing on the PC board by soldering, solder using the connection terminals provided on the battery cells.
- Never solder directly to the cells. Perform the soldering as quickly as possible.
- Never reverse the battery polarities when installing.
- Do not short the batteries.
- Do not attempt to recharge these batteries.
- Do not disasemble the batteries.
- Never heat batteries or throw them into fire.

ADVARSEL!
Lithiumbatteri-Eksplosionsfare ved fejlagtig handtering. Udskiftning ma kun ske med batteri af samme fabrikat og type. lever det brugte batteri tilbage til leverandren.

VARNING
Explosionsfara vid felaktigt batteribyte.
Anvand samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren.
Kassera anvant batteri enligt fabrikantens instruktion.

VAROITUS
Paristo voi rajahtaa, jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin.
Havita kaytetty paristo valmistajan ohjeiden mukaisesti.

The following information complies with Dutch official Gazette 1995. 45; ESSENTIALS OF ORDER ON THE COLLECTION OF BATTERIES.

- Please refer to the diassembly procedure for the removal of Back-up Battery.
- Leest u voor het verwijderen van de backup batterij deze beschrijving.

WARNING: CHEMICAL CONTENT NOTICE!

The solder used in the production of this product contains LEAD. In addition, other electrical/electronic and/or plastic (Where applicable) components may also contain traces of chemicals found by the California Health and Welfare Agency (and possibly other entities) to cause cancer and/or birth defects or other reproductive harm.

DO NOT PLACE SOLDER, ELECTRICAL/ELECTRONIC OR PLASTIC COMPONENTS IN YOUR MOUTH FOR ANY REASON WHAT SO EVER!

Avoid prolonged, unprotected contact between solder and your skin! When soldering, do not inhale solder fumes or expose eyes to solder/flux vapor!

If you come in contact with solder or components located inside the enclosure of this product, wash your hands before handling food.

■ WARNING

Components having special characteristics are marked ⚠ and must be replaced with parts having specification equal to those originally installed.

SPECIFICATIONS

KEYBOARD	**Number of Keys**	88
	Touch	Initial touch, After touch
TONE GENERATION SYSTEM	**Tone Generators**	AWM2, Modular Synthesis Plug-in System
	Polyphony	64
VOICE	**Number of Voice**	Normal voices (256 Presets, 128 Internals [Users], 128 Externals [Memory Cards]), Drum voices (8 presets, 2 Internals [Users], 2 Externals [Memory Cards]), Plug-in voices (64 x 2 Plug-in Boards [If installed])
	Wave ROM	24 MByte
PERFORMANCE	**Multi-Timbres**	19 (16 Voice Parts, A/D Input Part, Plug-in 1/2 Parts)
	Number of Performance	128 Internals, 64 Externals
	Master Keyboard Mode	4 Zones
EFFECT	**Reverb**	12
	Chorus	23
	Insertion	24 (Insertion 1), 92 (Insertion 2), 24 (Insertion for Plug-in Voices)
	Master EQ	4
SEQUENCE PLAY	**Format**	SMF Format 0 (Direct Play only), Sequence Chain (Load/Save)
	Number of Sequence Chains	100 Steps (100 Songs)
ARPEGGIATOR	**Number of Arpeggios**	128
Card	**File Type**	All Data, All Voice, Plug-in, Sequence Chain, SMF
	Functions	Save, Load, Rename, Delete, Make Directory, Format
CONTROLS		Volume Slider, 4 Control Sliders, Pitch, Modulation, Shift, Page, Knob A/B/C/1/2, Data, Effect Bypass, Master Keyboard, Exit, Enter, Dec/No, Inc/Yes, 7 Mode Keys, Sequence Play, Sequence PLAY/STOP, 6 Memory Keys, Quick Access, 8 Bank Keys, 16 Program/Part Keys, Power, Card Slot, Gain, Host Select
CONNECTORS & TERMINALS		MIDI In, Out, Thru, To Host, Breath, Footswitch, Sustain, Foot Controller, Foot Volume, Individual Output 1, 2, Output L/Mono R, Phones, A/D Input, AC Inlet, 2 Connectors for Plug-in Boards
DISPLAY		40 x 2 (Backlit)
INCLUDED ACCESSORIES		Owner's Manual, Data List, CD-ROM, AC Power Cord
OPTIONAL ACCESSORIES		PLG150 Plug-in Boards Series, PLG100 Plug-in Boards Series, FC4/5 Footswitch, FC7 Foot Controller, BC3 Breath Controller
POWER CONSUMPTION		16W
OUTPUT IMPEDANCE		Output: +18.1 ±2dbm (10k ohms), Phones: +17.2 ±2dbm (33 ohms)
DIMENSIONS		1329(W) x 371(D) x 157(H) mm
WEIGHT		24.3 kg

■ PANEL LAYOUT

• Front panel

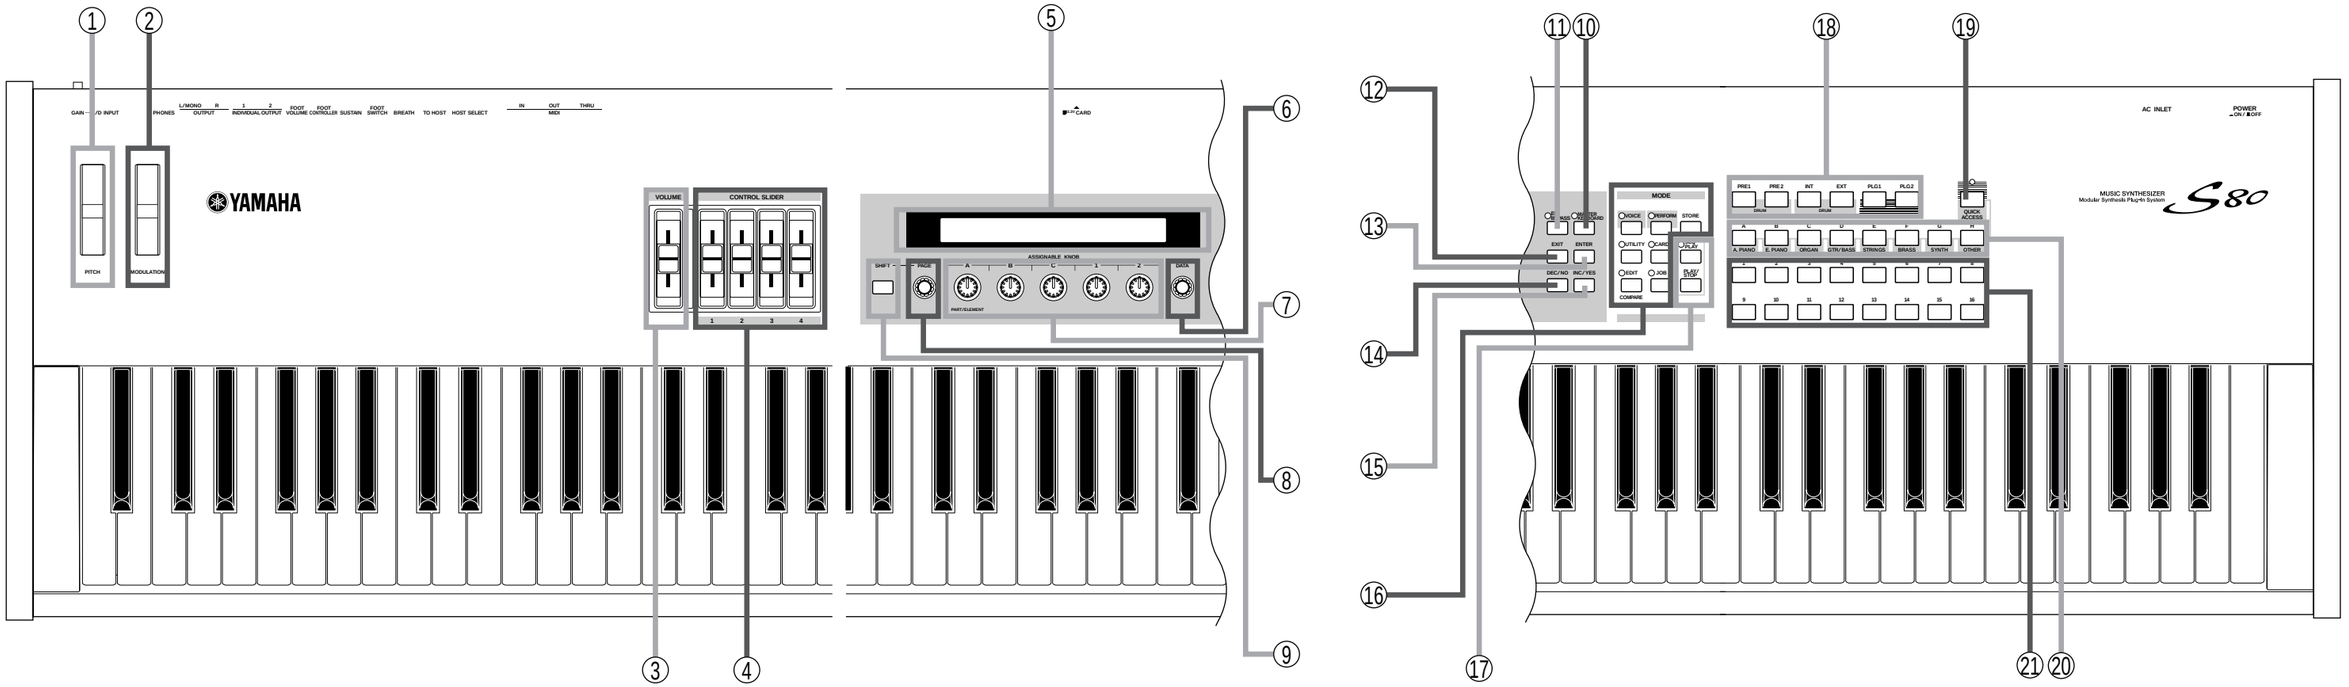

① PITCH bend wheel
② MODULATION wheel
③ [VOLUME] Slider
④ Control Sliders
⑤ LCD (Liquid Crystal Display)
⑥ [DATA] knob
⑦ Knobs [A], [B], [C], [1] and [2]
⑧ [PAGE] knob
⑨ [SHIFT] key
⑩ [MASTER KEYBOARD] key
⑪ [EF BYPASS] key
⑫ [EXIT] key
⑬ [ENTER] key
⑭ [DEC/NO] key
⑮ [INC/YES] key
⑯ MODE keys
⑰ SEQ controls
⑱ MEMORY keys
⑲ [QUICK ACCESS] key
⑳ BANK [A] to [H] keys
㉑ PROGRAM/PART [1] to [16] keys

• **Rear panel**

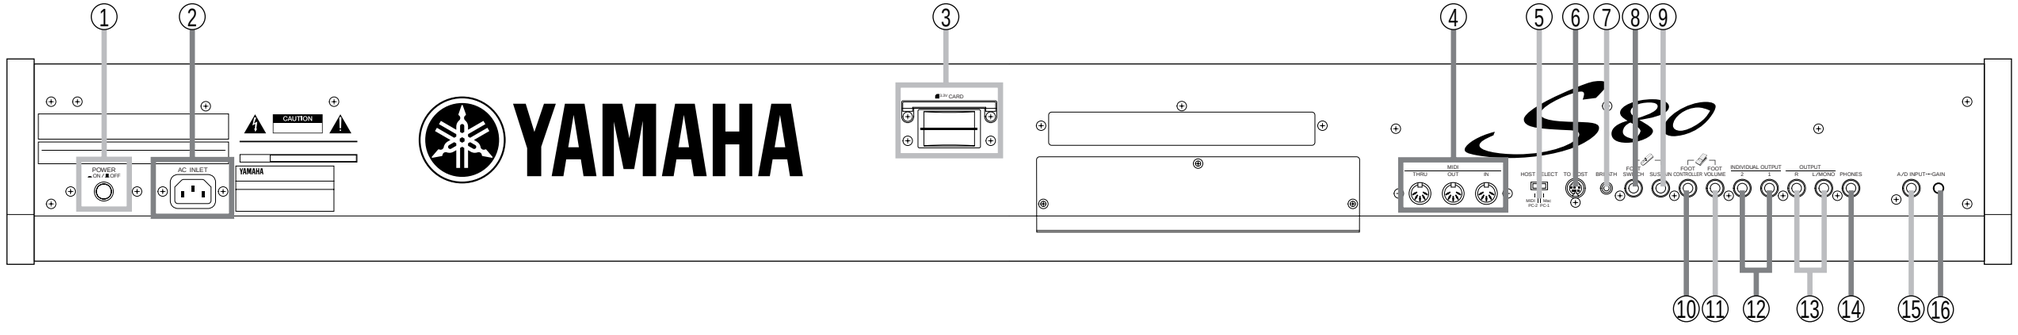

① **POWER switch**
② **AC INLET terminal**
③ **CARD slot**
④ **MIDI IN, OUT, and THRU connectors**
⑤ **HOST SELECT switch**
⑥ **TO HOST terminal**
⑦ **BREATH jack**
⑧ **FOOT SWITCH jack**
⑨ **SUSTAIN jack**
⑩ **FOOT CONTROLLER jack**
⑪ **FOOT VOLUME jack**
⑫ **INDIVIDUAL OUTPUT 1 and 2 jacks**
⑬ **OUTPUT L/MONO and R jack**
⑭ **PHONES jack**
⑮ **A/D INPUT jack**
⑯ **GAIN knob**

■ CIRCUIT BOARD LAYOUT

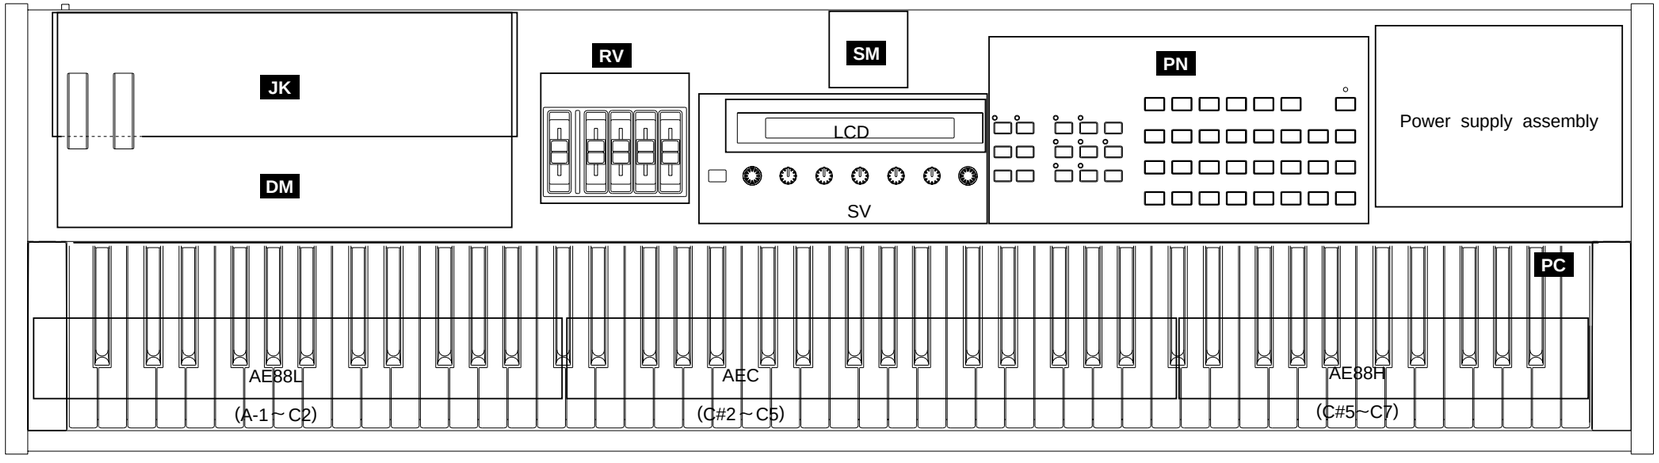

■ BLOCK DIAGRAM

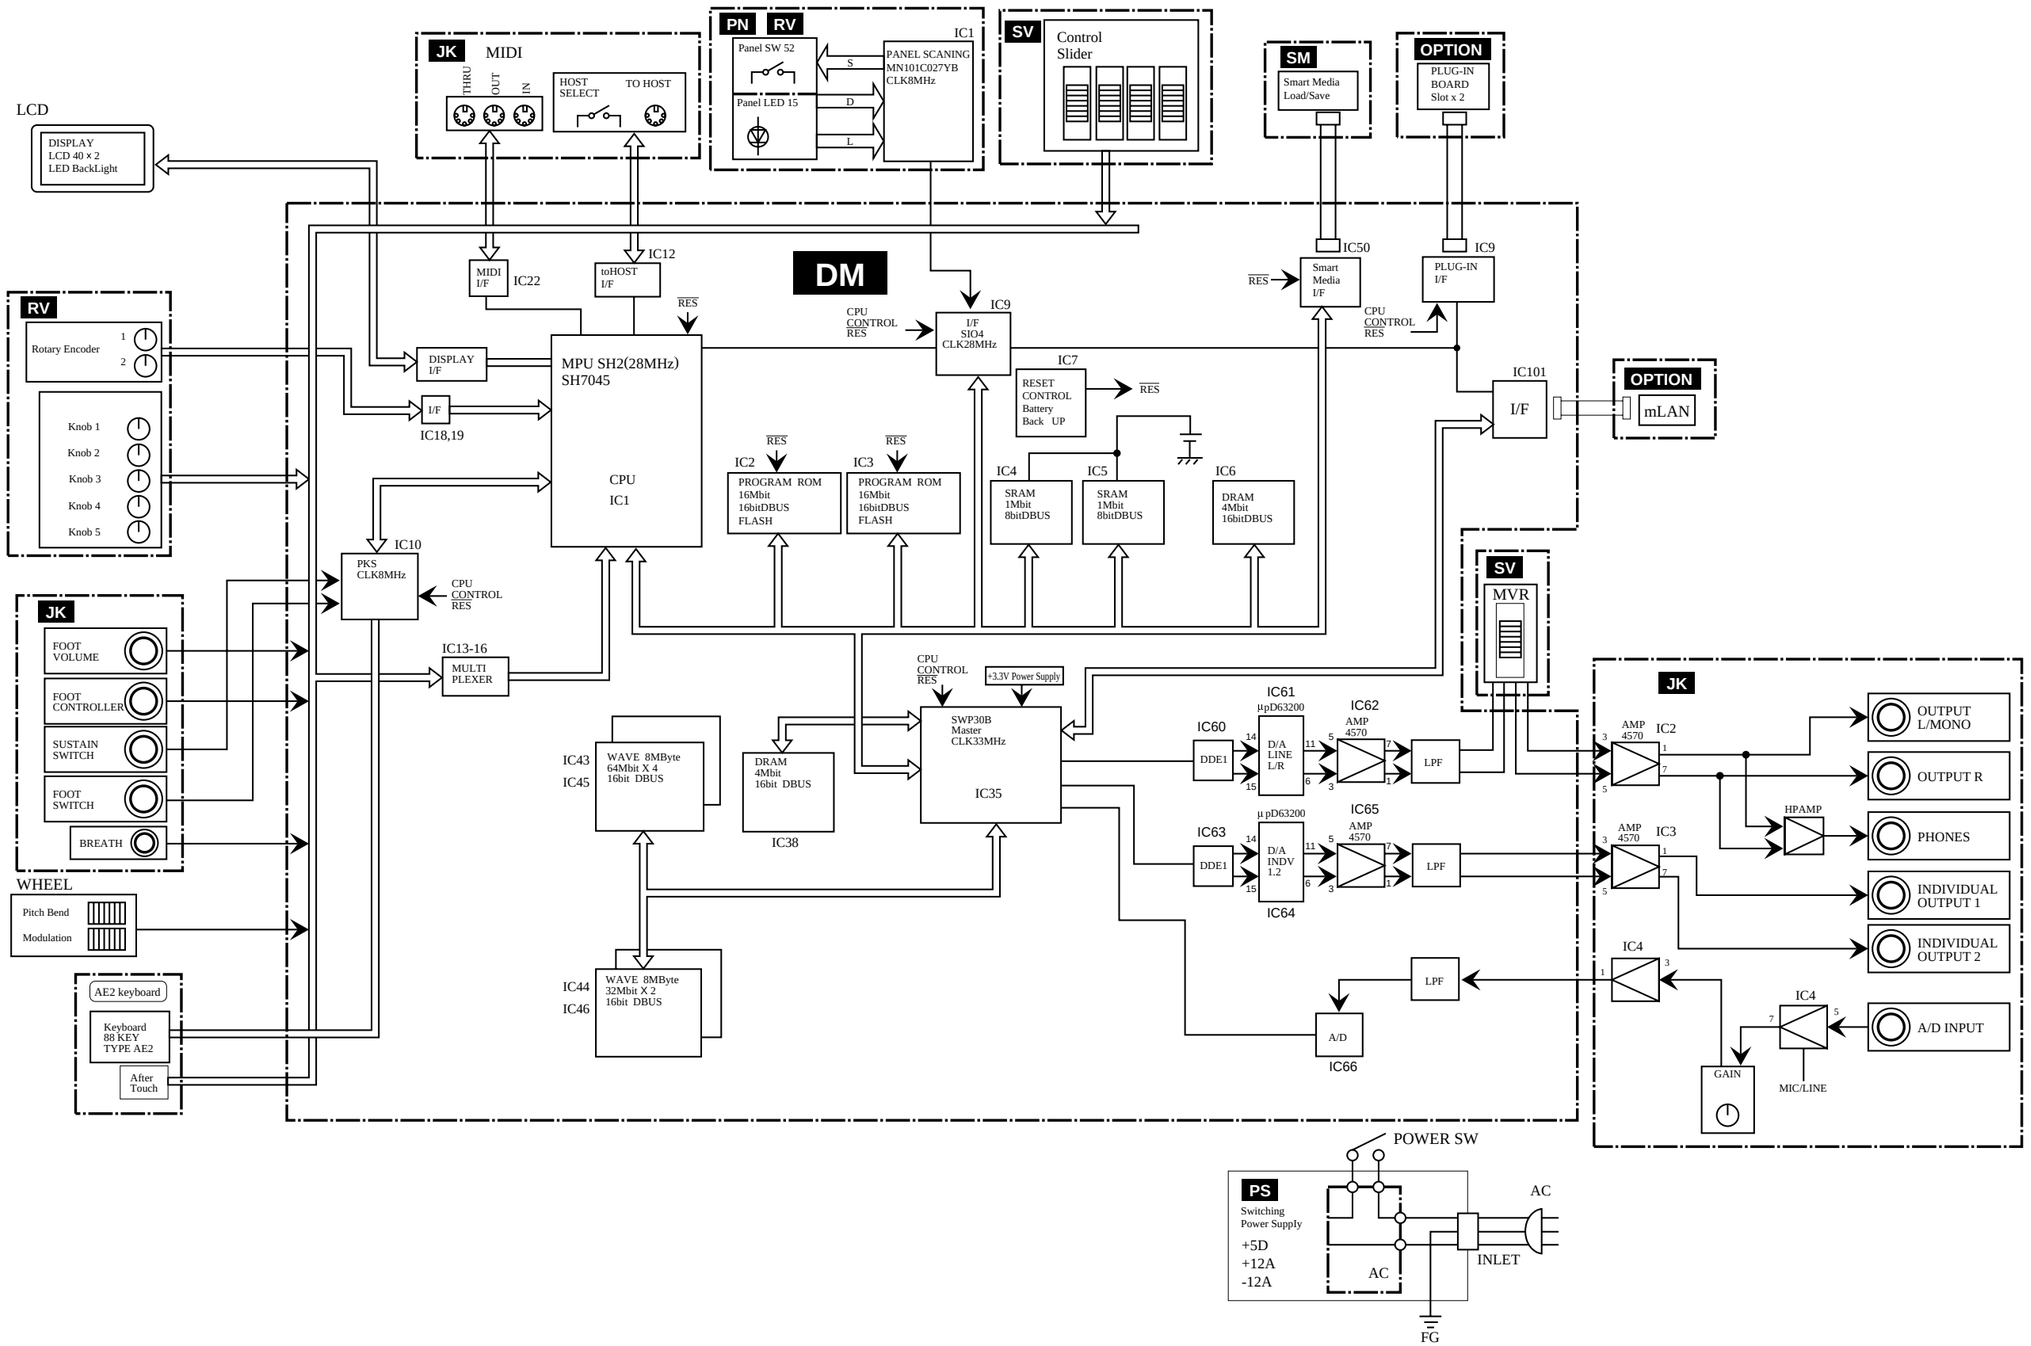

■ WIRING

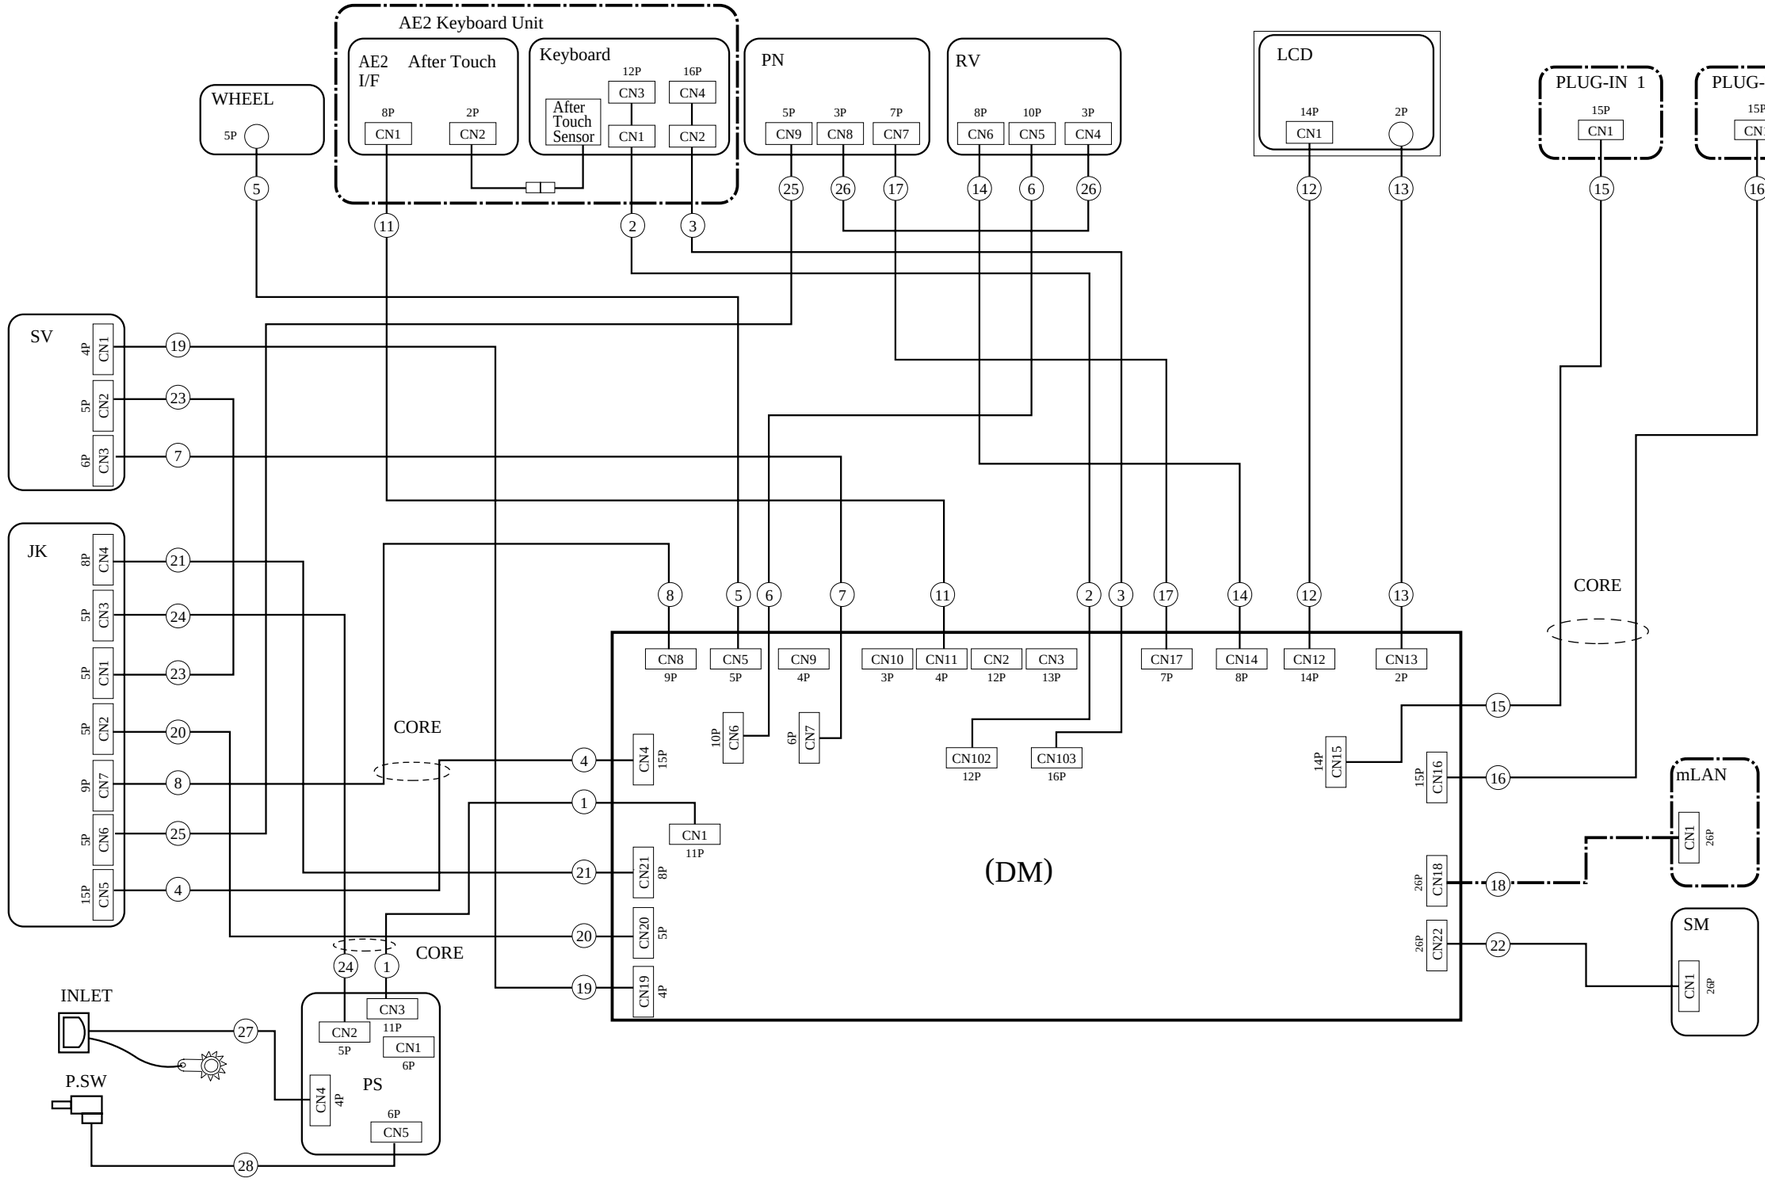

Location	Connector Assembly	Remarks	Parts List Ref. No.
✻1 ①	DM-PS	11P/L1450	OVERALL 370
②	MK2	12P	OVERALL 380
③	MK1	16P	OVERALL 390
✻2 ④	KRD-KRD	15P/L600	OVERALL 450
⑤	WHEEL	5P/L300	WHEEL 80
⑥	KRD-KRD	10P/L650	CONTROLPANEL 110
⑦	KRD-KRD	6P/L400	CONTROLPANEL 120
✻2 ⑧	KRD-KRD	9P/L450	OVERALL 400
⑪	AFTER	4P-8P/L1350	OVERALL 420
⑫	DM-LCD	14P/L300	—
⑬	DM-LCD	2P/L500	—
⑭	KRD-KRD	8P/L450	CONTROLPANEL 130
✻3 ⑮	DM-PLUG IN1	14P-15P/L400	OVERALL 450
⑯	DM-PLUG IN2	15P-15P/L400	
⑰	KRD-KRD	7P/L700	CONTROLPANEL 140
⑱	DM-mLAN	26P	OPTION
⑲	DM-MVR	4P/L450	CONTROLPANEL 150
⑳	DM-IND	5P/L500	OVERALL 470
㉑	DM-JK	4P/L350	OVERALL 480
㉒	DM-SM	26P/L430	CONTROLPANEL 181
㉓	JK-MVR	5P/L650	CONTROLPANEL 160
✻1 ㉔	JK-PS	5P	OVERALL 370
㉕	JK-PN	5P/L800	CONTROLPANEL 170
㉖	KRD-KRD	3P/L300	CONTROLPANEL 180
㉗	PS-AC INLET	4P	POWER SUPPLY 40
㉘	PS-P.SW	3P/L100	POWER SUPPLY 30a

✻1 Connector Assembly (PS Core)
✻2 Connector Assembly (DMJK Core)
✻3 Connector Assembly (PLUG Core)

■ DISASSEMBLY PROCEDURE

1. Remove the six (6) screws marked [300] from the bottom of the main unit and open the control panel assembly by lifting it up. (Fig. 1)

〈BOTTOM VIEW〉

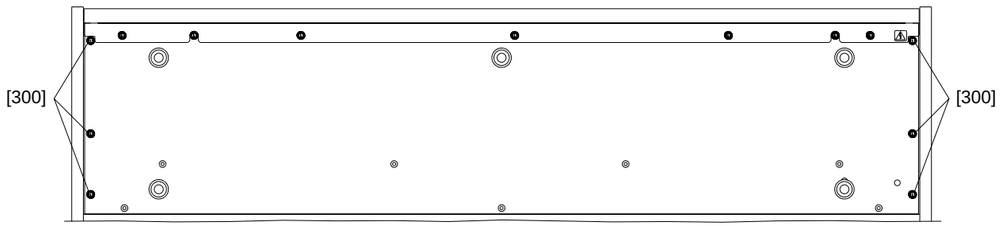

[300]: Bind Head Screw 5.0X20 MFZN2BL (VB857600)

Fig.1

2. PN Circuit Board

2-1 Open the control panel assembly. (See procedure 1.)
2-2 Remove the twelve (12) screws marked [42]. The PN circuit board can then be removed. (Fig. 2)

3. RV Circuit Board

3-1 Open the control panel assembly. (See procedure 1.)
3-2 Remove the five (5) knobs marked [200] and the two (2) knobs marked [210] from the panel surface.
3-3 Remove the ten (10) screws marked [96]. The RV circuit board can then be removed. (Fig. 2)

〈BOTTOM VIEW〉

〈TOP VIEW〉

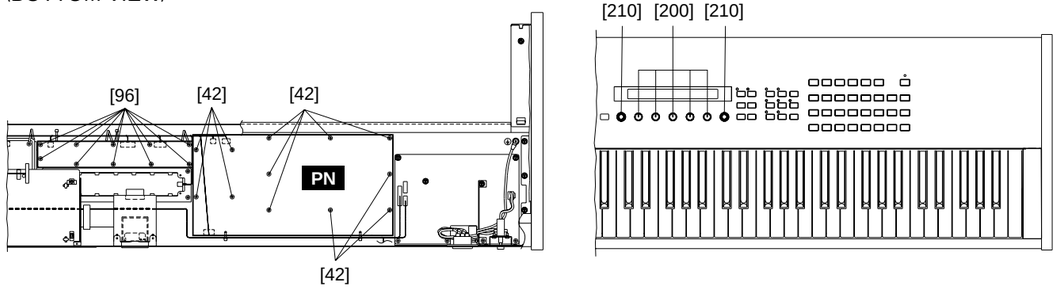

[42]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)
[96]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)

Fig.2

4. Power Supply Unit

4-1 Open the control panel assembly. (See procedure 1.)
4-2 Remove the two (2) screws marked [30] and the five (5) screws marked [31]. (Fig. 3)
4-3 Remove the four (4) screws marked [22] from the power assembly. (Fig. 3) Power supply unit can then be removed.

5. SM Circuit Board

5-1 Open the control panel assembly. (See procedure 1.)
5-2 Remove the two (2) screws marked [96]. The SM circuit board can then be removed. (Fig. 4)

6. SV Circuit Board

6-1 Open the control panel assembly. (See procedure 1.)
6-2 Remove the three (3) screws marked [130]. The PLG angle can then be removed. (Fig. 4)
6-3 Remove the five (5) knobs marked [220] from the panel surface. (Fig. 4)
6-4 Remove the six (6) screws marked [82]. The SV circuit board can then be removed. (Fig. 3)

7. Display Assembly

7-1 Open the control panel assembly. (See procedure 1.)
7-2 Remove the PLG angle. (See procedure 6-2.)
7-3 Remove the four (4) screws marked [92]. The display assembly can then be removed. (Fig. 3)

8. JK Circuit Board

8-1 Open the control panel assembly. (See procedure 1.)
8-2 Remove the nine (9) screws marked [81]. The JK circuit board can then be removed. (Fig. 3)

〈BOTTOM VIEW1〉

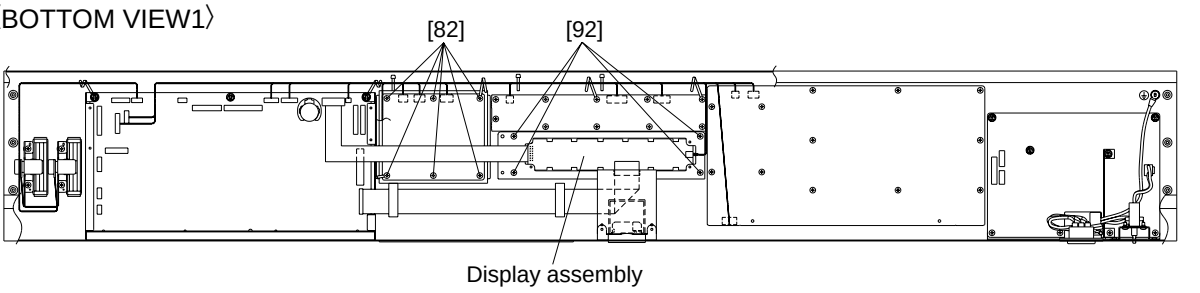

〈TOP VIEW〉

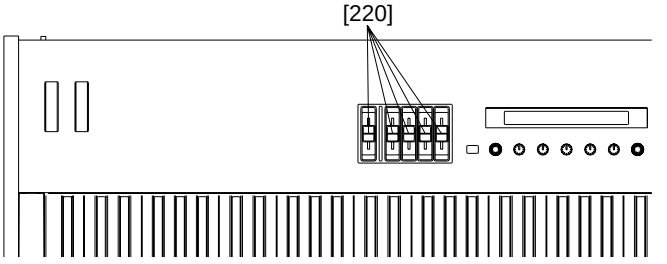

〈BOTTOM VIEW2〉

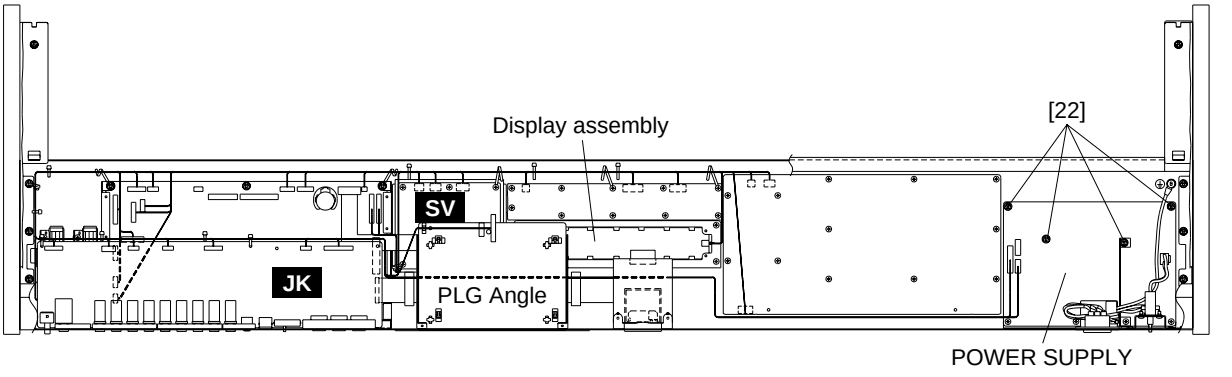

〈REAR VIEW〉

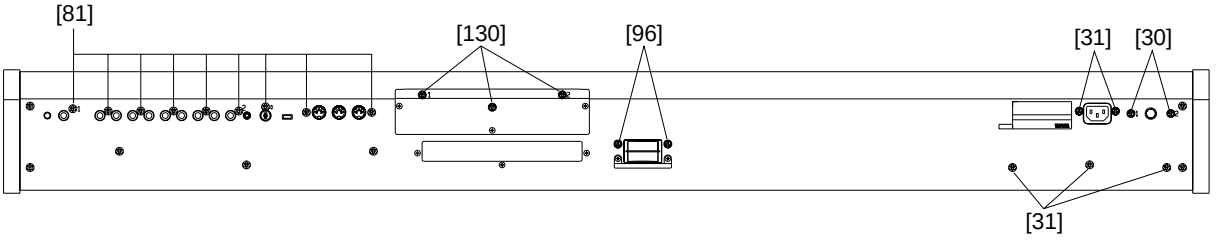

[22]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)
[30]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)
[31]: Bonding Tapping Screw-B 3.0X10 MFZN2BL (VQ049800)
[81]: Bonding Tapping Screw-B 3.0X10 MFZN2BL (VQ049800)
[82]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)
[92]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)
[96]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)
[130]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)

Fig.3

9. DM Circuit Board

9-1 Open the control panel assembly. (See procedure 1.)
9-2 Remove the JK circuit board. (See procedure 8.)
9-3 Remove the seven (7) screws marked [282]. The DM shield cover can then be removed. (Fig. 4)
9-4 Remove the three (3) screws marked [63]. (Fig. 4)
9-5 Remove the two (2) screws marked [62] and the screw marked [64] from the DM circuit board.
Be careful of the harness clamp, which is also installed there. (Fig. 5)

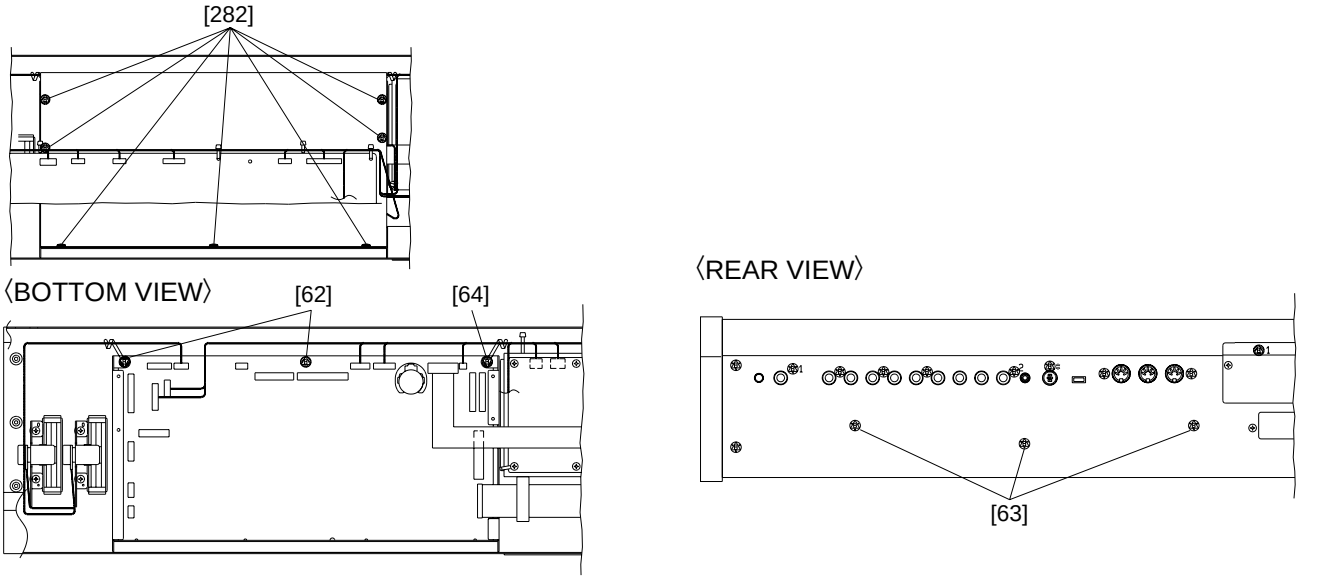

[62]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)
[63]: Bonding Tapping Screw-B 3.0X10 MFZN2BL (VQ049800)
[64]: Bind Head Tapping Screw-B 3.0X8 MFZN2BL (EP600190)
[282]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)

Fig.4

10. Wheel Assembly

10-1 Open the control panel assembly. (See procedure 1.)
10-2 Remove the JK circuit board. (See procedure 8.)
10-3 Remove the four (4) screws marked [102]. The wheel assembly can then be removed. (Fig. 5)

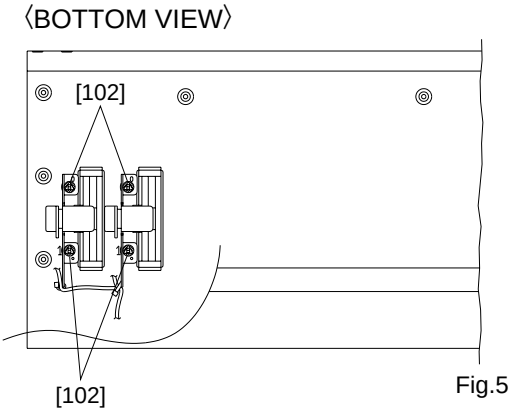

[102]: Bind Head Tapping Screw-B 3.0X6 MFZN2BL (EP600230)

Fig.5

11. PC Circuit Board

11-1 Open the control panel assembly. (See procedure 1.)

11-2 Remove the two (2) screws marked [250]. The PC circuit board can then be removed. (Fig. 6)

12. Keyboard Assembly

12-1 Open the control panel assembly. (See procedure 1.)

12-2 Remove the four (4) screws marked [230] and the four (4) screws marked [240]. (Fig. 6)

12-3 Loosen the two (2) screws marked [292], which are secring the front rail. (Fig. 6)

12-4 Remove the seven (7) screws marked [300], which are secring the front rail at the bottom of the main unit to the keyboard assembly. The keyboard assembly can then be removed. (Fig. 6)

〈TOP VIEW〉

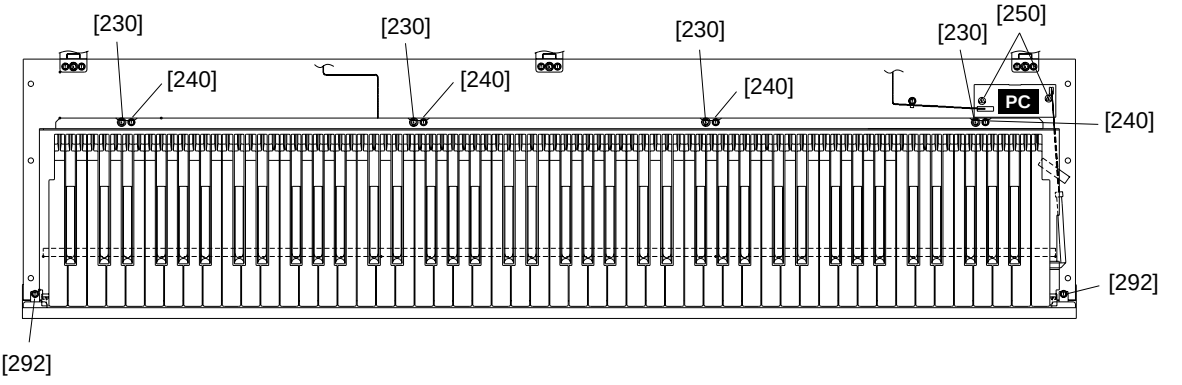

〈BOTTOM VIEW〉

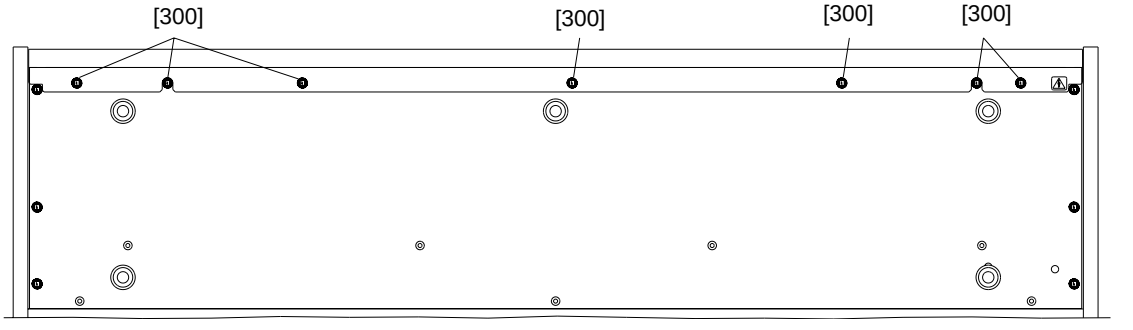

[230]: Bind Head Screw 4.0X14 MFZN2Y (EG340210)
[240]: Bind Head Tapping Screw-1 3.5X12 MFZN2Y (EP030240)
[250]: Bind Head Screw-B 3.0X6 MFZN2BL (EG330360)
[292]: Bind Head Tapping Screw-1 3.5X12 MFZN2Y (EP030240)
[300]: Bind Head Screw 5.0X20 MFZN2BL (VB857600)

Fig.6

13. Keyboard Disassembly Procedure

13-1 Remove the circuit board marked [A], and then remove the key spring marked [B]. (Fig. 7)

13-2 Press the part marked [D'] in the direction shown in figure 9, then remove the key marked [D] and the hammer assembly marked [C]. (Fig. 8, Fig. 9)

13-3 The black keys can be disassenbled by following the same procedure.

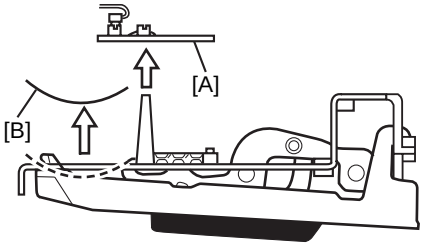

Fig.7

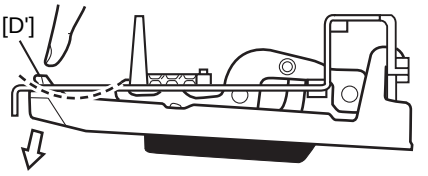

Fig.8

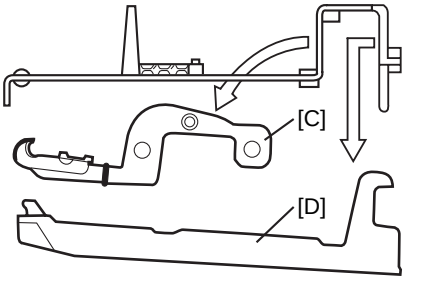

Fig.9

14. Keyboard Assembly Procedure

14-1 Insert the hammer assembly marked [C] in the frame in the direction marked [1]. (Fig. 10)

14-2 Place the hammer assembly as shown in figures 10 and 11.

14-3 Place the white key in the order of [4] and [5]. (Fig. 12)

14-4 Place doun on the white key in the direction marked [6] shown in figure 13.

14-5 Attach the key spring marked [B], and then place the circuit board marked [A]. (Fig. 14)

14-6 The black keys can be disassenbled by following the same procedure.

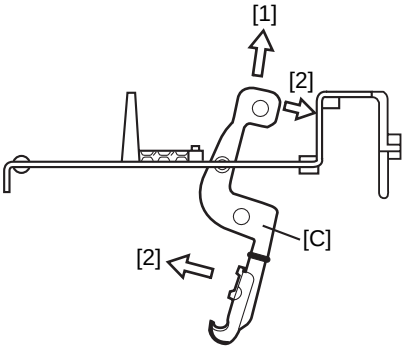

Fig.10

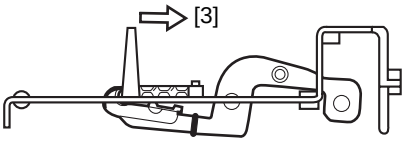

Fig.11

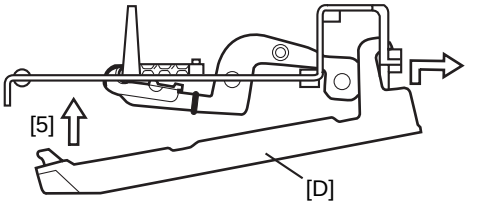

Fig.12

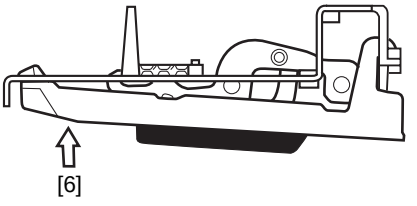

Fig.13

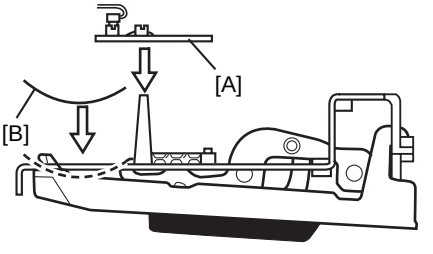

Fig.14

LSI PIN DESCRIPTION

● **HD64F7045F28** (XW419A00) **CPU**

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	/WRHH	O	HH write	73	D15	I/O	Data bus
2	PE14	I/O	LCD data 6 input / output	74	D14	I/O	
3	/WRHL	O		75	D13	I/O	
4	PA21	I	MLAN insert detect	76	D12	I/O	
5	PE15	I/O	LCD data 7 input / output	77	VCC77	-	Power supply
6	VSS6	-	Ground	78	D11	I/O	Data bus
7	A0	O	Address bus	79	VSS79	-	Ground
8	A1	O		80	D10	I/O	Data bus
9	A2	O		81	D9	I/O	
10	A3	O		82	D8	I/O	
11	A4	O		83	D7	I/O	
12	VCC12	-	Power supply	84	D6	I/O	
13	A5	O	Address bus	85	VCC85	-	Power supply
14	VSS14	-	Ground	86	D5	I/O	Data bus
15	A6	O	Address bus	87	VSS87	-	Ground
16	A7	O		88	D4	I/O	Data bus
17	A8	O		89	D3	I/O	
18	A9	O		90	D2	I/O	
19	A10	O		91	D1	I/O	
20	A11	O		92	D0	I/O	
21	A12	O		93	VSS93	-	Ground
22	A13	O		94	XTAL	I	Crystal oscillator
23	A14	O		95	MD3	I	Mode select
24	A15	O		96	EXTAL	I	Crystal oscillator
25	A16	O		97	MD2	I	Mode select
26	VCC26	-	Power supply	98	NMI	-	Non-maskable interrupt
27	A17	O	Address bus	99	VCC99/FWP99	-	Power supply
28	VSS28	-	Ground	100	PA16	I	Encoder 1B input
29	PA20	I	Encoder 2A input	101	PA17	I	Encoder 1A input
30	PA19	I	Encoder 2B input	102	MD1	I	Mode select
31	PB2	O	Row address strobe	103	MD0	I	Mode select
32	PB3	O	Column address strobe (low)	104	PLLVCC	-	PLL power supply
33	PA18	I	Host off line detect input	105	PLLCAP	-	PLL capacitor
34	PB4	O	Column address strobe (high)	106	PLLVSS	-	PLL ground
35	VSS35	-	Ground	107	PA15	O	CPU clock out
36	PB5	O	DRAM read/write	108	/RES	-	Reset
37	A18	O	Address bus	109	TIOCOA	I	A/D jack insert detect interrupt request input
38	A19	O		110	PE1	I	Smart MINS
39	A20	O		111	PE2	I	Model detection
40	VCC40	-	Power supply	112	VCC112	-	Power supply
41	A21	O	Address bus	113	PE3	I	Smart busy input
42	VSS42	-	Ground	114	PE4	I	MLAN reset interrupt request input
43	/RD	O	Read	115	PE5	O	1M clock out
44	/WDTOVF	-	Not used	116	PE6	I	Model detection
45	D31	I/O	Data bus	117	VSS117	-	Ground
46	D30	I/O		118	AN0	I	Analog input
47	/WRH	O	High write	119	AN1	I	
48	WRL	O	Low write	120	AN2	I	
49	/CS1	O	Chip Select 1	121	AN3	I	
50	CS0	O	Chip Select 0	122	AN4	I	
51	PA9	I	MLAN MIDI interrupt request	123	AN5	I	
52	PA8	I	Interrupt request	124	AVSS	-	Analog ground
53	/CS3	O	Chip select 3	125	AN6	I	Analog input
54	/CS2	O	Chip select 2	126	AN7	I	
55	VSS55	—	Ground	127	AVREF	-	Analog reference voltage
56	D29	I/O	Data bus	128	AVCC	-	Analog power supply
57	D28	I/O		129	VSS129	-	Ground
58	D27	I/O		130	RXD0	I	MIDI input
59	D26	I/O		131	TXD0	O	MIDI output
60	D25	I/O		132	/IRQ0	I	Plug in sireal interrupt request input
61	VSS61	-	Ground	133	RXD1	I	HOST input
62	D24	I/O	Data bus	134	TXD1	O	HOST output
63	VCC63	-	Power supply	135	VCC135	-	Power supply
64	D23	I/O	Data bus	136	/IRQ1	I	MLAN MIDI interrupt input
65	D22	I/O		137	PE7	I	Smart Vprt Input
66	D21	I/O		138	PE8	I/O	LCD data 0 input / output
67	D20	I/O		139	PE9	I/O	LCD data 1 input / output
68	D19	I/O		140	PE10	I/O	LCD data 2 input / output
69	D18	I/O		141	VSS141	-	Ground
70	D17	I/O		142	PE11	I/O	LCD data 3 input / output
71	VSS71	-	Ground	143	PE12	I/O	LCD data 4 input / output
72	D16	I/O	Data bus	144	PE13	I/O	LCD data 5 input / output

● **HD63B01Y0RCE0F** (XM234A00) **CPU (PKS)**

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	/NMI	I	Non-maskable interrupt	33	M1/S8	I	Make contact of key receive/
2	E	O		34	M0/S7	I	Switch receive
3	D#	O		35	Vss		Ground
4	D	O	Key scan drive	36	F	O	
5	C#	O		37	F#	O	
6	CL	O		38	G	O	
7	PULL 1			39	G#	O	Key scan drive
8	PULL 2			40	A	O	
9	LC.AE//FS	I	connected to ground	41	A#	O	
10	/REPEAT	I	Auto repeat (L:on, H:off)	42	B	O	
11	/KOF-REQ	I	Key off request	43	C	O	
12	SW1	I	Switch 1 (L: on, H: off)	44	LC//AE	I	connected to +5V
13	SW2	I	Switch 2 (L: on, H: off)	45	B6/S6	I	
14	/IS	I	Input strobe	46	B5/S5	I	
15	/OS	I	Output strobe	47	B4/S4	I	Break contact of key receive/
16	SW3	I	Switch 3 (L: on, H: off)	48	B3/S3	I	Switch receive
17	SW4	I	Switch 4 (L: on, H: off)	49	B2/S2	I	
18	DOUT0	O		50	B1/S1	I	
19	DOUT1	O		51	B0/S0	I	
20	DOUT2	O		52	Se	O	
21	DOUT3	O		53	Sd	O	
22	DOUT4	O	Data output	54	Sc	O	Switch drive
23	DOUT5	O		55	Sb	O	
24	DOUT6	O		56	Sa	O	
25	DOUT7	O		57	E		Not used
26	Vcc		Power supply (+5V)	58	Vss		Ground
27	Sf	O	Switch drive	59	XTAL		Not used
28	M5/S13	I		60	EXTAL	I	8 MHz clock
29	M4/S12	I		61	MP0	I	Mode program 0
30	M3/S10	I	Make contact of key receive/	62	MP1	I	Mode program 1
31	M2/S9	I	Switch receive	63	/RES	I	Initial clear
32	M1/S8	I		64	/STBY	I	Stanby-mode signal

● µ **PD63200GS** (XM145A00) DAC (Digital to Analog Converter)

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	4/8F	I	4/8 Fs selection	9	R. REF		Channel R voltage reference
2	D. GND		Digital ground	10	L. REF		Channel L voltage reference
3	16 BIT	I	16 bit/18 bit selection	11	L. OUT	O	Channel L output
4	D. VDD		Digital power supply	12	A. GND		Analog ground
5	A. GND		Analog ground	13	WDCK	I	Word clock
6	R. OUT	O	Channel R output	14	RSI	I	Channel R series input
7	A. VDD		Analog power supply	15	SI/LSI	I	Series input/Channel L series nput
8	A. VDD			16	CLK	I	Clock

● **JG710069** (XM326B00) DDE1 (DAC Dynamic Range Enhancer)

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	CLK	I	Master clock	9	SH 0	O	N.C.
2	SYW	I	Sync signal	10	SH 1	O	N.C.
3	MIN 1	I	Signal input	11	LE	O	Latch enable for DAC
4	MIN 0	I	Signal input	12	V_{DD}		Power supply
5	Vss		Ground	13	DACO 0	O	Output (DAC)
6	SEL 1	I	Mode select	14	DACO 1	O	Output (DAC)
7	SEL 0	I	Mode select	15	DCLK	O	Clock for DAC
8	SUP	I	1 bit shift up input	16	ICN	I	Initial clear

● **TC203C760HF-002** (XS725A00) SWP30B AWM Tone Generator coped with MEG) Standard Wave Processor

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	Vss		(Ground)	121	VSS		(Ground)
2	CA0	I		122	HMD0	I/O	
3	CA1	I		123	HMD1	I/O	
4	CA2	I		124	HMD2	I/O	
5	CA3	I		125	HMD3	I/O	
6	CA4	I		126	HMD4	I/O	
7	CA5	I	Address bus of internal register	127	HMD5	I/O	
8	CA6	I		128	HMD6	I/O	Wave memory data bus (Upper 16 bits)
9	CA7	I		129	HMD7	I/O	
10	CA8	I		130	HMD8	I/O	
11	CA9	I		131	HMD9	I/O	
12	CA10	I		132	HMD10	I/O	
13	CA11	I		133	HMD11	I/O	
14	VSS		(Ground)	134	HMD12	I/O	
15	CD0	I/O		135	HMD13	I/O	
16	CD1	I/O		136	HMD14	I/O	
17	CD2	I/O		137	HMD15	I/O	
18	CD3	I/O		138	VSS		(Ground)
19	CD4	I/O		139	HMA0	O	
20	CD5	I/O		140	HMA1	O	
21	CD6	I/O		141	HMA2	O	
22	CD7	I/O		142	HMA3	O	
23	CD8	I/O	Data bus of internal register	143	HMA4	O	
24	CD9	I/O		144	HMA5	O	
25	CD10	I/O		145	HMA6	O	
26	CD11	I/O		146	HMA7	O	
27	CD12	I/O		147	HMA8	O	
28	CD13	I/O		148	HMA9	O	
29	CD14	I/O		149	HMA10	O	
30	VDD		(Power supply)	150	VDD		(Power supply)
31	VSS		(Ground)	151	VSS		(Ground)
32	CD15	I/O		152	HMA11	O	
33	CSN	I	Chip select	153	HMA12	O	Wave memory address bus
34	WRN	I	Write strobe	154	HMA13	O	
35	RDN	I	Read strobe	155	HMA14	O	
36	VDD		(Power supply)	156	HMA15	O	
37	SYSH0	O		157	HMA16	O	
38	SYSH1	O		158	HMA17	O	
39	SYSH2	O		159	HMA18	O	
40	SYSH3	O	NSYS/LNSYS upper 16 bits output	160	HMA19	O	
41	SYSH4	O		161	HMA20	O	
42	SYSH5	O		162	HMA21	O	
43	SYSH6	O		163	HMA22	O	
44	SYSH7	O		164	HMA23	O	
45	KONO0	O		165	HMA24	O	
46	KONO1	O	Key on data	166	VSS		(Ground)
47	KONO2	O		167	MRASN	O	RAS when DRAM(s) is connected to wave memory
48	KONO3	O		168	MCASN	O	CAS when DRAM(s) is connected to wave memory
49	VSS		(Ground)	169	MOEN	O	Wave memory output enable
50	SYSL0	I/O		170	MWEN	O	Wave memory write enable
51	SYSL1	I/O		171	VSS		(Ground)
52	SYSL2	I/O		172	LMD0	I/O	
53	SYSL3	I/O	NSYS input/LNSYS output lower 8 bits	173	LMD1	I/O	
54	SYSL4	I/O		174	LMD2	I/O	
55	SYSL5	I/O		175	LMD3	I/O	
56	SYSL6	I/O		176	LMD4	I/O	
57	SYSL7	I/O		177	LMD5	I/O	
58	KONI0	I		178	LMD6	I/O	
59	KONI1	I	Key on data input	179	LMD7	I/O	Wave memory data bus (Lower 16 bits)
60	VDD	I	(Power supply)	180	VDD		(Power supply)
61	VSS		(Ground)	181	VSS		(Ground)
62	KONI2	I		182	LMD8	I/O	
63	KONI3	I		183	LMD9	I/O	
64	DAC0	O	DAC output	184	LMD10	I/O	
65	DAC1	O		185	LMD11	I/O	
66	WCLK	O	DAC0/DAC1 word clock	186	LMD12	I/O	
67	MELO0	O		187	LMD13	I/O	
68	MELO1	O		188	LMD14	I/O	
69	MELO2	O		189	LMD15	I/O	
70	MELO3	O	MEL wave data output	190	VSS		(Ground)
71	MELO4	O		191	LMA0	O	
72	MELO5	O		192	LMA1	O	
73	MELO6	O		193	LMA2	O	
74	MELO7	O		194	LMA3	O	
75	VDD		(Power supply)	195	LMA4	O	
76	ADLR	O	ADC word clock	196	LMA5	O	
77	MELI0	I		197	LMA6	O	
78	MELI1	I		198	LMA7	O	
79	MELI2	I		199	LMA8	O	
80	MELI3	I	MEL wave data input	200	LMA9	O	
81	MELI4	I		201	LMA10	O	
82	MELI5	I		202	LMA11	O	
83	MELI6	I		203	VSS		(Ground)
84	MELI7	I		204	LMA12	O	
85	VSS		(Ground)	205	LMA13	O	Wave memory address bus (Lower data memory)
86	RCASN	O	DRAM column address strobe (RAS signal)	206	LMA14	O	
87	RA8	O		207	LMA15	O	
88	RA7	O		208	LMA16	O	
89	RA6	O		209	LMA17	O	
90	VDD		(Power supply)	210	VDD		(Power supply)
91	VSS		(Ground)	211	VSS		(Ground)
92	RA5	O	DRAM address bus	212	LMA18	O	
93	RA4	O		213	LMA19	O	
94	RA3	O		214	LMA20	O	
95	RA2	O		215	LMA21	O	
96	RA1	O		216	LMA22	O	
97	RA0	O		217	LMA23	O	
98	RRASN	O	DRAM row address strobe (RAS signal)	218	LMA24	O	
99	RWEN	O	DARM write enable	219	VSS		(Ground)
100	VSS		(Ground)	220	SYO	O	Sync. signal for master clock
101	RD7	I/O		221	SYOD	O	Sync. signal for HCLK/QCLK
102	RD6	I/O		222	QCLK	O	1/12 master clock (64Fs)
103	RD5	I/O		223	HCLK	O	1/6 master clock (128Fs)
104	RD4	I/O		224	CK256	O	1/3 master clock (256Fs)
105	RD3	I/O		225	SYSCLK	O	1/2 master clock (384Fs)
106	RD2	I/O		226	VDD		(Power supply)
107	RD1	I/O		227	SYI	I	Sync. clock
108	RD0	I/O		228	MCLKI	I	Master clock input
109	VSS		(Ground)	229	MCLKO	O	Master clock output
110	RD17	I/O		230	VDD		(Power supply)
111	RD16	I/O	DRAM data bus	231	XIN	I	Crystal osc. input
112	RD15	I/O		232	XOUT	O	Crystal osc. output
113	RD14	I/O		233	VSS		(Ground)
114	RD13	I/O		234	ICN	I	Initial clear
115	RD12	I/O		235	CHIP2	I	2 chips mode enable
116	RD11	I/O		236	SLAVE	I	Master/Slave select when 2 chips mode
117	RD10	I/O		237	TESTON	I	
118	RD9	I/O		238	ACIN	I	Test pin
119	RD8	I/O		239	DCTEST	I	
120	VDD		(Power supply)	240	VDD		(Power supply)

● **MN101C027YB** (XS711200) CPU

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	S1	I		33	S12	I	
2	S2	I		34	S13	I	Switch matrix data
3	S3	I	Switch matrix data	35	S14	I	
4	S4	I		36	TXD	O	MIDI transmit data
5	S5	I		37	S15	I	
6	VREF+	-	Power supply (+5V, analog)	38	S16	I	Switch matrix data
7	VDD	-	Power supply (+5V)	39	S17	I	
8	OSC2	O	Crystal oscillator (8MHz)	40	S18	I	
9	OSC1	I	Crystal oscillator (8MHz)	41	L16	O	
10	VSS	-	Ground	42	L17	O	
11	XI	I	Not used	43	L18	O	
12	XO	O	Not used	44	L19	O	
13	MMOD	I	Memory mode select (Grounded)	45	L8	O	
14	RD0	O	Rotary encoder data	46	L9	O	LED drive data
15	RXD	I	MIDI receive data	47	L10	O	
16	D0	O		48	L11	O	
17	D1	O		49	L12	O	
18	D2	O	LED and switch drive data	50	L13	O	
19	D3	O		51	L14	O	
20	D4	O		52	L15	O	
21	/RST	I	Reset	53	L7	O	
22	D5	O		54	L6	O	
23	D6	O		55	L5	O	
24	D7	O	LED and switch drive data	56	L4	O	LED and switch drive data
25	D8	O		57	L3	O	
26	D9	O		58	L2	O	
27	S6	I		59	L1	O	
28	S7	I		60	L0	O	
29	S8	I	Switch matrix data	61	VREF	-	Grounded
30	S9	I		62	AD0	I	Analog input
31	S10	I		63	AD1	I	Analog input
32	S11	I		64	S0	I	Switch matrix data

● **MBCG46183-129** (XV833A00) **Gate Array**

PIN NO	NAME	I/O	FUNCTION	PIN NO	NAME	I/O	FUNCTION
1	D5	I/O		25	TX31	O	Transmit Data 31
2	D6	I/O	Data Bus	26	RX32	I	Receive Data 32
3	D7	I/O		27	TX32	O	Transmit Data 32
4	/IRQ0	I/O	Interrupt Request Port 0	28	RX33	I	Receive Data 33
5	/IRQ1	I/O	Interrupt Request Port 1	29	TX33	I/O	Transmit Data 33
6	VSS	-	Ground	30	/IC	I	Initial Clear
7	/IRQ2	I/O	Interrupt Request Port 2	31	VSS	-	Ground
8	/IRQ3	I/O	Interrupt Request Port 3	32	XI	I	Quartz Crystal Input
9	/RD	I	Read Signal Input	33	VSS	-	Ground
10	/WR	I	Write Signal Input	34	XO	I/O	Quartz Crystal Output
11	/CE	I	Chip Enable Input	35	A0	I	
12	/ASTB	I	Address Strobe (Not used: to ground)	36	A1	I	
13	TESTSIO	I	Input with Pull-down Resistor (50k)	37	A2	I	Address Bus
14	RX0	I	Receive Data 0	38	A3	I	
15	TX0	O	Transmit Data 0	39	A4	I	
16	RX1	I	Receive Data 1	40	A5	I	
17	TX1	O	Transmit Data 1	41	CPUCLK	I	CPU Clock
18	VSS	-	Ground	42	VSS	-	Ground
19	VDD	-	Power Supply	43	VDD	-	Power Supply
20	RX2	I	Receive Data 2	44	D0	I/O	
21	TX2/BO2	O	Transmit Data 2	45	D1	I/O	
22	RX30	I	Receive Data 30	46	D2	I/O	Data Bus
23	TX30	O	Transmit Data 30	47	D3	I/O	
24	RX31	I	Receive Data 31	48	D4	I/O	

● **PCM1800** (XU770A00) **A/D Converter**

PIN NO.	NAME	I/O	FUNCTION	PIN NO.	NAME	I/O	FUNCTION
1	VINL	I	Analog input (L ch.)	13	LRCK	I/O	Sampling clock input/output
2	VREF1	-	Reference 1 decoupling cap.	14	BCK	I/O	Bit clock input/output
3	REFCOM	-	Reference decoupling common	15	DOUT	O	Audio data output
4	VREF2	-	Reference 2 decoupling cap.	16	SYSCK	I	System clock input
5	VINR	I	Analog input (R ch.)	17	DGND	-	Digital ground
6	RSTB	I	Reset input active “L”	18	VDD	-	Power supply +5V
7	BYPAS	I	LCF bypass control	19	CINNR	-	Anti-aliasing filter cap. (-) R ch.
8	FMT0	I	Audio data format 0	20	CINPR	-	Anti-aliasing filter cap. (+) R ch.
9	FMT1	I	Audio data format 1	21	CINNL	-	Anti-aliasing filter cap. (-) L ch.
10	MODE0	I	Master/Slave mode selection 0	22	CINPL	-	Anti-aliasing filter cap. (+) L ch.
11	MODE1	I	Master/Slave mode selection 1	23	VCC	-	Analog power supply
12	FSYNC	I/O	Frame sync. input/output	24	AGND	-	Analog ground

IC BLOCK DIAGRAM

● **TC74VHC00F**(XT229A00)
IC73
MAND

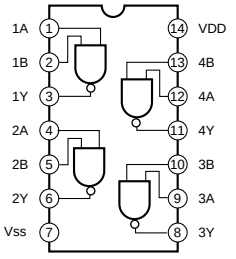

● **TC74VH04F** (XM332A00)
Inverter

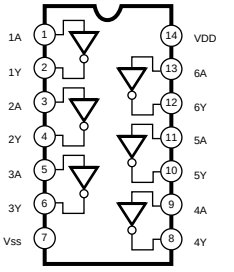

● **TC74VH32F**(XN963A00)
IC29, IC55
OR

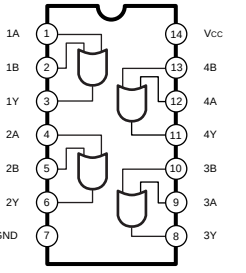

● **TC74LVC139FPEL**(XS048A00)
IC26, IC42
Demultiplexer

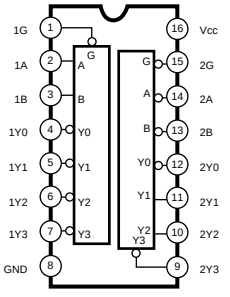

● **TC74VHC157FF**(XN966A00)
IC103
Multiplexer

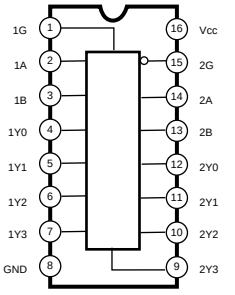

● **TC74VHC244F**(XN969A00)
IC51
Bus Buffer

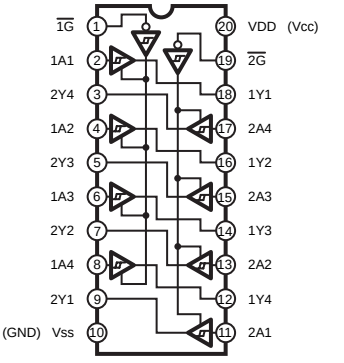

● **TC74VHC245F**(XT487A00)
IC11
Trabsceiver

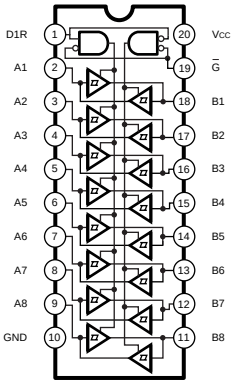

● **TC74VHC273F**(XN971A00)IC52
SN74HC273NSR(XH223A00)
IC27, IC28
D-FF

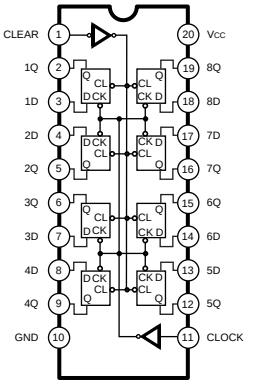

● **TC7S66FF**(XR682A00)
IC30
Analog Switch

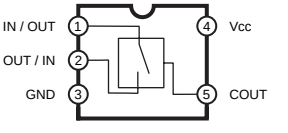

● **M5M34051FP**(XV103A00)
IC12
Line Transceiver

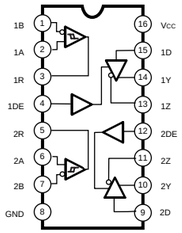

● **NJM4556AMT1**(XQ138A00)
IC23
Operation Amplifier

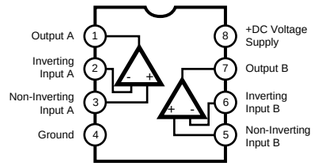

● **NJM4556AD** (XQ824A00)
● **μPC4570G2** (XF291A00)
● **μPC4570C** (XC520A00)
IC62,IC65,IC73
Dual Operational Amplifier

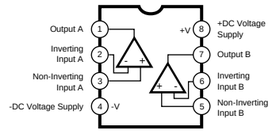

● **DS90C402M** (XW357A00)
IC102
Line Receiver

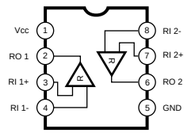

● **SC7SU04FEL** (XI348A00)
IC21
Inverter



● **TC74VHCT245AF**(XV242A00)
● **TC74VHCT245AFT**(XT744A00)
● **SN74HC245NSR**(XD838A00)
IC31
Buffer
Octo1 3-state Bus Transceiver

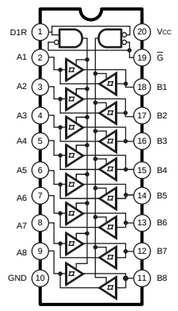

● **TC74HC14AF-TP1** (XD657A00)
IC8,IC17,IC20,IC22,IC32,IC100
Hex Inverter

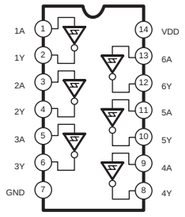

● **TC74HC74AF** (XP003A00)
IC18,IC19
Dual D-Type Flip-Flop

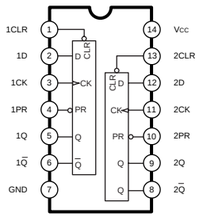

INPUTS				OUTPUTS	
PR	CLR	CLK	D	Q	Q
L	H	×	×	H	L
H	L	×	×	L	H
L	L	×	×	H	H
H	H	↑	H	H	L
H	H	↑	L	L	H
H	H	L	×	Q_0	Q_0

● **TC7W32FU(TE12L)** (XQ173A00)
IC75
OR

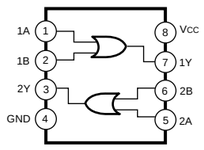

● **TC74HC4052AF** (XS790A00)
IC13,IC14,IC15,IC16
Multiplexer

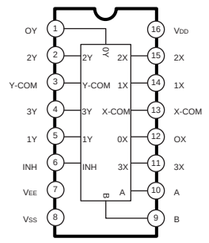

• SV Circuit Board

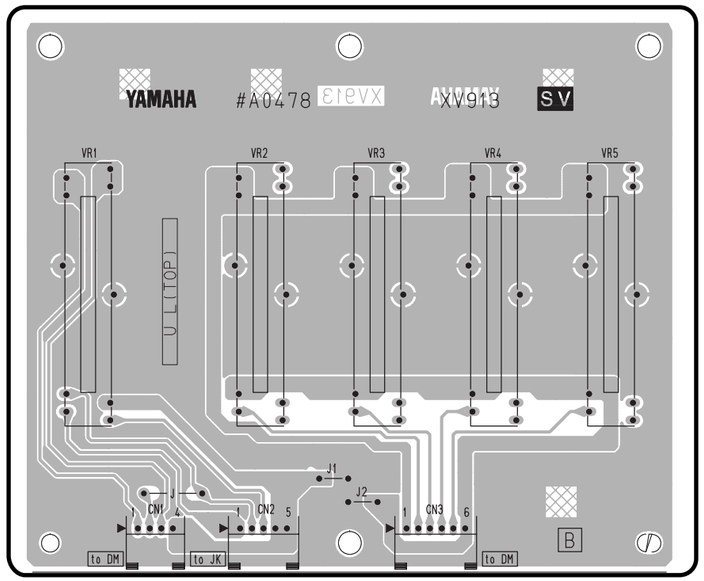

CN1: to DM-CN19 CN2: to JK-CN1 CN3: to DM-CN7

Component side

• PC Circuit Board

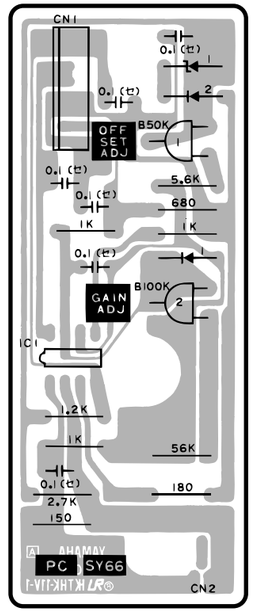

Component side

• SM Circuit Board

CN1: to DM-CN22

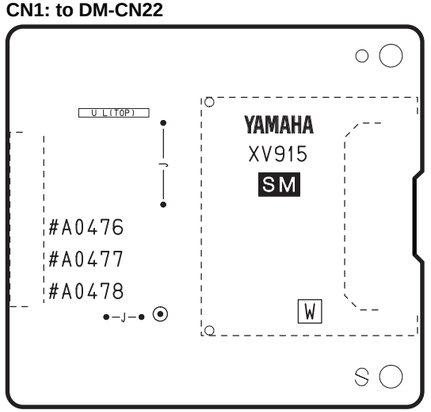

Component side

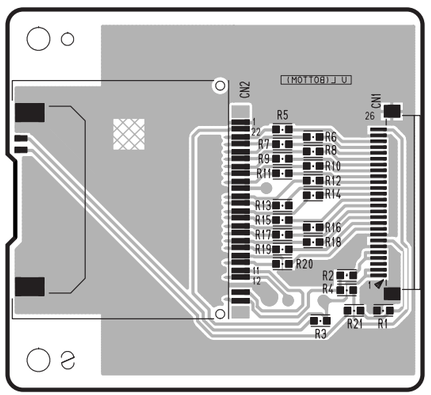

Pattern side

SV: 2NA-V357680
SM: 2NA-V357710 △1

■ TEST PROGRAM

Test No.	Test Item	Test Conditions, Judgment Criteria, etc.
T1	RAM READ/WRITE	OK/NG, (MAIN SRAM/WAVE DRAM)
T2	RAM BATTERY	OK/NG, 2.7V or more, Less than 3.5V
T3	WAVE ROM	OK/NG
T4	LCD	ON/OFF blinking alternately
T5	PANEL SWITCH/LED	OK/NG
T6	ENCODER	OK; 0 to +127(0) to -127
T7	KEYBOARD	OK, KEY CODE/KEY TOUCH
T8	KNOB A-2	OK/NG, 64-127-0-64
T9	SLIDER 1-4	OK/NG, 0-127-0
T12	CONTROLLER	OK/NG, 64-127-0-64 (PB), 0-127-0 (MW), 0-107-0 (AT)
T13	FOOT CONTROL SWITCH	OK, 0-127-0
T14	BREATH CONTROLLER	OK/NG, 127-0-127
T15	CARD	OK/NG
T16	MIDI IN/OUT/THRU	OK/NG THRU Confirmation
T17	HOST SELECT	OK/NG
T18	TO HOST	OK/NG
T19	1 kHz OUTPUT L	OUTPUT(L): +6.0 ± 2 dBm; OUTPUT(R): Less than -72.0 dBm (10 kohm load) INDIV(1): +6.0 ± 2 dBm; INDIV(2): Less than-72.0 dBm (10 kohm load) PHONES(L): +5.0 ± 2 dBm; PHONES(R): Less than -64.0 dBm (33 ohm load)
T20	1 kHz OUTPUT R	OUTPUT(L): Less than -72.0 dBm (10 kohm load); OUTPUT(R): +6.0 ± 2 dBm INDIV(1): Less than -72.0 dBm (10 kohm load); INDIV(2): +6.0 ± 2 dBm PHONES(L): Less than -64.0 dBm (33 ohm load); PHONES(R): +5.0 ± 2 dBm
T21	A/D LEVEL, JACK	OK
T22	A/D -> D/A	OUTPUT (L, R): +15.0 ± 2 dBm (Line) (10 kohm)
T23	PLUG- IN1	OUTPUT (L, R): +11.5 ± 2 dBm (10 kohm)
T24	PLUG- IN2	OUTPUT (L, R): +11.5 ± 2 dBm (10 kohm)
T25	mLAN	OK/NG
T26	FACTORY SET	OK/NG Initialized state
T27	SWP CH	1 kHz, sine wave
T28	EXIT (NOISE LEVEL)	OUTPUT (L, R): Less than -82.0 dBm (10 kohm load) PHONES (L, R): Less than -85.0 dBm (33 ohm load)

Measuring instruments: frequency counter, oscilloscope, AC voltmeter (JIS-C curve type), distortion meter (with flat filter), keyboard amplifier, etc.

Jigs: MIDI cable, specially designed expansion board, etc.

A. HOW TO ENTER THE TEST PROGRAM

While pressing the [VOICE], [PERFORM] and [STORE] switches, turn on the [POWER ON/OFF] switch. The following message will then appear.

```
[EDIT]:AUTO [JOB ]:MANUAL    [EXIT]:Exit
TEST 478) IntV#.## ExtV#.##  [CARD]:F.SET
```

In this state, pressing the [EXIT] switch will cancel the test mode and restore the normal state.

B. PROCEEDING THROUGH THE TEST PROGRAM

AUTO MODE:
When the test program is started, the following display will appear.

```
01: RAM R/W                  [EXIT]:Exit
TEST 478) IntV#.## ExtV#.##   AUTO MODE
```

Select the test number using the [DEC/NO] and [INC/YES] switches.
Press the [ENTER] switch to execute the tests one after another starting from the currently selected number.
If the test result is "OK", the next test will be selected and executed sequentially.
If an error occurs, an error message will appear and the test will be discontinued.
After pressing the [EXIT] switch, choose an appropriate measure to deal with the error by using the [ENTER], [INC/YES] or [EXIT] switch.
Pressing the [ENTER] switch, will automatically execute the test from where the error occurred.
Pressing the [INC/YES] switch, the test will automatically restart at the test following the one where the error occurred.
Pressing the [EXIT] switch, will execute "T28 EXIT" and the testing will come to an end.

MANUAL MODE:
When the test program is started, the following display will appear.

```
01: RAM R/W                  [EXIT]:Exit
TEST 478) IntV#.## ExtV#.##   MANUAL MODE
```

Select the test number using the [DEC/NO] and [INC/YES] switches.
Press the [ENTER] switch to execute the currently selected test.
After the test, press the [EXIT] switch to set to standby mode.
When the [EXIT] switch is pressed again, "T28 EXIT" will be executed.

C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED

When the test result has been judged as "NG" in each of the following tests, choose whether to execute the same test or to proceed to the next test.

AUTO MODE:
Press the [EXIT] switch to set to the error processing state.
MANUAL MODE:
Press the [EXIT] switch to set to the next test number.
This procedure, however, is not applicable to the "T5 PANEL SWITCH" test.

T1. RAM READ/WRITE

```
01: RAM R/W
```

This test is used to check the write/read/verify functions of the main CPU SRAM.

DISPLAY OF RESULTS

OK

```
01: RAM R/W                SRAM          OK
```

NG

```
01: RAM R/W                SRAM          NG
                             NG
```

TEST END

The test ends after the result is displayed.

OTHER

All RAM data are stored in the memory.

T2. RAM BATTERY

```
02: RAM Battery
```

This test checks if the RAM backup battery voltage is within the range of 2.7 V to 3.5 V.

DISPLAY OF RESULTS

OK

```
02: RAM Battery                          OK
```

OK

```
02: RAM Battery                          OK
```

OK

```
02: RAM Battery                    High NG
                                     #.#V
```

TEST END

The test ends after the result is displayed.

T3. WAVE ROM

```
03: Wave ROM
```

This test compares each wave ROM data.

DISPLAY OF RESULTS

OK

```
03: Wave ROM  IC45 IC43 IC46 IC44      OK
                OK   OK   OK   OK
```

NG

```
03: Wave ROM  IC45 IC43 IC46 IC44      NG
                OK   OK   NG   OK
```

If any IC is NG, the test result will be NG.

TEST END

The test ends after the result is displayed.

T4. LCD

```
04: LCD Blink
```

This test is used to check that all dots on the LCD blink on and off alternately at approximately 1 second intervals and that the back light of the LCD lights up.

TEST END

AUTO MODE:
Press the [+1] switch to end the test and proceed to the next test.
MANUAL MODE:
Press the [EXIT] switch to end the test, the initial display will appear and the next test number will be set.

T5. PANEL SWITCH/LED

```
05: Panel Switch/LED
```

This test checks that all switches function properly when the panel switches are turned on and off according to the instructions displayed. If the switch is connected to the LED, it also checks that the corresponding LED lights up.

```
05: Panel Switch/LED
Push   [xxxxxxxx]
```

xxxxxxxx: SWITCH NAME

If the test result is satisfactory, the sine wave is output while the switch is on and the test will proceed to checking the next switch.
If the wrong switch is pressed, "NG" will appear and no sine wave will be output.

If the correct switch is pressed after that, testing will proceed to the next switch.
If the test results for all switches are satisfactory, "OK" will appear.
The switches are checked in the following order.
[VOICE]>[PERFORM]>[STORE]>[UTILITY]>[CARD]>[SEQ]>[EDIT]>[JOB]>[PLAY/STP]>[SHIFT]>[EF.BYPS]>[MASTER]>[EXIT].[ENTER]>[DEC/NO]>[INC/YES]>[PRE1]>[PRE2]>[INT]>[EXT]>[PLG1]>[PLG2]>[Q.ACCESS]>[A]>[B]>[C]>[D]>[E]>[F]>[G]>[H]>[1]>[2]>[3]>[4]>[5]>[6]>[7]>[8]>[9]>[10]>[11]>[12]>[13]>[14]>[15]>[16]

DISPLAY OF RESULTS

OK

```
05: Panel Switch/LED                   OK
```

NG

```
05: Panel Switch/LED                   NG
Push   [xxxxxxxx]
```

TEST END

If the test results of all switches are satisfactory, "OK" will appear and testing will end.

T6. ENCODER

```
06: Encoder
```

While turning the JOG first clockwise and then counterclockwise (-32), according to the LCD instruction as shown below, check that the number increases and decreases sequentially and that "OK" appears as the result.

```
06: Encoder     Page:yyyy Data:yyyy
                          xxxx      xxxx
```

yyyy: target value ("OK" appears after checking.)

xxxx: current value

DISPLAY OF RESULTS

OK

```
06: Encoder     Page:OK   Data:OK      OK
                          xxxx      xxxx
```

NG (No change in the message on the display)

TEST END

The test ends after the result is displayed.
When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T7. KEYBOARD

```
07: Keyboard
```

This test is used to check that the keyboard functions properly by scaling 88 keys from A1 to C7.

```
07: Keyboard
Push C 1                    Velocity =xxxx
```

(The above shows the C1 check.)

x x x x: velocity value of the key being pressed

When the key on the LCD display works at a velocity of 0X10 to 0X6F, it is considered normal and that keys note is output. The test will then proceed to the next key test. If a wrong key is played, "NG" will appear and that note's sound will not be output. If a correct key is played after that, however, the test will proceed to the next key test. If the test results of all the keys are satisfactory, "OK" will appear on the LCD display.

DISPLAY OF RESULTS

OK

```
07: Keyboard                                OK
Push C 1                    Velocity =xxx
```

NG

```
07: Keyboard                                NG
Push C 1                    Velocity =xxx
```

TEST END

If the test results of all the keys are satisfactory, "OK" will appear and testing will end.

When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T8. A. KNOB A-2

```
08: KnobA-2
```

Move each knob gradually in the following order: Center 64 (63-65); Left 127 (126-127); Right 0 (0-1); Center 64 (63-65), according to the instruction on the LCD as shown below. Check that the numbers change sequentially and that "OK" appears as the result.
Begin the check from the specified knob. The mark [>] will appear to the left of the value of the knob being checked.

```
08: KnobA-2    >A  >B  >C  >1  >2       yyy
               >yyy yyy>yyy yyy yyy
```

x x x: current knob value

y y y: next target value

DISPLAY OF RESULTS

OK

```
08: KnobA-2    >A  >B  >C  >1  >2        OK
                OK  OK  OK  OK  OK
```

NG (No change in the message on the display)

TEST END

The test ends after the results have been displayed.
When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T9. SLIDER 1-4

```
09: Slider1-4
```

Move each slider in the following order: Down 0 (0-1); Up 127 (126-127); Down 0 (0-1), according to the instruction on the LCD. Check that the numbers change sequentially and that "OK" appears as the result.
Begin the check from the specified slider. The mark [>] will appear to the left of the value of the slider being checked.

```
09: Slider1-4     CS1 CS2 CS3 CS4       yyy
                  xxx xxx>xxx xxx
```

x x x: current slider value

y y y: next target value

DISPLAY OF RESULTS

OK

```
09: Slider1-4     CS1 CS2 CS3 CS4        OK
                   OK  OK  OK  OK
```

NG (No change in the message on the display)

TEST END

The test ends after the result is displayed.
When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T12. CONTROLLER

```
12: Controller
```

x x x: current knob value

Move the PITCH BENDER, MODULATION WHEEL, RIBBON and AFTER TOUCH controllers according to the instructions on the LCD as described below. Check that the numbers change sequentially and that "OK" appears as the result.

PITCH BENDER: move this controller in the following order: Center (63-65); Up (126-127); Down (0-1); Center (63-65).

RIBBON: move this controller in the following order: Left (6-11); Right (103-108); Left(6-11); and then release it at (122-127).

MODULATION WHEEL: move this controller in the following order: Right (0-1); Up (126-127); Down (0-1).

AFTER TOUCH: operate this controller in the following order: Release (0-5); Push (104-109); and Release (0-5).

```
12: Controller          PB   MW> RB   AT   yyy
                       >xxx  xxx  xxx  xxx
```

x x x: current controller value
y y y: next target value

DISPLAY OF RESULTS

OK

```
12: Controller          PB   MW> RB   AT    OK
                       xxx  xxx  xxx  xxx
```

NG (No change in the message on the display)

TEST END

The test ends after the result is displayed.
When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T13. FOOT CONT, SW

```
13: Foot Cont, SW
```

Operate the FOOT VOLUME, FOOT CONTROLLER, SUSTAIN SWITCH and FOOT SWITCH according to the instruction on the LCD as described below. Check that the numbers change and that "OK" appears as the result.

Release 0 (0-2); Push In 127 (125-127); and Release 0 (0-2).
Turn On (0) and Off (1) the SUSTAIN SWITCH and FOOT SWITCH.
FOOT VOLUME: Release (0-2); Push In (125-127); Release (0-2)
FOOT CONTROLLER: same as the above
SUSTAIN SWITCH: On (0); Off (1)
FOOT SWITCH: same as the above

```
13: Foot Cont, SW       FV   FC  SUS   FS     0
                       xxx  xxx    x    x
```

x x x: current controller value
y y y: next target value

DISPLAY OF RESULTS

OK

```
13: Foot Cont, SW       FV   FC  SUS   FS    OK
                       OK   OK   OK   OK
```

NG (No change in the message on the display)

TEST END

The test ends after the result is displayed.
When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T14. BREATH CONTROLLER

```
14: Breath Controller
```

x x x: current value of the breath controller

Operate the breath controller in the following order: Not blowing (122-127) - Blowing (0-5) - Not blowing (122-127) - Not blowing - Blowing - Not blowing, remove the jack when "EXTRACT PLUG!" appears on the LCD. At this time, check that the plug is not plugged in, the numbers change sequentially and that "OK" appears on the LCD. (The test is "OK" when the value is 34 or less.)

```
14: Breath Controller                    yyy
                                         xxx
```

x x x: current controller value
y y y: next target value

DISPLAY OF RESULTS

OK



NG (No change in the message on the display)

TEST END

The test ends after the result is displayed.
When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T15. CARD



Load SMART MEDIA, with its protect function turned off, and then execute the test.
If SMART MEDIA is loaded with its protect function turned on the WRPRT error message will appear.

Perform the FORMAT/WRITE/READ/VERIFY check on SMART MEDIA and check that "OK" appears as the result.
Unload SMART MEDIA and check that "NO-CARD" appears on the LCD.

DISPLAY OF RESULTS

OK



NG



xxxxxxx: Error code

ERROR CODE
RD/WR: read/write error
NO-CARD: no card loaded
WRPRT: write protect

TEST END

The test ends after the result is displayed.
When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T16. MIDI IN/OUT/THRU



Connect a MIDI cable to MID IN and OUT, and then begin testing.
If the IN and OUT check results are "OK", connect the MIDI monitor with THRU and check that the test pattern (AA・FF・00・55) is output.

DISPLAY OF THE RESULTS

OK



NG



(When different data has been received)

NG



(When reception is not completed within the specified time)

TEST END

The test ends after the result is displayed.
When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T17. HOST SELECT



Move the HOST SELECT switch according to the instructions on the LCD, and check that "OK" appears as the result.



When the switch activates properly, a sine wave will be output.
If the switch is initially at the MIDI position, move it to any other position and then return it to the MIDI position.

DISPLAY OF RESULTS

OK



NG (No change in the message on the display)

TEST END

When the test results of all switches are satisfactory, "OK" will appear on the LCD and the testing will end.
When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T18. TO HOST

```
18: To Host
```

Connect pin No.3 to pin No.5, and connect pin No.6 to No.8, and then execute testing.
Operate the HOST SELECT switch according to the instruction on the LCD and check that "OK" appears when [MIDI] is reached at the end.
When the HOST SELECT switch is set to the MIDI position, the "SET HOST Sw [MAC]" message will appear. Next set the HOST SELECT switch of the main unit to MAC to begin testing.

DISPLAY OF RESULTS

OK

```
18: To Host                    OK
```

NG

```
18: To Host                    NG
```

(When unexpected data is received)

NG

```
18: To Host                    NG
                           TIMEOUT
```

(When reception is not completed within the specified time)

TEST END

The test ends after the result is displayed.
When the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T19. 1kHz OUTPUT-L

```
19: PCM SIN 1kHz L
```

Insert plugs into OUTPUT-L, OUTPUT-R, INDIV-1, INDIV-2, PHONES (L), and PHONES (R), and then connect the frequency counter, oscilloscope and AC voltmeter (with a JIS-C filter).
Set the master volume to Max and check that the following signals are output from OUTPUT-L, INDIV-1 and 2, and PHONES (L).

OUTPUT-L: 1 kHz ±1.5 Hz, sine wave, +6.0 ±2 dBm (10k ohm load)
OUTPUT-R: -72 dBm or less (10 kohm load)
INDIV-1: 1 kHz ±1.5 Hz, sine wave, +6.0 ±2 dBm (10 kohm load)
INDIV-2: -72 dBm or less (10 kohm load)
PHONES (L): 1 kHz, sine wave, +5.0 ± 2 dBm (33 ohm load)
PHONES (R): -64 dBm or less (33 ohm load)
While sound is being output, the following message appears on the LCD.

```
19: PCM SIN 1kHz L             ON
```

DISPLAY OF RESULTS

TEST END

AUTO: when the [INC] switch is pressed, the sound output will stop and the next test will be executed.
MANUAL: when the [EXIT] switch is pressed, testing will end, the initial display will be restored and the next test number will be set.

T20. 1kHz OUTPUT-R

```
20: PCM SIN 1kHz R
```

Insert plugs into OUTPUT-L, OUTPUT-R, PHONES (L), and PHONES (R), and then connect the oscilloscope and AC voltmeter (with a JIS-C filter).
Set the master volume to the Max position.
Check that signals are output at OUTPUT-L, OUTPUT-R, PHONES (L), and PHONES (R) as described below. At this time, signals are output at MEL for mLAN as well.

OUTPUT-L: -72 dBm or less (10k ohm load)
OUTPUT-R: 1 KHZ ±1.5 Hz, sine wave, +6.0 ±2 dBm (10k ohm load)
INDIV-1: -72 dBm or less (10k ohm load)
INDIV-2: 1 kHz ±1.5 Hz, sine wave, +6.0 ±2 dBm (10k ohm load)
PHONES (L): -64 dBm or less (33 ohm load)
PHONES (R): 1 kHz, sine wave, +5.0 ±2 dBm (33 ohm load)
While sound is output, the following message appears on the LCD.

```
20: PCM SIN 1kHz R             ON
```

DISPLAY OF RESULTS

TEST END

AUTO: when the [INC] switch is pressed, the sound output will stop and the next test will be executed.
MANUAL: when the [EXIT] switch is pressed, testing will end, the initial display will be restored and the next test number will be set.

T21. A-D LEVEL, JACK

```
21: A/D Level
```

Set the A/D GAIN volume to the maximum level.
Input a 1 kHz sine wave of the following level through the A/D input port according to the instructions on the LCD.
MIC: -40 dBm ±0 dBm LINE: -6 dBm ±0 dBm

When a plug is connected to the jack, both "EXTRACT PLUG" appears and the A/D level appear.

When a plug is not connected and the level is 2 or lower, "INSERT PLUG" appears and when a plug is inserted, the A/D level will be indicated.
"OK" will appear when the AD level is within the following range.
MIC: 75 or greater and 85 or less
LINE: 75 or greater and 85 or less
When MIC is OK, the LINE check will be executed automatically.



xxx, yyy display

DISPLAY OF RESULTS

OK



NG



TEST END

When the [EXIT] switch is pressed, the sound output will stop and the next test number will be set.
For the procedure to take when the test result is "NG", refer to "C. TEST SELECTION WHEN AN ERROR HAS BEEN DETECTED".

T22. A/D -> D/A



This test is used to check the signal passage from the A/D input to the D/A output.
(GAIN is set to LINE 1 in the initial settings.)
Input a 1 kHz ±5 Hz, -6.0 dBm ±0 dBm sine wave signal to each signal passage through the A/D input in the order described below. Check that the output level specified below is obtained at the output L and R respectively.
Set the A/D INPUT VOLUME knob to the Max position.



LINE 1, LINE 2, MIC 1 and MIC 2 can be selected by using [DEC] and [INC].
With LINE 1, GAIN = LINE applies and the signal input through the A/D will be output at the D/A as is.
With LINE 2, GAIN = LINE applies and the level of the signal input through the A/D will be lowered to the specification of the main unit (-12dB) and then output at the D/A.
With MIC 1, GAIN = MIC applies and the signal input through the A/D will be output at the D/A as is.
With MIC 2, GAIN = MIC applies and the level of the signal input through the A/D will be lowered to the specification of the main unit (-12dB) and then output at the D/A.

When GAIN = Line 1, move the A/D INPUT VOLUME knob and check that the sound volume varies.

OUTPUT-L: 1 kHz ±5 Hz, sine wave, +15.0 ±2 dBm (10k ohm load) (Distortion: 1.00% or less)
OUTPUT-R: 1 kHz ±5 Hz, sine wave, +15.0 ±2 dBm (10k ohm load) (Distortion: 1.00% or less)

TEST END

When the [EXIT] switch is pressed, the sound output will stop and the next test number will be set.

T23. PLUG-IN1
T24. PLUG-IN2



Connect the HARMONY PLUG-ON boarding into the PLUG-IN 1 slot.
After checking the connection of the PLG-IN 1 slot, the signal transmission and reception of the CONTROL LINE, and the IN/OUT of the MIDI LINE and MEL LINE, check to ensure that the output level specified below is obtained at output L and R respectively.
Set the MASTER VOLUME knob to the Max position.

OUTPUT-L: 1 kHz ±5 Hz, sine wave, +11.5 ±2 dBm (10k ohm load) (Distortion: 1.50% or less)
OUTPUT-R: 1 kHz ±5 Hz, sine wave, +11.5 ±2 dBm (10k ohm load) (Distortion: 1.50% or less)

DISPLAY OF RESULTS

OK (No change in the message on display)

NG



xxxxxxx: Error code

Error code
NG-BOARD: a board other than the VH board is loaded.
NO-BOARD: board is not loaded.
CONTROL: CONTROL line failure

TEST END

When the [EXIT] switch is pressed, the sound output will stop and the next test number will be set.

T25. mLAN

```
25: mLAN
```

Connect the mLAN board to the mLAN slot and execute testing.
After checking the connection of the mLAN board, the signal transmission and reception of the MIDI line, the RESET request signal, and the operation of OUT + SWP30 of the MEL line by the external clock, check that "OK" appears. Also, confirm that a 900 Hz sine wave output is obtained as the final signal at OUTPUT L and R.

DISPLAY OF RESULTS

OK
```
25: mLAN                    OK
```

NG
```
25: mLAN                    NG
                        xxxxxxxx
```
xxxxxxx: Error code

Error code
NO-BOARD: board is not loaded.
RESET: errror in the reset request signal check
MIDI: MIDI line failure
MEL: MEL OUT line failure

TEST END

When the [EXIT] switch is pressed, the sound output will stop and the next test number will be set.

T26. FACTORY SET

```
26: Factory Set
```

This test is used to restore the factory settings.
When the test is executed, the following message will appear on the LCD.

```
26: Factory Set
     [NO] or [YES] ?
```
Pressing [YES] will restore the factory settings.
Pressing [NO] will not restore the factory settings.

When the test ends properly, the sine wave sound is output momentarily.

DISPLAY OF RESULTS

When the factory settings are restored
OK
```
26: Factory Set             OK
```

When the factory settings are not restored
NG
```
26: Factory Set             NO SET
```

TEST END

The test ends after the result is displayed.

FACTORY SETTING DATA

After the factory settings are restored, the following data will be set.

T27. SWP Ch

```
27: SWP Ch
```

From OUTPUT-L, the sound output is repeated until the EXIT switch is pressed via the SWP64Ch on the Master side to the L channel and via the SWP64Ch on the Slave side to the R channel.
Connect the plugs to OUTPUT-L and R. Observe the output waveform using the oscilloscope to check that the level of all channels is within the below specified range.
Set the master volume to the Max position.

OUTPUT-L: 1 kHz ±1.5 Hz, sine wave
OUTPUT-R: 2 kHz ±1.5 Hz, sine wave
Also, the following message appears on the LCD during sound output.

```
27: SWP Ch        Mode          Chxxx
                    64
```
xxx: Sound outputting channel no.
Either 64 or 128 can be selected for the mode.

TEST END

AUTO: when the [EXIT] switch is pressed,the sound output will stop.
MANUAL: when the [EXIT] switch is pressed,the sound output will stop and the mode select standby state will be set. When the EXIT switch is pressed twice more, testing will end.

T28. EXIT

```
28: Exit
```

When testing is executed, the following message will appear on the LCD.

```
28: Exit
     [NO] or [YES] ?
```

When [YES] is pressed, testing will end.
When [NO] is pressed, the entry screen for the AUTO and MANUAL modes will be restored.

D. OTHERS

When the test mode is cancelled, the same sequence that occurred when turning on the power will be executed.
Check that the on/off clicking noises of the main unit power switch is as described below.

OUTPUT-L, R: Less than 500 mV
INDIV-1, 2: Less than 500 mV
PHONES-L, R: Less than 500 mV
Also, with testing cancelled check the noise level when the voice play mode is set according to the factory settings and no note has been played to confirm that it satisfies the following conditions.
Take measurements with the voltmeter (with JIS-C filter) connected.
OUTPUT-L: Less than -82 dBm (10k ohm load)
OUTPUT-R: Less than -82 dBm (10k ohm load)
INDIV-1: Less than -82 dBm (10k ohm load)
INDIV-2: Less than -82 dBm (10k ohm load)
PHONES-L: Less than -82 dBm (33k ohm load)
PHONES-R: Less than -82 dBm (33k ohm load)

E. Short-cut Functions

(1) Turn on the power while pressing [PRE1] and [PRE2], and forced initialization will be executed.

```
FACTORY SET)
  <<          Executing          >>
```

(2) Turn on the power while pressing [INT] and [EXT], the version will then appear and the operating power will be restored about 5 seconds later.

```
>>>> VERSION = Int:#.## , ExtV#.## <<<<
```

(3) Turn on the power while pressing [EXIT] and [ENTER], and the system program will be loaded from SMART MEDIA and the operating power will be restored.

```
PROGRAM LOAD)
  <<          Executing          >>
```

(4) Turn on the power while pressing [DEC] and [INC], and the wave data will be loaded from SMART MEDIA, and the operating power will be restored.

```
WAVE LOAD)
  <<          Executing          >>
```

MIDI DATA FORMAT

Many MIDI messages listed in the MIDI Data Format section are expressed in hexadecimal or binary numbers. Hexadecimal numbers may include the letter “H” as a suffix. The letter “n” indicates a certain whole number.
The chart below lists the corresponding decimal number for each hexadecimal/binary number.

Decimal	Hexadecimal	Binary
0	00	0000 0000
1	01	0000 0001
2	02	0000 0010
3	03	0000 0011
4	04	0000 0100
5	05	0000 0101
6	06	0000 0110
7	07	0000 0111
8	08	0000 1000
9	09	0000 1001
10	0A	0000 1010
11	0B	0000 1011
12	0C	0000 1100
13	0D	0000 1101
14	0E	0000 1110
15	0F	0000 1111
16	10	0001 0000
17	11	0001 0001
18	12	0001 0010
19	13	0001 0011
20	14	0001 0100
21	15	0001 0101
22	16	0001 0110
23	17	0001 0111
24	18	0001 1000
25	19	0001 1001
26	1A	0001 1010
27	1B	0001 1011
28	1C	0001 1100
29	1D	0001 1101
30	1E	0001 1110
31	1F	0001 1111
32	20	0010 0000
33	21	0010 0001
34	22	0010 0010
35	23	0010 0011
36	24	0010 0100
37	25	0010 0101
38	26	0010 0110
39	27	0010 0111
40	28	0010 1000
41	29	0010 1001
42	2A	0010 1010
43	2B	0010 1011
44	2C	0010 1100
45	2D	0010 1101
46	2E	0010 1110
47	2F	0010 1111
48	30	0011 0000
49	31	0011 0001
50	32	0011 0010
51	33	0011 0011
52	34	0011 0100
53	35	0011 0101
54	36	0011 0110
55	37	0011 0111
56	38	0011 1000
57	39	0011 1001
58	3A	0011 1010
59	3B	0011 1011
60	3C	0011 1100
61	3D	0011 1101
62	3E	0011 1110
63	3F	0011 1111

Decimal	Hexadecimal	Binary
64	40	0100 0000
65	41	0100 0001
66	42	0100 0010
67	43	0100 0011
68	44	0100 0100
69	45	0100 0101
70	46	0100 0110
71	47	0100 0111
72	48	0100 1000
73	49	0100 1001
74	4A	0100 1010
75	4B	0100 1011
76	4C	0100 1100
77	4D	0100 1101
78	4E	0100 1110
79	4F	0100 1111
80	50	0101 0000
81	51	0101 0001
82	52	0101 0010
83	53	0101 0011
84	54	0101 0100
85	55	0101 0101
86	56	0101 0110
87	57	0101 0111
88	58	0101 1000
89	59	0101 1001
90	5A	0101 1010
91	5B	0101 1011
92	5C	0101 1100
93	5D	0101 1101
94	5E	0101 1110
95	5F	0101 1111
96	60	0110 0000
97	61	0110 0001
98	62	0110 0010
99	63	0110 0011
100	64	0110 0100
101	65	0110 0101
102	66	0110 0110
103	67	0110 0111
104	68	0110 1000
105	69	0110 1001
106	6A	0110 1010
107	6B	0110 1011
108	6C	0110 1100
109	6D	0110 1101
110	6E	0110 1110
111	6F	0110 1111
112	70	0111 0000
113	71	0111 0001
114	72	0111 0010
115	73	0111 0011
116	74	0111 0100
117	75	0111 0101
118	76	0111 0110
119	77	0111 0111
120	78	0111 1000
121	79	0111 1001
122	7A	0111 1010
123	7B	0111 1011
124	7C	0111 1100
125	7D	0111 1101
126	7E	0111 1110
127	7F	0111 1111

Additional Notes

For example, 144 - 159(Decimal)/9nH/1001 0000 - 1001 1111(Binary) indicate the note-on messages for the channels 1 through 16 respectively. 176 - 191/BnH/1011 0000 - 1011 1111 indicate the control change messages for the channels 1 through 16 respectively. 192 - 207/CnH/1100 0000 - 1100 1111 indicate the program change messages for the channels 1 through 16 respectively. 240/F0H/1111 0000 is positioned at the beginning of data to indicate a system exclusive message. 247/F7H/1111 0111 is positioned at the end of the system exclusive message.

aaH(Hexadecimal)/0aaaaaaa(Binary) indicates the data addresses. The data address consists of High, Mid and Low.

bbH/0bbbbbbb indicates byte counts.

ccH/0ccccccc indicates tcheck sums.

ddH/0ddddddd indicates data/value.

SYNTHESIZER/SEQUENCER PART

1) TRANSMIT FLOW

```
MIDI <-[SW1]-+---  NOTE ON/OFF            9nH
   OUT |     |
       |     +--- CONTROL CHANGE
       |     |      MODULATION             BnH,01H
       |     |      PORTAMENTO TIME        BnH,05H                 (CS6x only)
       |     |      PAN                    BnH,0AH                 (CS6x only)
       |     |      SUSTAIN SWITCH         BnH,40H
       |     |      PORTAMENTO SWITCH      BnH,41H                 (CS6x only)
       |     |      FILTER RESONANCE       BnH,47H                 (CS6x only)
       |     |      EG RELEASE TIME        BnH,48H                 (CS6x only)
       |     |      EG ATTACK TIME         BnH,49H                 (CS6x only)
       |     |      FILTER CUTOFF FREQ     BnH,4AH                 (CS6x only)
       |     |      EG DECAY TIME          BnH,4BH                 (CS6x only)
       |     |      REVERB SEND            BnH,5BH                 (CS6x only)
       |     |      CHORUS SEND            BnH,5DH                 (CS6x only)
       |     |      ASSIGNABLE CONTROLLER BnH,(00H .. 5FH)
       |     |      FOOT VOLUME            BnH,(07H or 0BH)
       |     |
       |     +-[SW8]--BANK SEL MSB         BnH,00H
       |     |        BANK SEL LSB         BnH,20H
       |     |
       |     |-[SW2]--EG SUSTAIN LEVEL     BnH,1FH                 (CS6x only)
       |     |
       |     +--- PROGRAM CHANGE           CnH
       |     |
       |     +--- CHANNEL AFTER TOUCH      DnH
       |     |
       |     +--- PITCH BEND CHANGE        EnH
       |
       |-[SW3,4]--SYSTEM REALTIME MESSAGE
       |            TIMING CLOCK           F8H
       |
       |-[SW4]---- SYSTEM REALTIME MESSAGE
       |            START                  FAH
       |            CONTINUE               FBH
       |            STOP                   FCH
       |
       |
      +[SW5]-+--- SYSTEM EXCLUSIVE MESSAGE
       |     |
       |     |-[SW6]-SAMPLE DUMP STANDARD
       |     |       DUMP REQUEST          F0H 7EH nnH 03H ssH ssH F7H
       |     |       ACK                   F0H 7EH nnH 7FH ppH F7H
       |     |       NAK                   F0H 7EH nnH 7EH ppH F7H
       |     |       CANCEL                F0H 7EH nnH 7DH ppH F7H
       |     |       WAIT                  F0H 7EH nnH 7CH ppH F7H
       |     |
       |     |-[SW7]-<BULK DUMP>           F0H 43H 0nH 64H bhH blH ahH amH alH ddH....ddH ccH F7H
       |     |
       |     |-[SW7]-<PARAMETER CHANGE>    F0H 43H 1nH 64H ahH amH alH ddH.....ddH F7H
       |
       |---------- SYSTEM EXCLUSIVE MESSAGE
       |            IDENTITY REPLY         F0H 7EH 7FH 06H 02H 43H 00H 41H 2DH 02H 00H 00H 00H 01H F7H
       |
       |---------- ACTIVE SENSING           FEH

[SW1] MIDI Transmit Channel
      Master Keyboard Mode = on: complies with Zone Transmit Channel.
      Master Keyboard Mode = off: complies with Keyboard Transmit Channel.
      The data played back using Sequencer Part will be output through the channels set for
      the sequence data, ignoring [SW1] settings.
      CS6R transmits BC and A-C/1-2 of ASSIGNABLE CONTROLLER, and the data from the
      Sequencer Part. [SW2] MIDI Control Mode
[SW3] MIDI Sync
[SW4] MIDI Control
[SW5] MIDI Device Number
      When set to all, data will be output through the channel 1.
[SW6] PHRASE CLIP MODE JOB only. Not available on S80.
[SW7] In the VOICE MODE, VOICE related data only. In the PERFORMANCE MODE, PERFORMANCE
      related data only.
      SYSTEM data will be transmitted/received in all modes.
[SW8] SYSTEM Bank Select Switch
```

2) RECEIVE FLOW

```
MIDI >-[SW11]+--- NOTE OFF               8nH
       |     |
       |     +--- NOTE ON/OFF            9nH
       |     |
       |     +--- CONTROL CHANGE
       |     |     MODULATION            BnH,01H
       |     |     PORTAMENTO TIME       BnH,05H
       |     |     DATA ENTRY MSB        BnH,06
       |     |     DATA ENTRY LSB        BnH,26H
       |     |     MAIN VOLUME           BnH,07H
       |     |     PAN                   BnH,0AH
       |     |     EXPRESSION            BnH,0BH
       |     |     SUSTAIN SWITCH        BnH,40H
       |     |     PORTAMENTO SWITCH     BnH,41H
       |     |     SOSTENUTO             BnH,42H
       |     |     HARMONIC CONTENT      BnH,47H
       |     |     EG RELEASE TIME       BnH,48H
       |     |     EG ATTACK TIME        BnH,49H
       |     |     BRIGHTNESS            BnH,4AH
       |     |     EG DECAY TIME         BnH,4BH
       |     |     PORTAMENTO CONTROL    BnH,54H
       |     |     EFFECT1 DEPTH         BnH,5BH
       |     |     EFFECT3 DEPTH         BnH,5DH
       |     |     DATA ENTRY INC        BnH,60H
       |     |     DATA ENTRY DEC        BnH,61H
       |     |     ASSIGNABLE CONTROLLER BnH,(00H .. 5FH)
       |     |     RPN
       |     |         PITCH BEND SENS   BnH,64H,00H,65H,00H,06H,mmH
       |     |         FINE TUNING       BnH,64H,01H,65H,00H,06H,mmH,26H,llH   *1
       |     |         COARSE TUNING     BnH,64H,02H,65H,00H,06H,mmH           *1
       |     |         RPN RESET         BnH,64H,7FH,65H,7FH
       |     |     ALL SOUND OFF         BnH,78H
       |     |     RESET ALL CONTROLLERS BnH,79H
       |     |     ALL NOTE OFF          BnH,7BH
       |     |     OMNI MODE OFF         BnH,7CH
       |     |     OMNI MODE ON          BnH,7DH
       |     |     MONO MODE             BnH,7EH
       |     |     POLY MODE             BnH,7FH
       |     |
       |     +-[SW2]--EG SUSTAIN LEVEL   BnH,1FH
       |     |
       |     +-[SW8]--BANK SEL MSB       BnH,00H
       |     |        BANK SEL LSB       BnH,20H
       |     |
       |     +-[SW9]--PROGRAM CHANGE     CnH
       |     |
       |     +--------CHANNEL AFTER TOUCH  DnH
       |     |
       |     +--------PITCH BEND CHANGE   EnH
       |
       +------+   SYSTEM EXCLUSIVE MESSAGE
       |      |      IDENTITY REQUEST     F0H 7EH 0nH 06H 01H F7H
       |      |      REMOTE SWITCH        F0H 43H 10H 64H 0AH 00H alH ddH F7H
       |      |
       |      +-[SW12]- GM MODE ON        F0H 7EH 7FH 09H 01H F7H
       |
       +[SW5]- +   SYSTEM EXCLUSIVE MESSAGE
       |       |   MIDI MASTER VOLUME     F0H 7FH 7FH 04H 01H llH mmH F7H
       |       |
       |       +-[SW6]--SAMPLE DUMP STANDARD
       |       |       DUMP HEADER        F0H 7EH nnH 01H ssH ssH ddH....ddH F7H
       |       |       DATA PACKET        F0H 7EH nnH 02H kkH ddH....ddH ccH F7H
       |       |       CANCEL             F0H 7EH nnH 7DH ppH F7H
       |       |
       |       +-[SW10]-<BULK DUMP>       F0H 43H 0nH 64H bhH blH ahH amH alH ddH....ddH ccH F7H
       |       |
       |       +-[SW7]--<PARAMETER CHANGE>  F0H 43H 1nH 64H ahH amH alH ddH.....ddH F7H
       |       |
       |       +-[SW7]--<BULK DUMP REQUEST>  F0H 43H 2nH 64H ahH amH alH ddH.....ddH F7H
       |       |
       |       +-[SW7]--<PARAMETER REQUEST>  F0H 43H 3nH 64H ahH amH alH F7H
       |       |
       |       +-[SW12]-XG SYSTEM ON      F0H 43H 1nH 4CH 00H 00H 7EH 00H F7H
       |
       +[SW3]---------  SYSTEM REALTIME MESSAGE
       |                TIMING CLOCK      F8H
       |
       +[SW4]---------  SYSTEM REALTIME MESSAGE
       |                START             FAH
       |                CONTINUE          FBH
       |                STOP              FCH
       |
       |
       +--------------  ACTIVE SENSING    FEH


[SW2] MIDI Control Mode
[SW3] MIDI Sync
[SW4] MIDI Control
[SW5] MIDI Device Number
      When set to the number other than off, MIDI MASTER VOLUME will be received.
[SW6] PHRASE CLIP MODE JOB only. Not available on S80.
[SW7] In the VOICE MODE, VOICE related data only. In the PERFORMANCE MODE, PERFORMANCE
      related data only.
      SYSTEM data will be transmitted/received in all modes.
[SW8] SYSTEM Bank Select Switch
[SW9] SYSTEM Program Change Switch (Received only in the Play Mode when Voice Mode or
      Phrase Clip Mode is selected.)
[SW10] SYSTEM Bulk Protect and the conditions mentioned in SW7 above.
[SW11] MIDI Receive Channel and Receive Filter.
      In Performance Mode, complies with Part Receive Channel and Part Receive Switch.
      In the modes other than Performance Mode, complies with Basic Receive Channel.
[SW12] SYSTEM Receive GM/XG On

*1 Performance Mode only.
```

3) TRANSMIT/RECEIVE DATA

(3-1) CHANNEL VOICE MESSAGES

CS6R transmits BC and A-C/1-2 of ASSIGNABLE CONTROLLER, and the data from the Sequencer Part.

(3-1-1) NOTE OFF

```
STATUS        1000nnnn(8nH)      n = 0 ~ 15 CHANNEL NUMBER
NOTE NUMBER   0kkkkkkk           k = 0 (C-2) ~ 127 (G8)
VELOCITY      0vvvvvvv           ignores "v"
Receive only.
```

(3-1-2) NOTE ON/OFF

```
STATUS        1001nnnn(9nH)      n = 0 ~ 15 CHANNEL NUMBER
NOTE NUMBER   0kkkkkkk           k =  0 (C-2) ~ 127 (G8)
VELOCITY      0vvvvvvv(v≠0)      NOTE ON
              0vvvvvvv(v=0)      NOTE OFF
```

(3-1-3) CONTROL CHANGE

```
STATUS        1011nnnn(BnH)      n = 0 ~ 15 CHANNEL NUMBER
CONTROL NUMBER 0ccccccc
CONTROL VALUE  0vvvvvvv

* TRANSMITTED CONTROL NUMBER
c =  0        BANK SEL MSB              ; v = 0,63,127                        *3
c = 32        BANK SEL LSB              ; v = 0,1,8,9,24,25,32,40,41,64,65    *3
c =  1        MODULATION                ; v = 0 - 127
c =  5        PORTAMENTO TIME           ; v = 0 - 127                         *4
c =  7        MAIN VOLUME               ; v = 0 - 127
c = 10        PAN                       ; v = 0 - 127                         *4
c = 11        EXPRESSION                ; v = 0 - 127
c = 31        EG SUSTAIN LEVEL          ; v = 0:-64  -  64:0  -  127:+63 *4,*5
c = 64        SUSTAIN SWITCH            ; v = 0,  127
c = 65        PORTAMENTO SWITCH         ; v = 0-63:OFF , 64-127:ON            *4
c = 71        FILTER RESONANCE          ; v = 0:-64  -  64:0  -  127:+63      *4
c = 72        EG RELEASE TIME           ; v = 0:-64  -  64:0  -  127:+63      *4
c = 73        EG ATTACK TIME            ; v = 0:-64  -  64:0  -  127:+63      *4
c = 74        FILTER CUTOFF FREQ        ; v = 0:-64  -  64:0  -  127:+63      *4
c = 75        EG DECAY TIME             ; v = 0:-64  -  64:0  -  127:+63      *4
c = 91        REVERB SEND               ; v = 0 - 127                         *4
c = 93        CHORUS SEND               ; v = 0 - 127                         *4
c = 0..95     ASSIGNABLE CONTROLLER     ; v = 0 - 127                         *6
The Sequencer Part will play back all the recorded control change messages.

* RECEIVED CONTROL NUMBER
c =  0        BANK SEL MSB              ; v = 0 - 127                         *3
c = 32        BANK SEL LSB              ; v = 0 - 127                         *3
c =  1        MODULATION                ; v = 0 - 127
c =  5        PORTAMENTO TIME           ; v = 0 - 127                         *2
c =  6        DATA ENTRY MSB            ; v = 0 - 127                         *1
c = 38        DATA ENTRY LSB            ; v = 0 - 127                         *1
c =  7        MAIN VOLUME               ; v = 0 - 127
c = 10        PAN                       ; v = 0 - 127
c = 11        EXPRESSION                ; v = 0 - 127
c = 31        EG SUSTAIN LEVEL          ; v = 0:-64  -  64:0  -  127:+63 *2,*5
c = 64        SUSTAIN SWITCH            ; v = 0-63:OFF , 64-127:ON            *2
c = 65        PORTAMENTO SWITCH         ; v = 0-63:OFF , 64-127:ON            *2
c = 66        SOSTENUTO                 ; v = 0-63:OFF , 64-127:ON            *2
c = 71        HARMONIC CONTENT          ; v = 0:-64  -  64:0  -  127:+63
c = 72        EG RELEASE TIME           ; v = 0:-64  -  64:0  -  127:+63
c = 73        EG ATTACK TIME            ; v = 0:-64  -  64:0  -  127:+63
c = 74        BRIGHTNESS                ; v = 0:-64  -  64:0  -  127:+63
c = 75        EG DECAY TIME             ; v = 0:-64  -  64:0  -  127:+63      *2
c = 84        PORTAMENTO CONTROL        ; v = 0 - 127                         *2
c = 91        EFFECT1 DEPTH             ; v = 0 - 127
c = 93        EFFECT3 DEPTH             ; v = 0 - 127
c = 96        DATA ENTRY INC            ; v = 127                             *1
c = 97        DATA ENTRY DEC            ; v = 127                             *1
c = 0..95     ASSIGNABLE CONTROLLER     ; v = 0 - 127                         *6
c = 0..95     ARPEGGIO SW               ; v = 0-63:OFF , 64-127:ON            *6
c = 0..95     ARPEGGIO HOLD             ; v = 0-63:OFF , 64-127:ON            *6

*1 Used only when a value is set using RPN.
*2 Invalid with Drum Voices.
*3 Relation between BANK CHANGE and PROGRAM is as follows:
    CATEGORY          |MSB      |LSB     |PROGRAM No    Displayed on LCD
    ------------------------------------+--------+--------+----------------------------
    Normal Voice      Internal        |0       |0       |0..127        (1..128)
    Drum Voice        Internal        |127     |0       |0..1          (1..2)
    Normal Voice      Preset 1        |63      |0       |0..127        (1..128)
                      Preset 2        |63      |1       |0..127        (1..128)
                      Internal        |63      |8       |0..127        (1..128)
                      External        |63      |9       |0..127        (1..128)
    Plug-in Voice     Plug-in 1       |63      |24      |0..63         (1..64)
                      Plug-in 2       |63      |25      |0..63         (1..64)
    Drum Voice        Preset          |63      |32      |0..7          (1..8)
                      Internal        |63      |40      |0..1          (1..2)
                      External        |63      |41      |0..1          (1..2)
    Performance       Internal        |63      |64      |0..127        (1..128)
                      External        |63      |65      |0..63         (1..64)
    Phrase Clip       Internal        |63      |104     |0..3          (1..4)

*4 CS6x only.
*5 Transmitted/received only when MODE2 is selected in CONTROL CHANGE MODE.
*6 The default CONTROL NUMBERs of ASSIGNABLE CONTROLLER are as follows:
    BREATH CONTROLLER         2
    FOOT CONTROLLER           4 (Transmit: CS6x and S80 only)
    SCENE CONTROL            14 (Transmit/Receive: CS6x only)
    KNOB 1                   16
    KNOB 2                   17
    KNOB A                   18
    KNOB B                   19
    KNOB C                   20
    RIBBON CONTROLLER        22 (Transmit: CS6x only)
    CONTROL SLIDER            7 (Transmit/Receive: S80 only)
    FOOT SWITCH              88 (Transmit: CS6x, S80 only)
    ARPEGGIO HOLD            89 (Transmit: CS6x only)
    ARPEGGIO SWITCH          90 (Transmit: CS6x only)

PORTAMENTO TIME sets the time it takes for the pitch to reach the next note played
when PORTAMENTO SWITCH is set to on.
PAN position relatively changes according to the preset value for each voice.
In PORTAMENTO CONTROL, PORTAMENTO TIME is fixed to 0.
EFFECT1 DEPTH controls reverb send level.
EFFECT3 DEPTH controls chorus send level.
HARMONIC CONTENT adjusts the resonance preset for each voice.
Setting a value adds to or subtracts from the center value, 64, since it is an offset
parameter.
The larger the value more resonant sound will be produced. The effective range may be
narrower than the range you can designate depending on the selected voice.
The parameters, EG ATTACK TIME, EG DECAY TIME, EG SUSTAIN LEVEL, EG RELEASE TIME
adjust the envelopes preset for each voice.
Setting these values add to or subtract from the center value, 64, since these are
offset parameters.
BRIGHTNESS adjusts the cutoff frequency preset for each voice.
Setting a value adds to or subtracts from the center value, 64, since it is an offset
parameter.
The smaller the value the cutoff frequency will be lowered. The effective range may be
narrower than the range you can designate depending on the selected voice.
```

nk Select will be actually executed when the Program Change message is received.
nk Select and Program Change numbers that are not supported by Yamaha will be
nored.

'ROGRAM CHANGE
STATUS 1100nnnn(CnH) n = 0 ~ 15 CHANNEL NUMBER
PROGRAM NUMBER 0ppppppp p = 0 ~ 127

:HANNEL AFTER TOUCH
STATUS 1101nnnn(DnH) n = 0 ~ 15 CHANNEL NUMBER
VALUE 0vvvvvvv v = 0 ~ 127 AFTER TOUCH VALUE

'ITCH BEND CHANGE
STATUS 1110nnnn(EnH) n = 0 ~ 15 CHANNEL NUMBER
LSB 0vvvvvvv PITCH BEND CHANGE LSB
MSB 0vvvvvvv PITCH BEND CHANGE MSB
Transmitted with a resolution of 7 bits.

ANNEL MODE MESSAGES
STATUS 1011nnnn(BnH) n = 0 ~ 15 CHANNEL NUMBER
CONTROL NUMBER 0ccccccc c = CONTROL NUMBER
CONTROL VALUE 0vvvvvvv v = DATA VALUE

.LL SOUNDS OFF (CONTROL NUMBER = 78H , DATA VALUE = 0)
All the sounds currently played including the channel messages such as note-on and
hold-on in a certain channel are muted when receiving this message.

!ESET ALL CONTROLLERS (CONTROL NUMBER = 79H , DATA VALUE = 0)
Resets the values set for the following controllers.
PITCH BEND CHANGE 0 (center)
CHANNEL AFTER TOUCH 0 (minimum)
MODULATION 0 (minimum)
EXPRESSION 127 (maximum)
BREATH CONTROLLER 127 (maximum)
FOOT CONTROLLER 127 (maximum)
RIBBON CONTROLLER 0 (center)
KNOB 1 0 (center)
KNOB 2 0 (center)
SUSTAIN SWITCH 0 (off)
SOSTENUTO SWITCH 0 (off)
RPN Not assigned; No change
PORTAMENT CONTROL Resets the source note number

Doesn't reset the following data:
PROGRAM CHANGE, BANK SELECT MSB/LSB, VOLUME, PAN.
HARMONIC CONTENT, SUSTAIN LEVEL, RELEASE TIME, ATTACK TIME, DECAY TIME, BRIGHTNESS
EFFECT SEND LEVEL 1, EFFECT SEND LEVEL 3, PORTAMENTO SWITCH
PITCH BEND SENSITIVITY, FINE TUNING, COARSE TUNING
ASSIGNABLE CONTROLLER

.LL NOTES OFF (CONTROL NUMBER = 7BH , DATA VALUE = 0)
All the notes currently set to on in certain channel(s) are muted when receiving
this message. However, if Sustain or Sostenuto is on, notes will continue sounding
until these are turned off.

)MNI MODE OFF (CONTROL NUMBER = 7CH , DATA VALUE = 0)
Performs the same function as when receiving ALL NOTES OFF.
Sets VOICE RECEIVE CHANNEL to "OMNI OFF," channel 1.

)MNI MODE ON (CONTROL NUMBER = 7DH , DATA VALUE = 0)
Performs the same function as when receiving ALL NOTES OFF.
Sets VOICE RECEIVE CHANNEL to "OMNI ON."

/ONO (CONTROL NUMBER = 7EH , DATA VALUE = 0..16)
Performs the same function as when receiving ALL SOUNDS OFF. If the 3rd byte (mono)
is within 0 through 16, the channel will be Mode4(m = 1).
In VOICE MODE, the mode can be Mode2(m=1) according to VOICE RECEIVE CHANNEL.

'OLY (CONTROL NUMBER = 7FH , DATA VALUE = 0)
Performs the same function as when receiving ALL SOUNDS OFF. The channel will be
Mode3.
In VOICE MODE, the mode can be Mode1 according to VOICE RECEIVE CHANNEL.

GISTERED PARAMETER NUMBER

STATUS 1011nnnn(BnH) n = 0 ~ 15 CHANNEL NUMBER
LSB 01100100(64H)
RPN LSB 0ppppppp p = RPN LSB(Refer to the table as shown below)
MSB 01100101(65H)
RPN MSB 0qqqqqqq q = RPN MSB(Refer to the table as shown below)
DATA ENTRY MSB 00000110(06H)
DATA VALUE 0mmmmmmm m = Data Value
DATA ENTRY LSB 00100110(26H)
DATA VALUE 0lllllll l = Data Value

First, designate the parameter using RPN MSB/LSB numbers. Then, set its value with
data entry MSB/LSB.

RPN		D.ENTRY	
LSB	MSB	MSB	LSB	PARAMETER NAME	DATA RANGE
00H	00H	mmH	---	PITCH BEND SENSITIVITY	00H - 18H (0 - 24 semitones)
01H	00H	mmH	llH	MASTER FINE TUNE	{mmH,llH}={00H,00H}-{40H,00H}-{7FH,7FH} (-8192*100/8192) - 0 - (+8192*100/8192)
02H	00H	mmH	---	MASTER COARSE TUNE	28H - 40H - 58H (-24 - 0 - +24 semitones)
7FH	7FH	---	---	RPN RESET	RPN numbers will be left not designated. The internal values are not affected.

I-REGISTERED PARAMETER NUMBER

There are no applicable parameters.

TEM REAL TIME MESSAGES

.CTIVE SENSING

STATUS 11111110(FEH)

Transmitted at every 200 msec.
Once this code is received, the instrument starts sensing. When no status nor data
is received for over approximately 350 ms, MIDI receiving buffer will be cleared,
and the sounds currently played and the sustain switch are forcibly turned off. In
this case, each control data will be reset to a certain value.

TEM EXCLUSIVE MESSAGE

NIVERSAL NON REALTIME MESSAGE

-6-1-1)GENERAL MIDI MODE ON

F0H 7EH 7FH 09H 01H F7H

Received only when SYSTEM Receive GM/XG on is set to on in PERFORMANCE MODE. The
Part values will be reset according to the SYSTEM Internal Part settings.

(3-6-1-2)IDENTITY REQUEST(Receive only)

F0H 7EH 0nH 06H 01H F7H ("n" = Device No.However, this instrument receives under
"omni.")

(3-6-1-3)IDENTITY REPLY (Transmit only)

F0H 7EH 7FH 06H 02H 43H 00H 41H ddH ddH 00H 00H 00H 01H F7H

dd;Device Number Code
CS6x: 5C 03
CS6R: 5D 03
S80: 5E 03

(3-6-2)UNIVERSAL REALTIME MESSAGE

(3-6-2-1) MIDI MASTER VOLUME

F0H 7FH 7FH 04H 01H llH mmH F7H

Sets the MASTER VOLUME value.
The value "mm" is used to set the master volume (the value "ll" should be ignored).

(3-6-3)PARAMETER CHANGE

(3-6-3-1) XG SYSTEM ON

11110000	F0	Exclusive status
1000011	43	YAMAHA ID
0001nnnn	1n	device Number
1001100	4C	Model ID
0aaaaaaa	0	Address High
0aaaaaaa	0	Address Mid
0aaaaaaa	7E	Address Low
0	0	Data
11110111	F7	End of Exclusive

Received only when SYSTEM Receive GM/XG on is set to on in PERFORMANCE MODE. The
Part values will be reset according to the SYSTEM Internal Part settings.
Be aware that executing this message takes ca. 170ms and that, therefore, a certain
interval before executing the following message is needed.

(3-6-3-2) NATIVE PARAMETER CHANGE, REMOTE SWITCH

11110000	F0	Exclusive status
01000011	43	YAMAHA ID
0001nnnn	1n	device Number
01100100	64	Model ID
0aaaaaaa	aaaaaaa	Address High
0aaaaaaa	aaaaaaa	Address Mid
0aaaaaaa	aaaaaaa	Address Low
0ddddddd	ddddddd	Data
|	|	
11110111	F7	End of Exclusive

For parameters with data size of 2 or more, the appropriate number of data bytes
will be transmitted.
See the following MIDI Data Table for Address and Byte Count.
Always received no matter which device number is selected, in the case of REMOTE
SWITCH.

(3-6-4)BULK DUMP

11110000	F0	Exclusive status
01000011	43	YAMAHA ID
0000nnnn	0n	device Number
01100100	64	Model ID
0bbbbbbb	bbbbbbb	Byte Count
0bbbbbbb	bbbbbbb	Byte Count
0aaaaaaa	aaaaaaa	Address High
0aaaaaaa	aaaaaaa	Address Mid
0aaaaaaa	aaaaaaa	Address Low
0	0	Data
|	|	
0ccccccc	ccccccc	Check-sum
11110111	F7	End of Exclusive

See the following MIDI Data Table for Address and Byte Count.
The Check sum is the value that results in a value of 0 for the lower 7 bits when
the Byte Count, Start Address, Data and Check sum itself are added.

(3-6-5) DUMP REQUEST

11110000	F0	Exclusive status
01000011	43	YAMAHA ID
0010nnnn	2n	device Number
01100100	64	Model ID
0aaaaaaa	aaaaaaa	Address High
0aaaaaaa	aaaaaaa	Address Mid
0aaaaaaa	aaaaaaa	Address Low
11110111	F7	End of Exclusive

See the following MIDI Data Table for Address and Byte Count.

(3-6-6) PARAMETER REQUEST

11110000	F0	Exclusive status
01000011	43	YAMAHA ID
0011nnnn	3n	device Number
01100100	64	Model ID
0aaaaaaa	aaaaaaa	Address Hig
0aaaaaaa	aaaaaaa	Address Mid
0aaaaaaa	aaaaaaa	Address Low
11110111	F7	End of Exclusive

See the following MIDI Data Table for Address and Byte Count.

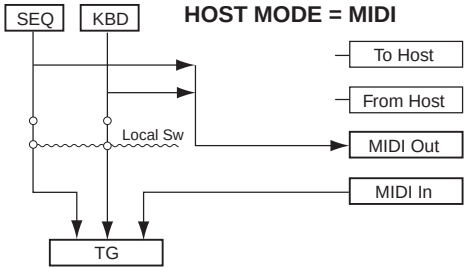

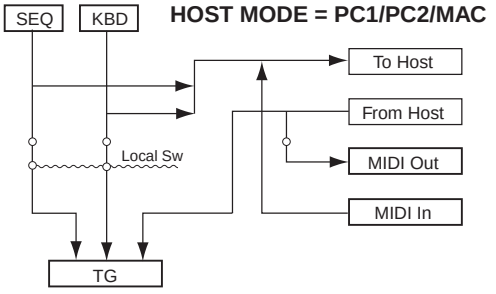

Although three types of note on/note off data, received via MIDI, played by the internal sequencer and played on the keyboard will be distinguished, the other controllers (channel messages) equally affect the entire notes.

ALL SOUNDS OFF clears all the sounds in the specific channel(s) played by both the keyboard and the data via MIDI.
ALL NOTES OFF received via MIDI clears the sounds in the specific channel(s) played via MIDI.

YAMAHA [Music Synthesizer --- synth. part] Date :13-JUL-1999
Model S80 MIDI Implementation Chart Version : 1.0

Function...		Transmitted	Recognized	Remarks
Basic Channel	Default	1 - 16	1 - 16	Memorised
	Changed	1 - 16	1 - 16	
Mode	Default	3	1	Memorised
	Messages	X	1 - 4(m=1) *2	
	Altered	**********	X	
Note Number : True voice		0 - 127	0 - 127	Transpose
		**********	0 - 127	
Velocity	Note ON	O 9nH,v=1-127	O v=1-127	
	Note OFF	X 9nH,v=0	X	
After Touch	Key's	X	X	
	Ch's	O	O *1	
Pitch Bend		O	O *1	
Control Change	0,32	O	O *1	Bank Select
	1,7,11	O	O *1	
	5,10	X	O *1	
	6,38	X	O *1	Data Entry
	64	O	O *1	Sustain Sw
	65	X	O *1	Portamento Sw
	66	X	O *1	Sosutenuto
	71-75	X	O *1	Sound Controller
	91,93	X	O *1	Effect Depth
	96-97	X	O *1	RPN Inc,Dec
	100-101	X	O *1	RPN LSB,MSB
	1-95	O	O *1	Assignable Cntrl
Prog Change : True #		O 0 - 127 *1	O 0 - 127	
		**********	0 - 127	
System Exclusive		O	O	
Common : Song Pos.		X	X	
: Song Sel.		X	X	
: Tune		X	X	
System : Clock		X	O	
Real Time : Commands		X	X	
: All Sound Off		X	O (120,126,127)	
Aux : Reset All Cntrls		X	O (121)	
: Local ON/OFF		X	X	
Mes- : All Notes OFF		X	O (123-125)	
sages: Active Sense		O	O	
: Reset		X	X	

Notes: *1 receive if switch is on.
*2 m is always treated as "1" regardless of its value.

Mode 1 : OMNI ON , POLY Mode 2 : OMNI ON ,MONO O : Yes
Mode 3 : OMNI OFF, POLY Mode 4 : OMNI OFF,MONO X : No

YAMAHA [Music Synthesizer --- seq. part] Date :13-JUL-1999
Model S80 MIDI Implementation Chart Version : 1.0

Function...	Transmitted	Recognized	Remarks
Basic Default Channel Changed	1 - 16 ×	× ×	Memorised
Mode Default Messages Altered	× × **********	× × ×	
Note Number : True voice	0 - 127 **********	× ×	
Velocity Note ON Note OFF	○ 9nH,v=1-127 × 9nH,v=0	× ×	
After Key's Touch Ch's	○ ○	× ×	
Pitch Bend	○	×	
Control 0-121 Change	○	×	
Prog Change : True #	○ 0 - 127 **********	×	
System Exclusive	○	×	
Common : Song Pos. : Song Sel. : Tune	× × ×	× × ×	
System : Clock Real Time : Commands	○ *2 ○ *2	○ *1 *2 ○ *2	
: All Sound Off Aux : Reset All Cntrls : Local ON/OFF Mes- : All Notes OFF sages: Active Sense : Reset	○ ○ ○ ○ ○ ×	× × × × × ×	
Notes: *1 if MIDI sync is midi *2 if MIDI control in is on			

Mode 1 : OMNI ON , POLY Mode 2 : OMNI ON ,MONO ○ : Yes
Mode 3 : OMNI OFF, POLY Mode 4 : OMNI OFF,MONO × : No

■ CIRCUIT BOARDS

• DM Circuit Board

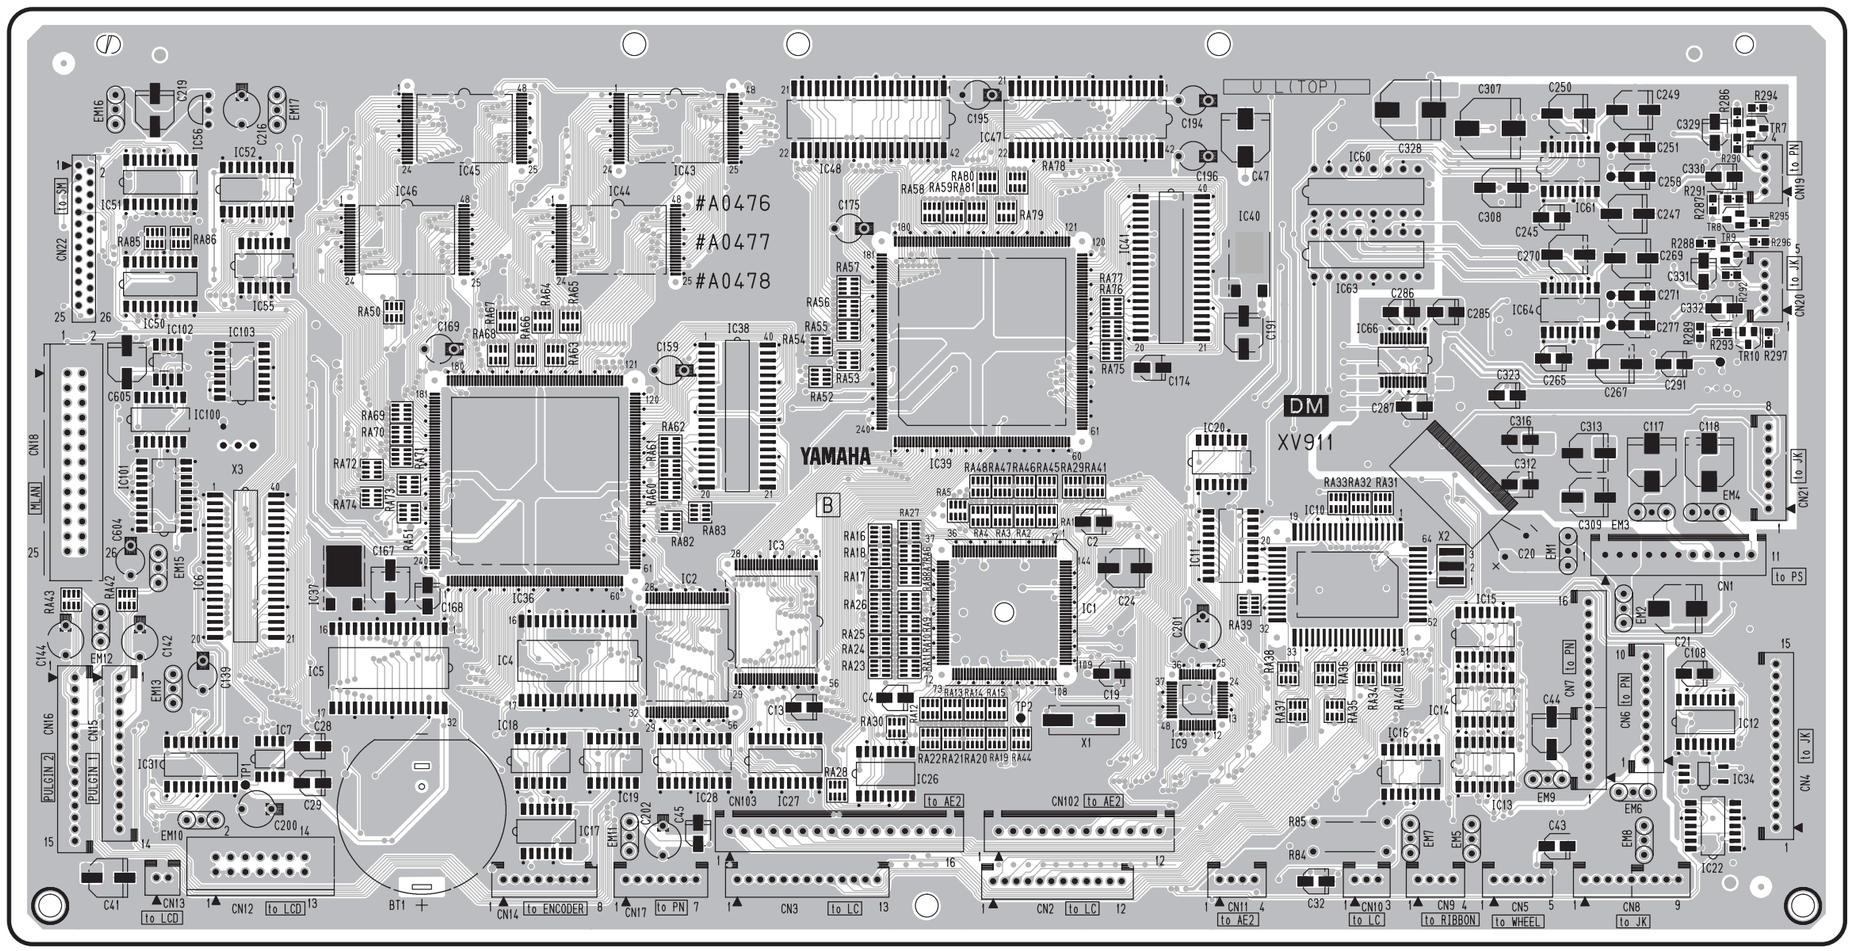

Component side

Note : See parts list for details of circuit board component parts.

DM: 2NA-V357640 ⚠0

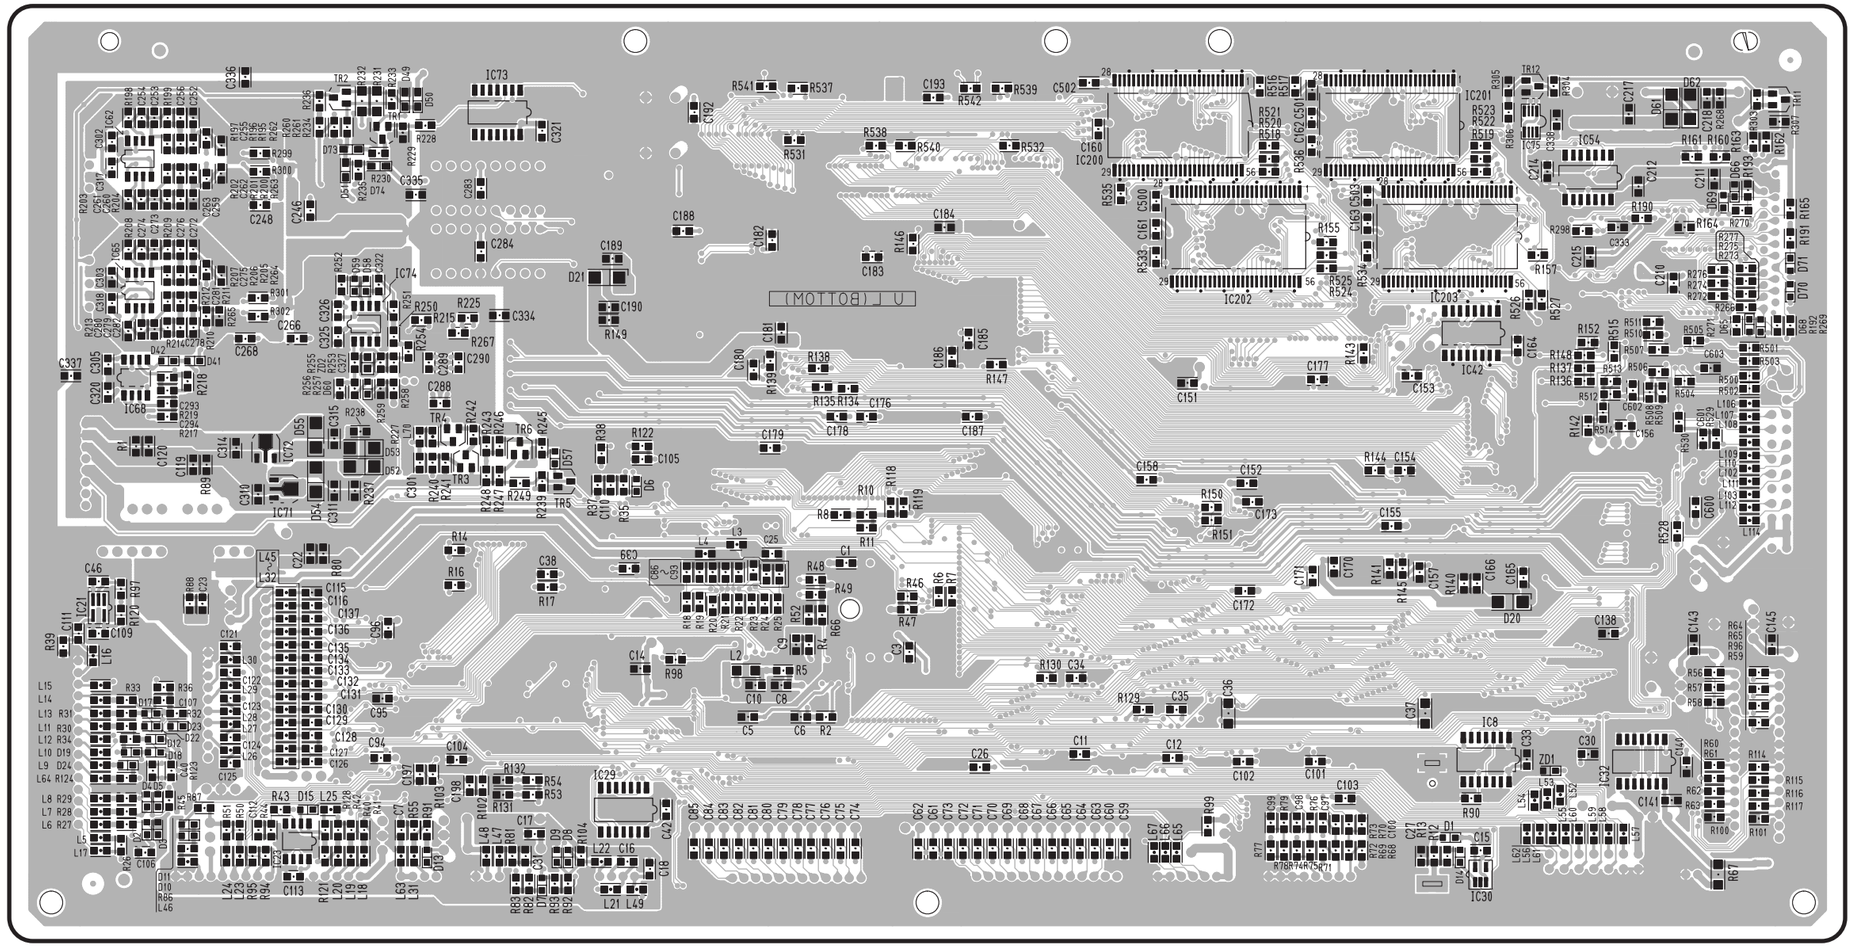

Pattern side

Battery VN103500

VN103600(Battery holder for VN103500)

- Notice for back-up battery removal
  Push the battery as shows in figure, then the battery will pop up.
- Druk de batterij naar beneden zoals aangeven in de tekening, de batterij springt dan naar voren.

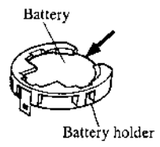

• JK Circuit Board (B virsion)

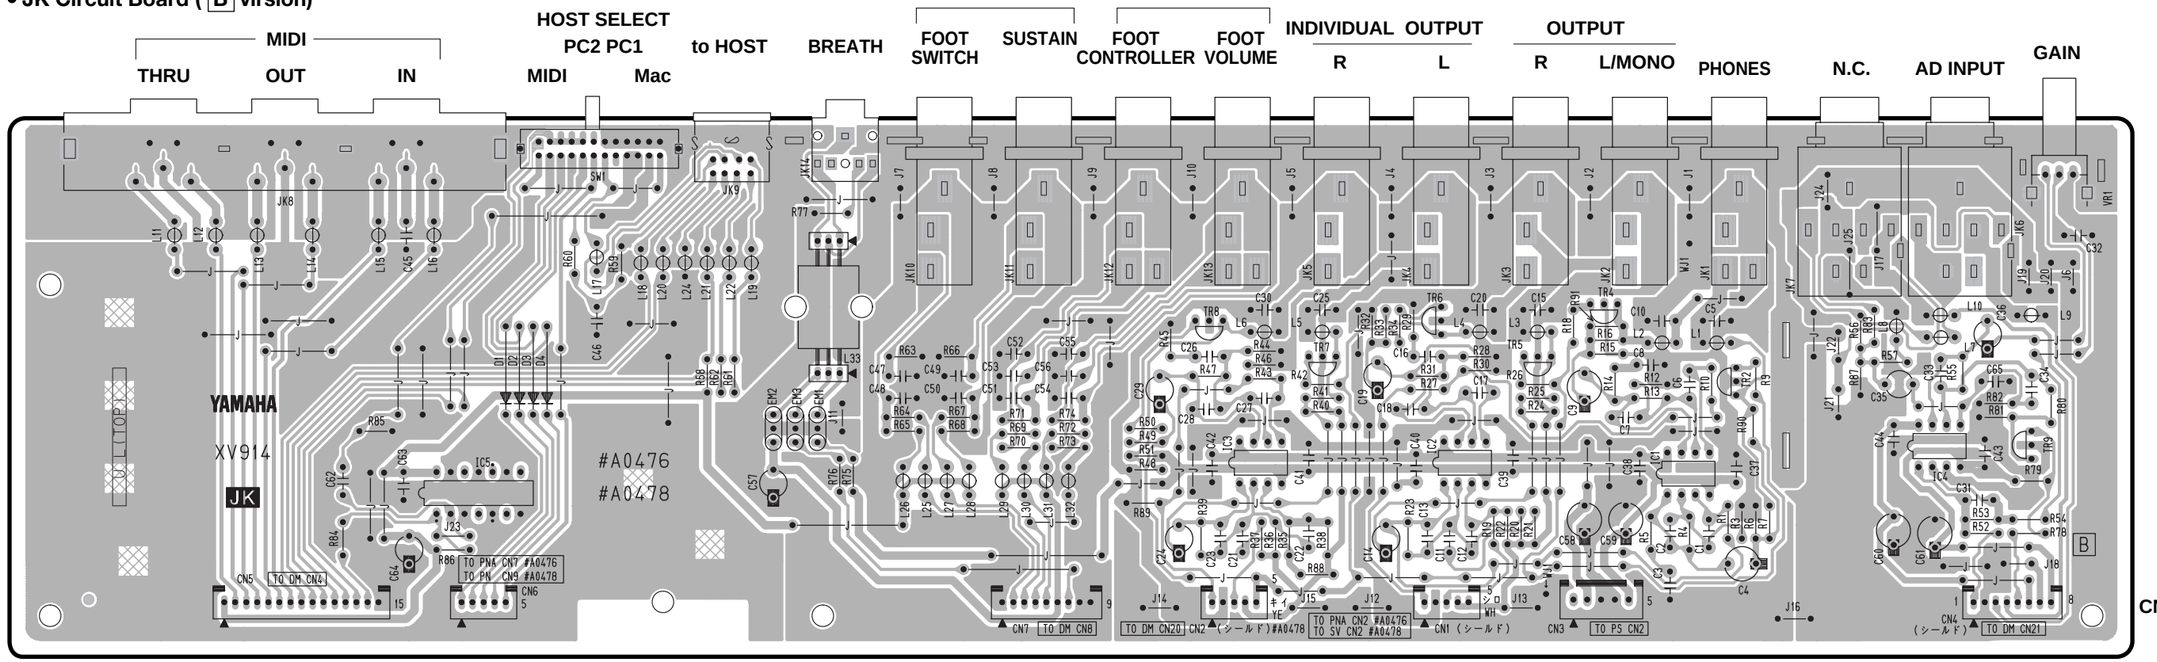

• JK Circuit Board (C virsion)

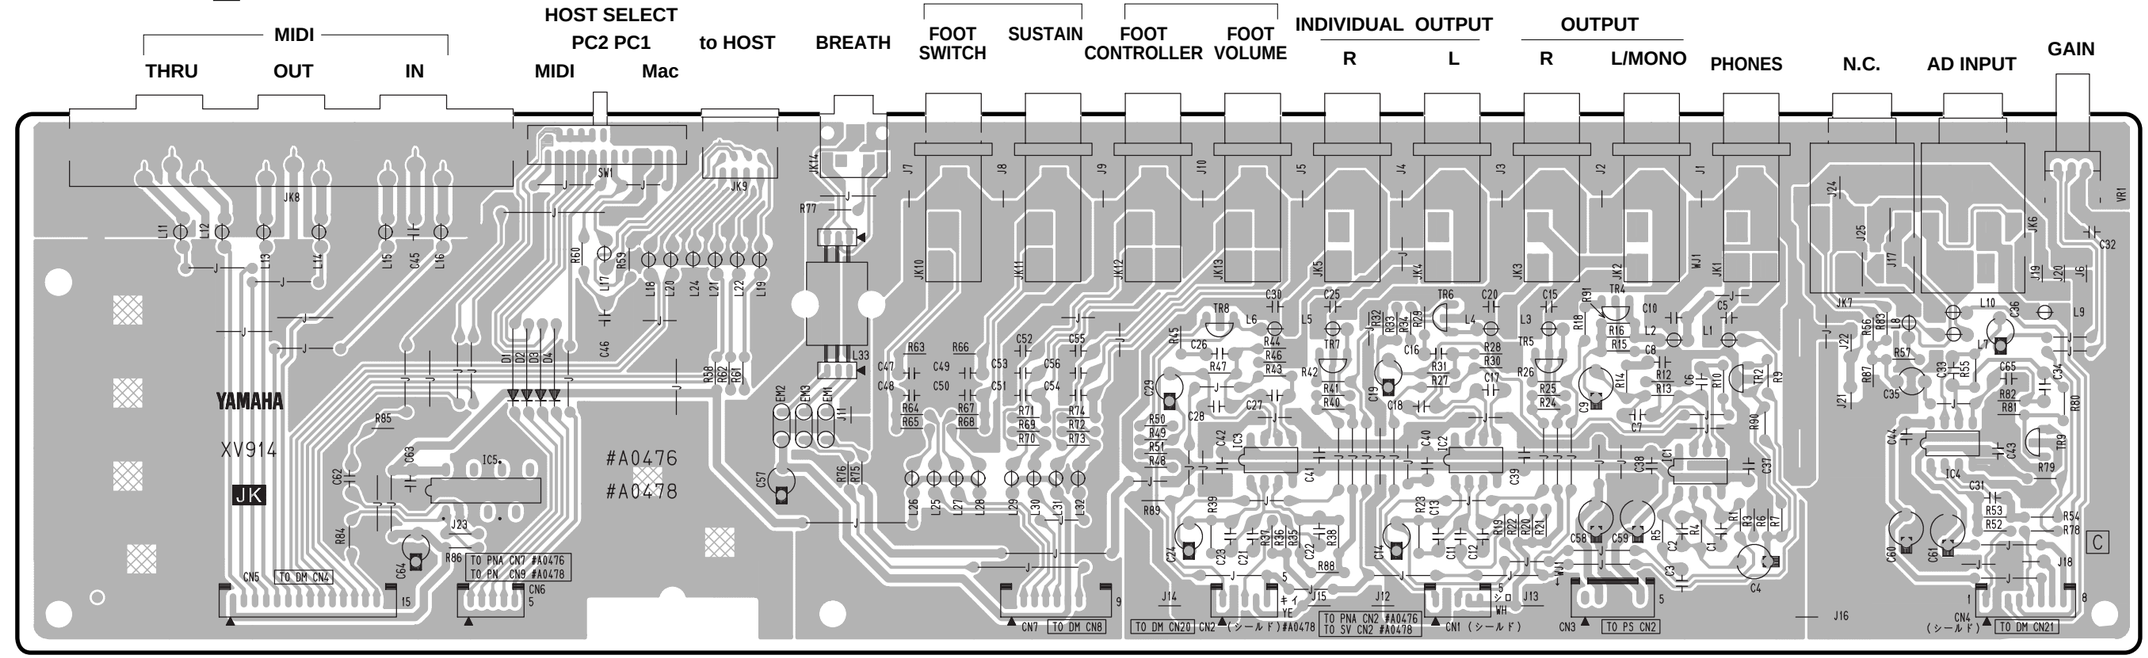

JK: 2NA-V357700 ⚠1

• **RV Circuit Board**

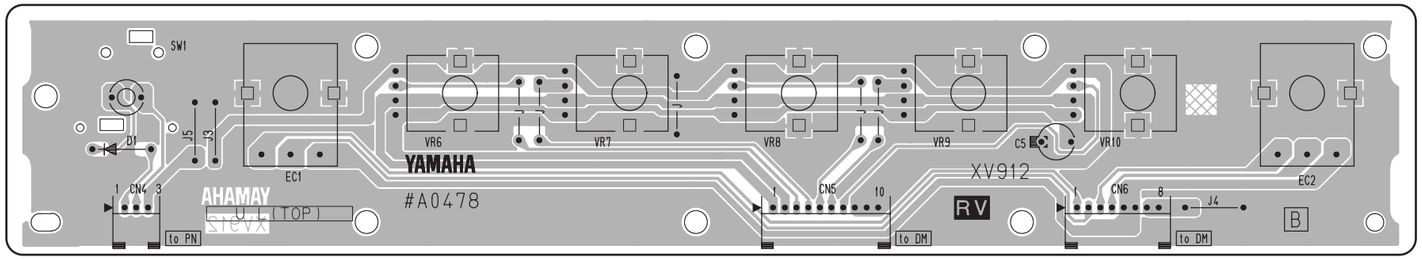

CN4: to PN-CN8 **CN5: to DM-CN6** **CN6: to DM-CN14**

Component side

• **PN Circuit Board**

CN7: to DM-CN17

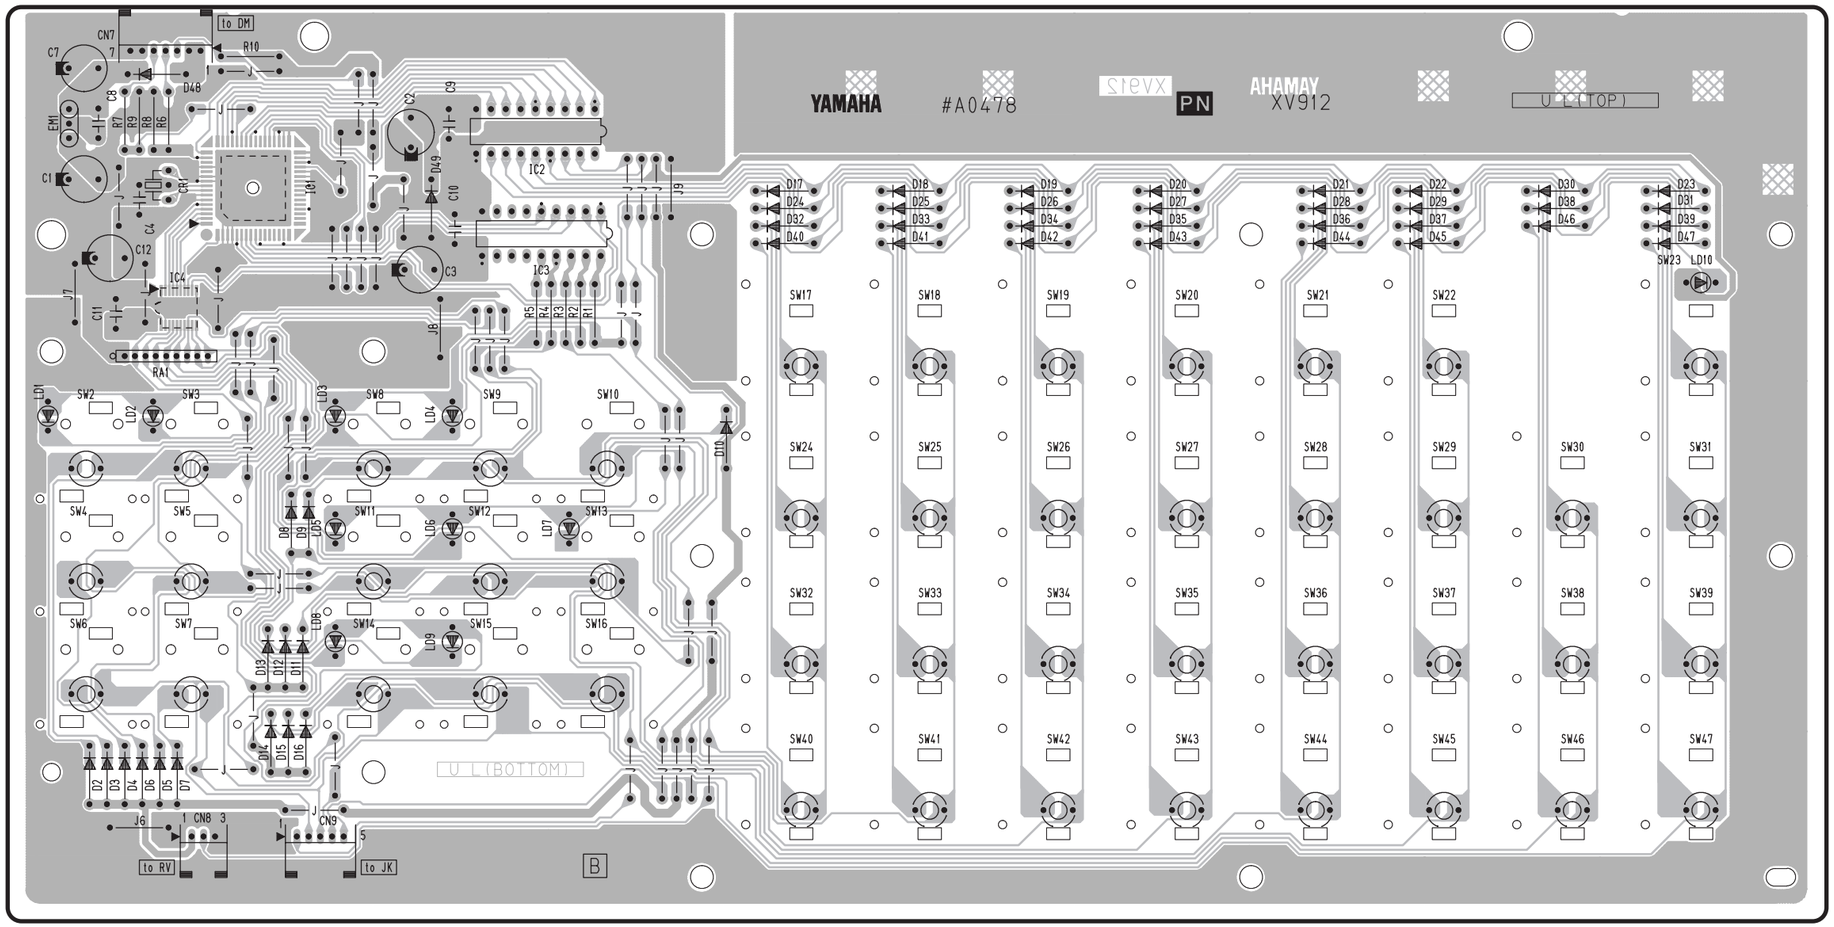

CN8: to RV-CN4 CN9: to JK-CN6

Component side

RV,PN: 2NA-V357650 ⚠1

• SV Circuit Board

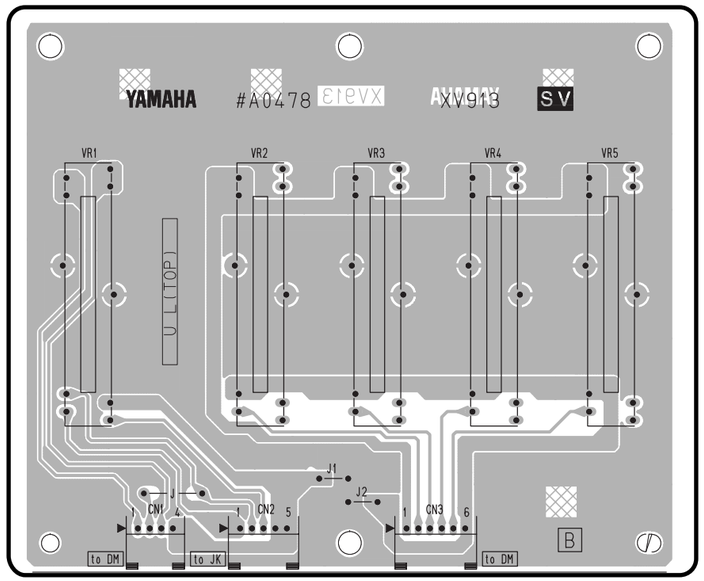

CN1: to DM-CN19 CN2: to JK-CN1 CN3: to DM-CN7

Component side

• PC Circuit Board

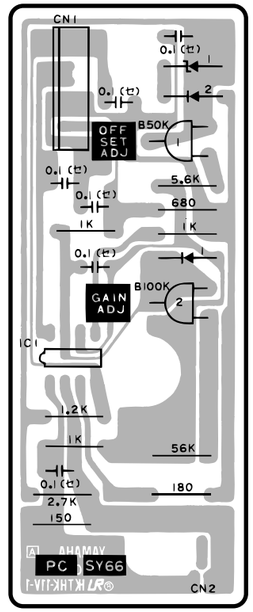

Component side

• SM Circuit Board

CN1: to DM-CN22

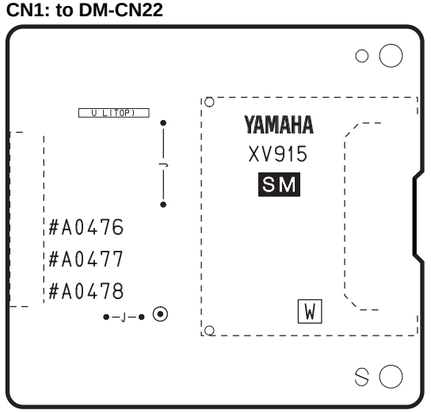

Component side

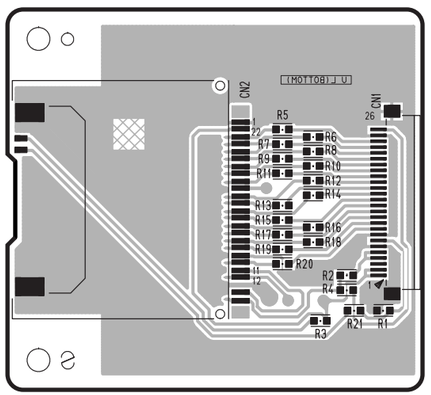

Pattern side

SV: 2NA-V357680
SM: 2NA-V357710 △1

■ TEST PROGRAM

Test No.	Test Item	Test Conditions, Judgment Criteria, etc.
T1	RAM READ/WRITE	OK/NG, (MAIN SRAM/WAVE DRAM)
T2	RAM BATTERY	OK/NG, 2.7V or more, Less than 3.5V
T3	WAVE ROM	OK/NG
T4	LCD	ON/OFF blinking alternately
T5	PANEL SWITCH/LED	OK/NG
T6	ENCODER	OK; 0 to +127(0) to -127
T7	KEYBOARD	OK, KEY CODE/KEY TOUCH
T8	KNOB A-2	OK/NG, 64-127-0-64
T9	SLIDER 1-4	OK/NG, 0-127-0
T12	CONTROLLER	OK/NG, 64-127-0-64 (PB), 0-127-0 (MW), 0-107-0 (AT)
T13	FOOT CONTROL SWITCH	OK, 0-127-0
T14	BREATH CONTROLLER	OK/NG, 127-0-127
T15	CARD	OK/NG
T16	MIDI IN/OUT/THRU	OK/NG THRU Confirmation
T17	HOST SELECT	OK/NG
T18	TO HOST	OK/NG
T19	1 kHz OUTPUT L	OUTPUT(L): +6.0 ± 2 dBm; OUTPUT(R): Less than -72.0 dBm (10 kohm load) INDIV(1): +6.0 ± 2 dBm; INDIV(2): Less than-72.0 dBm (10 kohm load) PHONES(L): +5.0 ± 2 dBm; PHONES(R): Less than -64.0 dBm (33 ohm load)
T20	1 kHz OUTPUT R	OUTPUT(L): Less than -72.0 dBm (10 kohm load); OUTPUT(R): +6.0 ± 2 dBm INDIV(1): Less than -72.0 dBm (10 kohm load); INDIV(2): +6.0 ± 2 dBm PHONES(L): Less than -64.0 dBm (33 ohm load); PHONES(R): +5.0 ± 2 dBm
T21	A/D LEVEL, JACK	OK
T22	A/D -> D/A	OUTPUT (L, R): +15.0 ± 2 dBm (Line) (10 kohm)
T23	PLUG- IN1	OUTPUT (L, R): +11.5 ± 2 dBm (10 kohm)
T24	PLUG- IN2	OUTPUT (L, R): +11.5 ± 2 dBm (10 kohm)
T25	mLAN	OK/NG
T26	FACTORY SET	OK/NG Initialized state
T27	SWP CH	1 kHz, sine wave
T28	EXIT (NOISE LEVEL)	OUTPUT (L, R): Less than -82.0 dBm (10 kohm load) PHONES (L, R): Less than -85.0 dBm (33 ohm load)

Measuring instruments: frequency counter, oscilloscope, AC voltmeter (JIS-C curve type), distortion meter (with flat filter), keyboard amplifier, etc.

Jigs: MIDI cable, specially designed expansion board, etc.

CONTROL SYNTHESIZER

S80

PARTS LIST

CONTENTS

OVERALL ASSEMBLY 2
CONTROL PANEL ASSEMBLY 4
WHEEL ASSEMBLY 5
KEYBOARD UNIT 6
POWER SUPPLY ASSEMBLY 8
ELECTRICAL PARTS 9

Notes : DESTINATION ABBREVIATIONS

A : Australian model	M : South African model
B : British model	O : Chinese model
C : Canadian model	Q : South-east Asia model
D : German model	T : Taiwan model
E : European model	U : U.S.A. model
F : French model	V : General export model (110V)
H : North European model	W: General export model (220)
I : Indonesian model	N,X : General export model
J : Japanese model	Y : Export model

■ WARNING

Components having special characteristics are marked ⚠ and must be replaced with parts having specification equal to those originally installed.

- The numbers “QTY” show quantities for each unit.
- The parts with “--” in “PART NO.” are not available as spare parts.
- This mark “ } ” in the REMARKS column means these parts are interchangeable.
- The second letter of the shaded ( ) part number is O, not zero.
- The second letter of the shaded ( ) part number is I, not one.

OVERALL ASSEMBLY

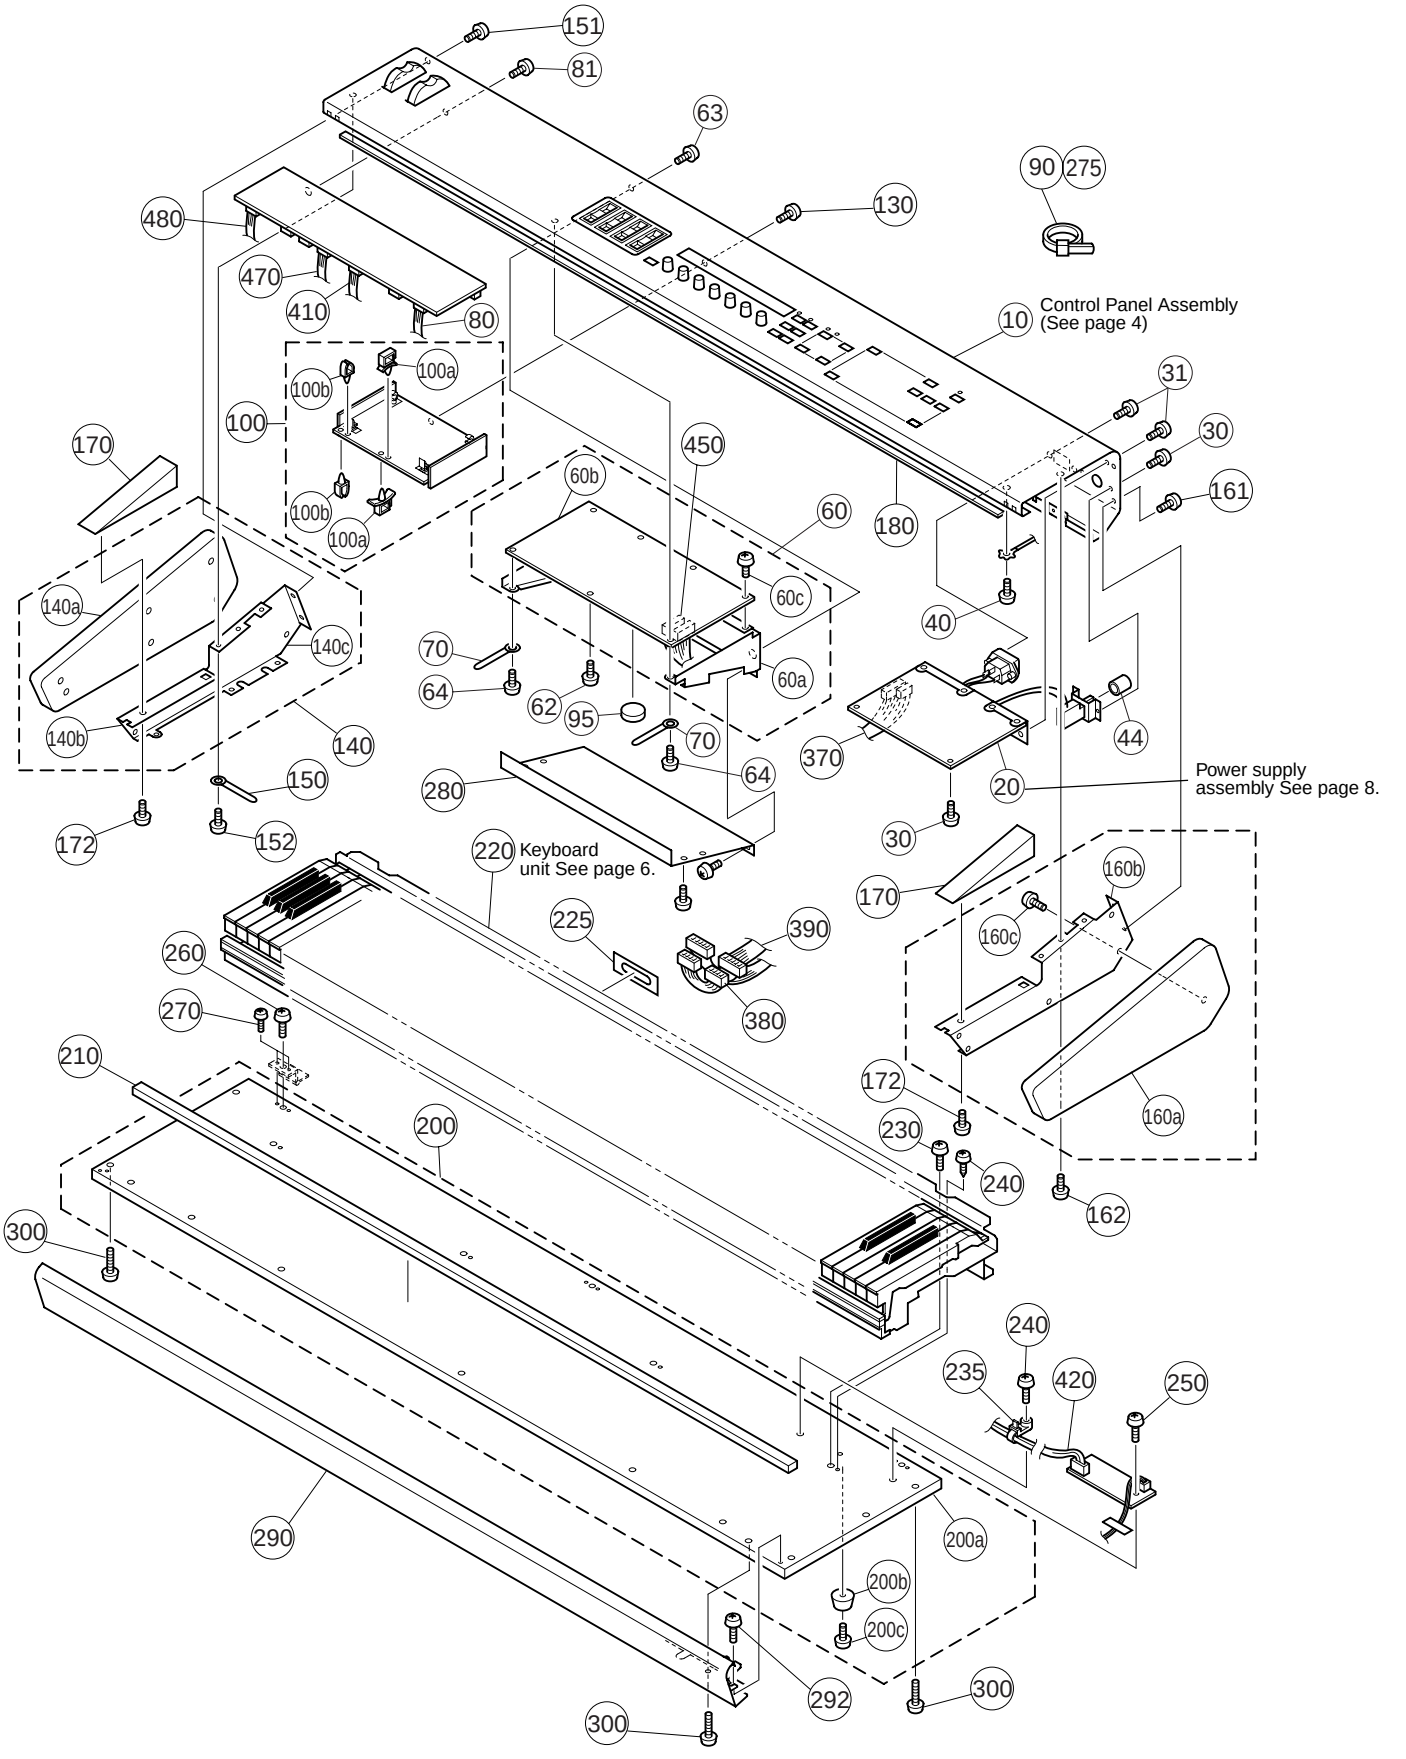

	REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
			OVERALL ASSEMBLY			S80 J,U,E,B		
		--	Overall Assembly	J		J (V418590)		
		--	Overall Assembly	U		U (V418600)		
		--	Overall Assembly	E		E,B (V418610)		
	10	--	Control Panel Assembly			(V419070)		
	20	--	Power Supply Assembly	J		J,U (V418620)		
	20	--	Power Supply Assembly	E		E,B (V418630)		
	30	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			4	01
	31	VQ049800	Bonding Tapping Screw-B	3.0X10 MFZN2BL			7	01
	40	EG340190	Bind Head Tapping Screw-B	4.0X8 MFZN2BL				01
	41	CB069250	Cord Holder	BK-1				01
	44	CB825380	Push Button			POWER ON/OFF		03
	52	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			2	01
	60	--	Circuit Board Assembly	DM		(V419160)		
*	60a	--	DM Shield Plate			(V389070)		
	60b	V3576400	Circuit Board	DM				
	60c	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			4	01
	62	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			2	01
	63	VQ049800	Bonding Tapping Screw-B	3.0X10 MFZN2BL			3	01
	64	EP600190	Bind Head Tapping Screw-B	3.0X8 MFZN2BL				01
	70	CB829850	Cord Binder	S-34Z			2	03
*	80	V3577000	Circuit Board	JK				
	81	VQ049800	Bonding Tapping Screw-B	3.0X10 MFZN2BL			9	01
	90	CB069250	Cord Holder	BK-1			5	01
	95	VN103500	Lithium Battery	CR2032				03
	100	--	PLG Angle Assembly			(V481450)		
	110	CB069250	Cord Holder	BK-1				01
	130	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			3	01
	140	--	Arm Assembly	LEFT		(V419080)		
*	140a	V4062400	Arm	LEFT				
	140b	--	Side Angle	1.0 LEFT		(V388980)		
	140C	EP040230	Bind Head Tapping Screw-1	4.0X14 MFZN2Y			6	01
	150	CB502030	Cord Binder	S-75B				03
	151	VQ049800	Bonding Tapping Screw-B	3.0X10 MFZN2BL			2	01
	152	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			3	01
	160	--	Arm Assembly	RIGHT		(V419090)		
*	160a	V4062500	Arm	RIGHT				
	160b	--	Side Angle	1.0 RIGHT		(V388990)		
	160C	EP040230	Bind Head Tapping Screw-1	4.0X14 MFZN2Y			6	01
	161	VQ049800	Bonding Tapping Screw-B	3.0X10 MFZN2BL			2	01
	162	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			3	01
*	170	V4165300	End Block				2	05
	172	EP600190	Bind Head Tapping Screw-B	3.0X8 MFZN2BL			2	01
*	180	V4063000	Felt	5X1128X1 RE				03
*	200	V4191000	Bottom Assembly					15
	200a	--	Bottom Board			(V406450)		
	200b	VR707800	Foot	K3019			5	02
	200c	EG340410	Bind Head Screw-1	4.0X20 MFZN2Y			5	01
	210	VK020200	Cushion	88KEY				06
	215	--	Flat Cable Clamp	LFC-30N		(V439780)	2	
	220	VQ996900	Keyboard Unit	A88 K6				58
	225	--	Edge Prevention Sheet			(V442950)		
	227	CB836190	Clamp	CKN-10			2	
	230	EG340210	Bind Head Screw	4.0X14 MFZN2Y			4	01
	235	--	Cord Holder	T30MR		(VQ40440)	2	
	237	--	Contact	0.2		(V481430)	8	
	240	EP030240	Bind Head Tapping Screw-1	3.5X12 MFZN2Y			6	01
	242	VD278600	Bind Head Tapping Screw-1	3.5X8 MFZN2Y			6	01
	250	EG330360	Bind Head Screw	3.0X6 MFZN2BL			2	01
	260	EG340210	Bind Head Screw	4.0X14 MFZN2Y			3	01
	270	EP030240	Bind Head Tapping Screw-1	3.5X12 MFZN2Y			6	01
	275	CB069250	Cord Holder	BK-1			4	01
	276	--	Reuse Band	RSG-100		(V474980)		
	280	--	DM Shield Cover			(V389080)		
	282	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			23	01
	285	--	Shield Angle	0.8		(V481480)		
	287	--	Contact	0.2		(VH46750)	3	
*	290	V4165800	Front Rail					
	292	EP030240	Bind Head Tapping Screw-1	3.5X12 MFZN2Y			2	01
	295	--	Toothed Lock Washer	5.0 MFZN2BL		(0376710)	5	

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
300	VB857600	Bind Head Screw	5.0X20 MFZN2BL			13	01
370	--	Connector Assembly	11P 1450L PS		(V478850)		
380	--	Connector Assembly	MK2		(VC53350)		
390	--	Connector Assembly	MK1		(VC53340)		
400	--	Connector Assembly	KRD 9P+15P		(V491530)		
420	--	Connector Assembly	4P-8P 1350L AFTER		(V381310)		
450	--	Connector Assembly	15P 400L PULG		(V478870)		
470	--	Connector Assembly	5P 500L(S) DM-IND		(V446230)		
480	--	Connector Assembly	4P 350L(S) DM-JK		(V417620)		
		ACCESSORIES					
⚠	VT119800	AC Cord	J 7A 125V 3P 2.5M		J		06
⚠	VB927800	AC Cord	CSA		U		08
⚠	VB928000	AC Cord	VDE		E		08
⚠	VP204400	AC Cord	BS		B		10
⚠	VQ240200	Adapter, AC Cord	KPR-24		J		06
*	--	CD-ROM	74min. 12cm		(XW444B00)		

*: New Parts

RANK: Japan only

CONTROL PANEL ASSEMBLY

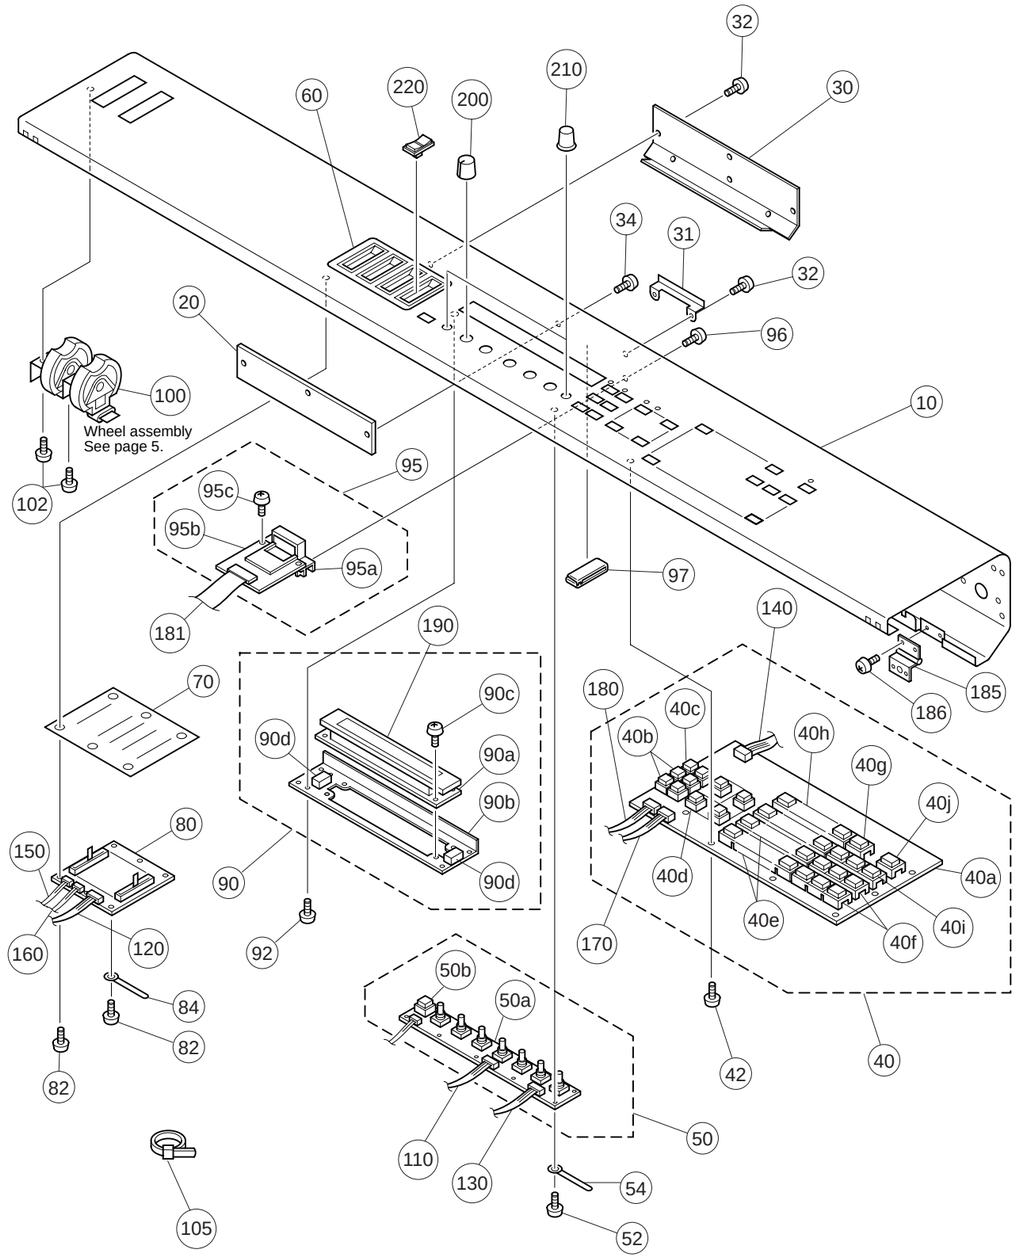

	REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
			CONTROL PANEL ASSEMBLY			S80		
		--	Control Panel Assembly			(V419070)		
*	10	V4165700	Control Panel					
	20	--	Cover (B)			(V419540)		
	30	--	PLG Cover			(V416590)		
	31	--	AS Angle, Bracket	K-AA		(V388320)		
	32	EP630210	Bind Head Tapping Screw-S	3.0X6 MFZN2BL			2	01
*	33	V4810700	Coin Screw	3.0X6			3	
	34	VS863000	Flat Head Screw	3.0X6 MFZN2BL			3	01
	40	--	Circuit Board Assembly	PN		(V419120)		
*	40a	V3576600	Circuit Board	PN				
*	40b	V4162900	Push Button	M2G		EXIT-ENTER,DEC/NO-INC/YES	2	
*	40c	V4162700	Push Button	M2B		EF BYPASS-MASTER KEYBOARD		
*	40d	V4162600	Push Button	M1B		VOICE,PERFORM,STORE, UTILITY,CARD,SEQ PLAY, EDIT,JOB,PLAY/STOP	9	
	40e	VY864900	Switch Knob	L5B		PRE1-PRE2-INT-EXT-PLG1, 1-5,9-13	3	03
	40f	VY865000	Switch Knob	L3B		6-8,14-16	2	03
	40g	VY865200	Switch Knob	L1B		PLG2		03
	40h	VY864300	Switch Knob	L5G		A-E		03
*	40i	V4195300	Switch Knob	L3G		E-F-G		
	40j	VY864700	Switch Knob	L1G		QUICK ACCESS		03
	42	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			12	01
	45	VP064300	Cord Holder	LWS-IS				03
	50	--	Circuit Board Assembly	RV		(V419130)		
*	50a	V3576700	Circuit Board	RV				
*	50b	V4162800	Push Button	M1G		SHIFT		
	52	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			10	01
	54	CB829850	Cord Binder	S-34Z			2	03
*	60	V3890600	Escutcheon, SVR					
	70	--	Dust Proof Cloth			(V406290)		
*	80	V3576900	Circuit Board	SV				
	82	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			6	01
	84	CB829850	Cord Binder	S-34Z			3	03
	90	--	Display Assembly			(V418580)		
*	90a	V4195900	LCD Assembly					
	90b	--	LCD Support Angle			(V388390)		
	90c	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			3	01
	90d	--	LCD Spacer			(V419800)	2	
	91	--	Shield Bracket	0.8		(V480610)		
	92	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			4	01
	95	--	Smart Media Assembly			(V409770)		
*	95a	V3882500	SM Escutcheon	K-CB				
*	95b	V3577200	Circuit Board	SM				
	95c	EP600190	Bind Head Tapping Screw-B	3.0X8 MFZN2BL			2	01
	96	EP600190	Bind Head Tapping Screw-B	3.0X8 MFZN2BL			2	01
	97	--	Flat Cable Clamp	LFC-30N		(V439780)	2	
	100	--	Wheel Assembly			(V419140)		
	102	EP600230	Bind Head Tapping Screw-B	3.0X6 MFZN2BL			4	01
	105	CB069250	Cord Holder	BK-1			3	01
	110	--	Connector Assembly	10P-650 KRD-KRD		(VK11700)		
	120	--	Connector Assembly	6P-400 KRD-KRD		(VK10960)		
	130	--	Connector Assembly	8P-450 KRD-KRD		(VK11110)		
	140	--	Connector Assembly	7P-700 KRD-KRD		(VK11820)		
	150	--	Connector Assembly	4P 450L(S) DM-MVR		(V434180)		
	160	--	Connector Assembly	5P 650L(S) JK-MVR		(V481400)		
	170	--	Connector Assembly	5P-800 KRD-KRD		(VK12100)		
	180	--	Connector Assembly	3P-300 KRD-KRD		(VK10530)		
	181	--	FFC Cable Assembly	P=1.0-L-26-430		(V381380)		
*	185	V3891000	Hinge	1.6 1 MFZN2-Y			3	
	186	EP640410	Bind Head Tapping Screw-B	4.0X8 MFZN2Y			6	01
	190	--	LCD Cover			(V406210)		
*	200	V3887700	Knob			ASSIGNABLE KNOB	5	
*	210	V3887900	Knob	ENCODER		PAGE,DATA	2	
	220	VM780300	Knob			VOLUME,CONTROL SLIDER	5	03

*: New Parts

RANK: Japan only

WHEEL ASSEMBLY

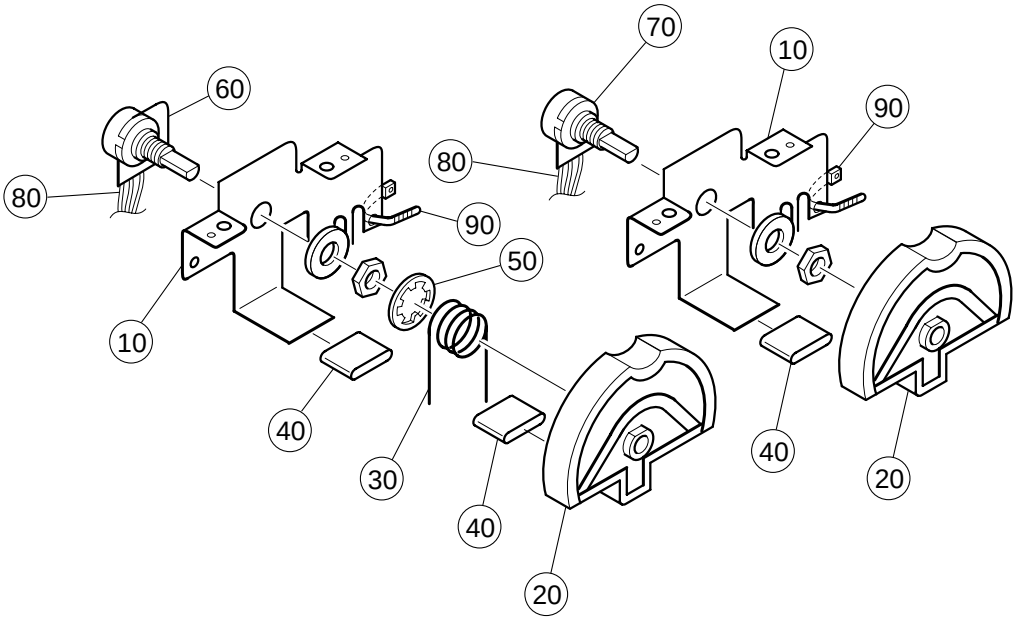

	REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
			WHEEL ASSEMBLY			S80		
		--	Wheel Assembly			(V419140)		
	10	--	Frame, Wheel			(V389030)	2	
*	20	**V4579900**	Wheel				2	
	30	**VC792800**	Spring					01
	40	**CB819020**	Wheel Tube				2	04
	50	**EW600110**	Stop Ring	12.0				01
	60	**VQ764300**	Rotary Variable Resistor	RK1631110T54A 10K				03
	70	**VN245400**	Rotary Variable Resistor	10.0K K161100S				03
	80	--	Connector Assembly	5P 300L+X WHEEL		(V381300)		
	90	**CB069250**	Cord Holder	BK-1			2	01

✻: New Parts

RANK: Japan only

KEYBOARD UNIT

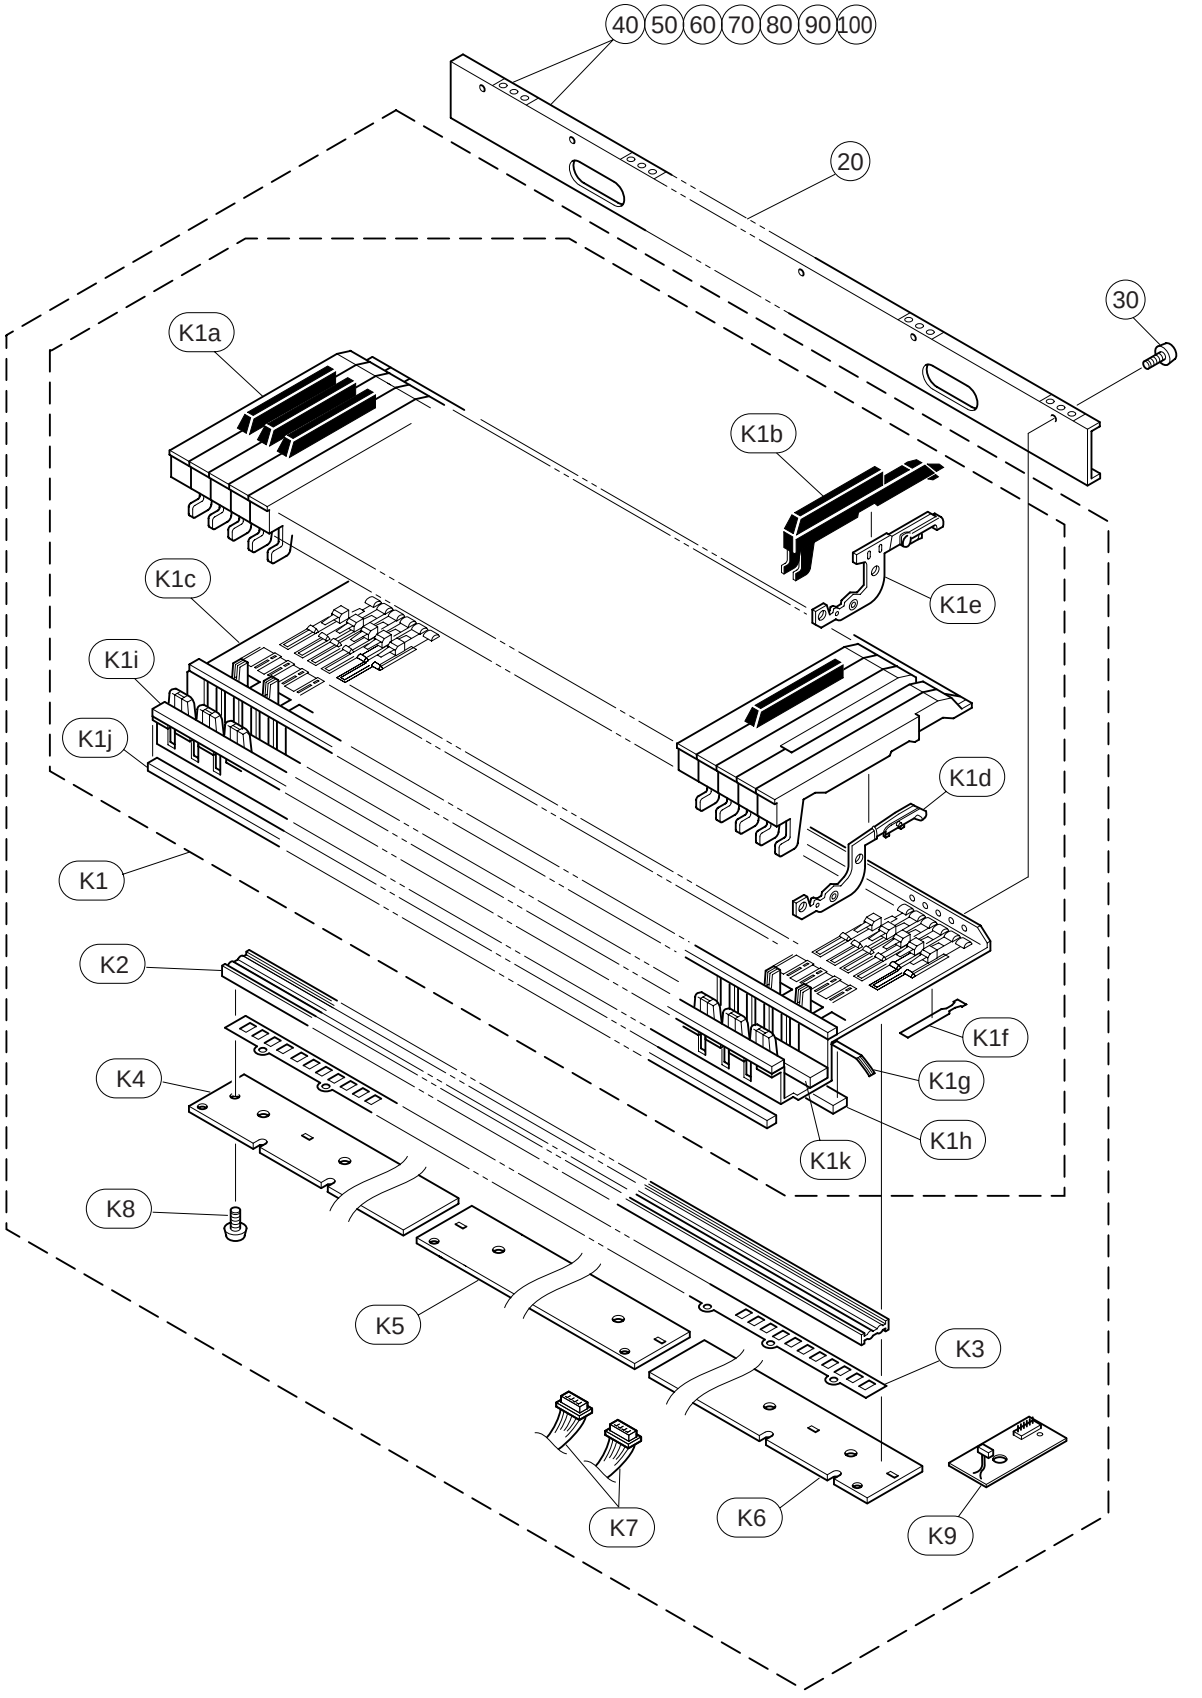

REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
		KEYBOARD UNIT			S80		
	VQ996900	Keyboard Unit	A88 K6				58
10	**--**	Keyboard Assembly	AE2		(VQ99700)		
20	**VD526300**	Holder, Keyboard	AE2				08
30	**VT647800**	Bind Head Tapping Screw-C	4.0X6 MFZN2			8	01
40	**--**	Spacer	T=0.5		(VD48480)		
50	**--**	Spacer	T=1.0		(VD48490)		
60	**--**	Spacer	T=0.8		(VD51810)		
70	**--**	Spacer	T=0.35		(VD51820)		
80	**--**	Spacer	T=0.25		(VD51830)		
90	**--**	Spacer	T=1.25		(VF51760)		
100	**--**	Spacer	T=1.5		(VF51770)		
	--	Keyboard Assembly	AE2		(VQ99700)		
K1	**--**	MK Frame Assembly	AE 88		(VQ99710)		
K1a	**VM890700**	White Key	C			7	04
K1a	**VM890800**	White Key	D			7	04
K1a	**VM890900**	White Key	E			7	04
K1a	**VM891000**	White Key	F			7	04
K1a	**VM891100**	White Key	G			7	04
K1a	**VM891200**	White Key	A			7	04
K1a	**VM891300**	White Key	B			8	04
K1a	**VM891400**	White Key	C'				05
K1a	**VM891700**	White Key	A'				05
K1b	**VM891800**	Black Key				36	04
K1c	**--**	Frame	AE2 A88		(VC50910)		
K1d	**VM892400**	Hammer Assembly, White Key	AE2			52	05
K1e	**VM892500**	Hammer Assembly. Black Key	AE2			36	05
K1f	**VM958100**	Key Spring	AE2			88	03
K1g	**VQ988300**	PC Sensor	MK-AE88TO-1				19
K1h	**--**	Cushion			(VI43720)		
K1i	**--**	Cushion			(VQ98820)		
K1j	**--**	Felt			(VC98520)		
K1k	**--**	Felt			(VP28320)		
K2	**VN474300**	Rubber Contact	BE				11
K3	**VC799300**	Insulation Spacer					03
K4	**VC796500**	Circuit Board	AE 88L				09
K5	**VC796300**	Circuit Board	AE C				10
K6	**VC796600**	Circuit Board	AE 88H				08
K7	**VC815200**	Connector Assembly	16P 110 NRD-NRD				06
K8	**VT413400**	Bind Head Tapping Screw-P	3.0X10 MFZN2			15	01
K9	**VR659700**	Circuit Board	PC				10

✻: New Parts

RANK: Japan only

POWER SUPPLY ASSEMBLY

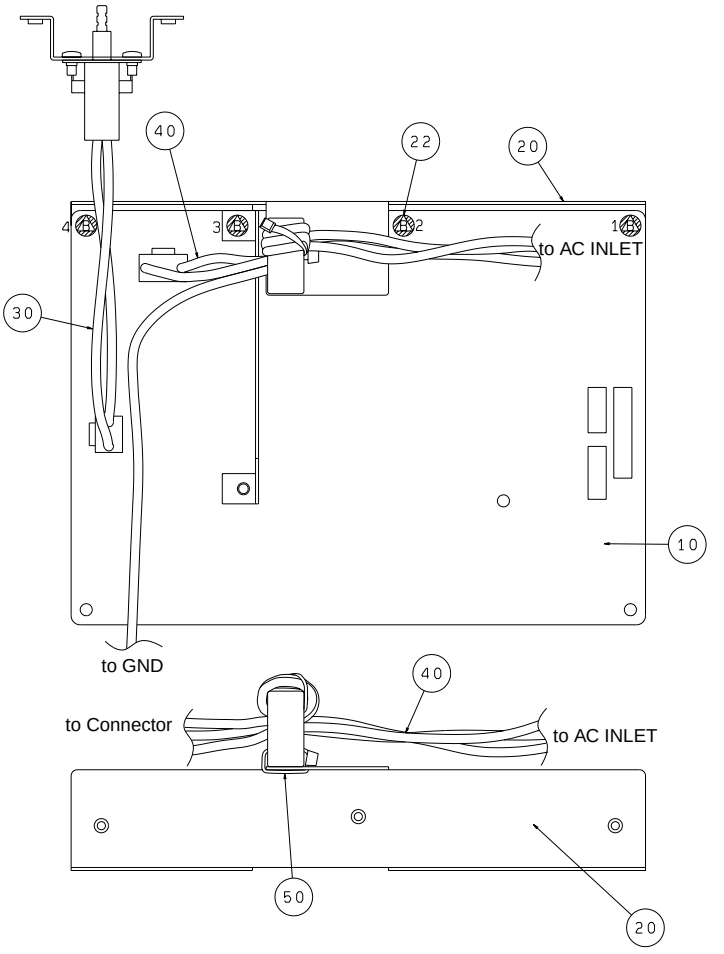

	REF NO.	PART NO.	DESCRIPTION			REMARKS		QTY	RANK
			POWER SUPPLY ASSEMBLY			S80			
		--	Power Supply Assembly	J		J,U	(V418620)		
		--	Power Supply Assembly	E		E,B	(V418630)		
⚠ *	10	**V3484100**	Power Supply Unit	J,U,C		J,U			
⚠ *	10	**V3484200**	Power Supply Unit	E B A		E,B			
	20	--	Holder, Power Switch	1.0			(V389010)		
	22	**EP600230**	Bind Head Tapping Screw-B	3.0X6 MFZN2BL				4	01
	30	--	PSW Assembly				(V419150)		
*	30a	**VZ068800**	Power Switch Assembly	3P 100L PSW		with power switch			
	30aa	**VP691000**	Push Switch	SDDLB1					03
	30b	**EG330360**	Bind Head Screw	3.0X6 MFZN2BL				2	01
*	40	**V3814200**	Connector Assembly	ACIN3P-2F+1		with AC inlet			
	40a	**VL785200**	AC-IN Connector	ACINLET AC-P01CR02					03
	50	**CB069250**	Cord Holder	BK-1				2	01

*: New Parts

RANK: Japan only

■ ELECTRICAL PARTS

	REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
			ELECTRICAL PARTS					
		VC796500	Circuit Board	AE 88L		(XC264B0)		09
		VC796300	Circuit Board	AE C		(XC262B0)		10
		VC796600	Circuit Board	AE 88H		(XC265B0)		08
*		**V3576400**	Circuit Board	DM		(XV911B0)		
*		**V3577000**	Circuit Board	JK		(XV914C0)		
		VR659700	Circuit Board	PC		(XL057A0)		10
*		**V3576600**	Circuit Board	PN		(XV912B0)		
*		**V3576700**	Circuit Board	RV		(XV912B0)		
*		**V3577200**	Circuit Board	SM		(XV915C0)		
*		**V3576900**	Circuit Board	SV		(XV913B0)		
		VC796500	Circuit Board	AE 88L		(XC264B0)		09
		VT212600	Diode	HSS104TA				01
		LB918160	Base Post Connector	16P TE				01
		LB918120	Base Post Connector	12P TE				02
		--	Dust Proof Cloth			(VD43890)		
		VC796300	Circuit Board	AE C		(XC262B0)		10
		VT212600	Diode	HSS104TA				01
		LB918160	Base Post Connector	16P TE				01
		LB918120	Base Post Connector	12P TE				02
		--	Dust Proof Cloth			(VD43880)		
		VC796600	Circuit Board	AE 88H		(XC265B0)		08
		VT212600	Diode	HSS104TA				01
		LB918160	Base Post Connector	16P TE				01
		--	Dust Proof Cloth			(VD43900)		
*		**V3576400**	Circuit Board	DM		(XV911B0)		
	BT1	**VN103600**	Battery Holder	CR2032				03
	CN1	**LB918110**	Base Post Connector	11P TE				01
	CN4	**VF283300**	Connector Base Post	15P TE				01
	CN5	**VB390100**	Connector Base Post	5P TE				01
	CN6	**VB390600**	Connector Base Post	10P TE				01
	CN7	**VB390200**	Connector Base Post	6P TE				01
	CN8	**VB390500**	Connector Base Post	9P TE				03
	CN11	**VB390000**	Connector Base Post	4P TE				01
	CN12	**VK690400**	Header, Flat Cable	14P TE				02
	CN13	**VB389800**	Connector Base Post	2P TE				01
	CN14	**VB390400**	Connector Base Post	8P TE				01
	CN15	**VE352600**	Connector Base Post	14P TE				01
	CN16	**VF283300**	Connector Base Post	15P TE				01
	CN17	**VB390300**	Connector Base Post	7P TE				01
	CN18	**VM673300**	Header	HIF3FC26PA-2.54DSA				03
	CN19	**VB390000**	Connector Base Post	4P TE				01
	CN20	**VB390100**	Connector Base Post	5P TE				01
	CN21	**VB390400**	Connector Base Post	8P TE				01
	CN22	**--**	Connector	26P TE		(V353210)		
	CN102	**LB918120**	Base Post Connector	12P TE				02
	CN103	**LB918160**	Base Post Connector	16P TE				01
	D1	**VT332900**	Diode	1SS355 TE-17				01
	-6	**VT332900**	Diode	1SS355 TE-17				01
	D8	**VT332900**	Diode	1SS355 TE-17				01
	-12	**VT332900**	Diode	1SS355 TE-17				01
	D14	**VT332900**	Diode	1SS355 TE-17				01
	D15	**VT332900**	Diode	1SS355 TE-17				01
	D17	**VT332900**	Diode	1SS355 TE-17				01
	-19	**VT332900**	Diode	1SS355 TE-17				01
	D20	**VS201100**	Diode	D1F60				01
	D22	**VT332900**	Diode	1SS355 TE-17				01
	-24	**VT332900**	Diode	1SS355 TE-17				01
	D41	**VT332900**	Diode	1SS355 TE-17				01
	D42	**VT332900**	Diode	1SS355 TE-17				01
	D49	**VV220700**	Diode	RB501V-40				01
	-51	**VV220700**	Diode	RB501V-40				01
	D52	**VS201100**	Diode	D1F60				01
	-55	**VS201100**	Diode	D1F60				01
	D57	**VT332900**	Diode	1SS355 TE-17				01
	-60	**VT332900**	Diode	1SS355 TE-17				01

*: New Parts

RANK: Japan only

	REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
	D61	**VS201100**	Diode	D1F60				01
	D62	**VS201100**	Diode	D1F60				01
	D65	**VT332900**	Diode	1SS355 TE-17				01
	D66	**VT332900**	Diode	1SS355 TE-17				01
	D68	**VT332900**	Diode	1SS355 TE-17				01
	-71	**VT332900**	Diode	1SS355 TE-17				01
	D73	**VV220700**	Diode	RB501V-40				01
	EM1	**VD542700**	LC Filter	DSS306-93F223Z1				01
	-6	**VD542700**	LC Filter	DSS306-93F223Z1				01
	EM8	**VD542700**	LC Filter	DSS306-93F223Z1				01
	-13	**VD542700**	LC Filter	DSS306-93F223Z1				01
	EM15	**VD542700**	LC Filter	DSS306-93F223Z1				01
	-17	**VD542700**	LC Filter	DSS306-93F223Z1				01
*	IC1	**XW419400**	IC	HD6437045E24F		CPU		
*	IC2	**XW420300**	IC	28F160S5		FLASH ROM1 16M 478V120L		
*	IC3	**XW421300**	IC	28F160S5		FLASH ROM2 16M 478V120H		
	IC4	**XV976A00**	IC	M5M51008CFP-70H		SRAM 1M		07
	IC5	**XV976A00**	IC	M5M51008CFP-70H		SRAM 1M		07
	IC6	**XV077A00**	IC	MSM514260C-60JS		DRAM 4M		07
	IC7	**XI686A00**	IC	M62021FP		SYSTEM RESET		04
	IC8	**XD657A00**	IC	TC74HC14AF-TP1		INVERTER		02
*	IC9	**XV833A00**	IC	MBCG46183-129		GATE ARRAY		
	IC10	**XM234A00**	IC	HD63B01Y0RCE0F		CPU		08
	IC11	**XT487A00**	IC	TC74VHC245F		TRANSCEIVER		03
	IC12	**XV103A00**	IC	M5M34051FP		LINE TRANSCEIVER		05
	IC13	**XS790A00**	IC	TC74HC4052AF		MPX		02
	-16	**XS790A00**	IC	TC74HC4052AF		MPX		02
	IC17	**XD657A00**	IC	TC74HC14AF-TP1		INVERTER		02
	IC18	**XP003A00**	IC	TC74HC74AF		D-FF		01
	IC19	**XP003A00**	IC	TC74HC74AF		D-FF		01
	IC20	**XD657A00**	IC	TC74HC14AF-TP1		INVERTER		02
	IC21	**XI348A00**	IC	SC7SU04FEL		INVERTER		01
	IC22	**XD657A00**	IC	TC74HC14AF-TP1		INVERTER		02
	IC23	**XQ138A00**	IC	NJM4556AMT1		OP AMP		03
	IC26	**XS048A00**	IC	HD74LVC139FPEL		DEMULTIPLEXER		03
	IC27	**XH223A00**	IC	SN74HC273NSR		D-FF		01
	IC28	**XH223A00**	IC	SN74HC273NSR		D-FF		01
	IC29	**XN963A00**	IC	TC74VHC32F		OR		01
	IC30	**XR682A00**	IC	TC7S66F		ANALOG SW		01
	IC31	**XD838A00**	IC	SN74HC245NSR		BUFFER		04
	IC32	**XD657A00**	IC	TC74HC14AF-TP1		INVERTER		02
	IC34	**VN686000**	Photo Coupler	PC410T				04
	IC36	**XS725A00**	IC	TC203C760HF-002		SWP30B		19
	IC37	**XS516A00**	IC	UPC2933T-E1		REGULATOR +3.3V		03
	IC38	**XV077A00**	IC	MSM514260C-60JS		DRAM 4M		07
	IC42	**XS048A00**	IC	HD74LVC139FPEL		DEMULTIPLEXER		03
*	IC43	**XW333A00**	IC	MX23C6410TC-10		MASK ROM 64M		
*	IC44	**XW335A00**	IC	MX23C3210TC-10		MASK ROM 32M		
*	IC45	**XW334A00**	IC	MX23C6410TC-10		MASK ROM 64M		
*	IC46	**XW336A00**	IC	MX23C3210TC-10		MASK ROM 32M		
	IC50	**XV242A00**	IC	TC74VHCT245AF		BUS TRNSCEIVER		03
	IC51	**XN969A00**	IC	TC74VHC244F		BUS BUFFER		03
	IC52	**XN971A00**	IC	TC74VHC273F		D-FF		03
	IC54	**XM332A00**	IC	TC74VHC04F		INVERTER		01
	IC55	**XN963A00**	IC	TC74VHC32F		OR		01
	IC56	**XP713A00**	IC	MM1180ZTT		REGULATOR +3.3V		02
	IC60	**XM326B00**	IC	JG710069		DDE1		04
	IC61	**XM145A00**	IC	UPD63200GS		DAC		07
	IC62	**XF291A00**	IC	UPC4570G2		OP AMP		03
	IC63	**XM326B00**	IC	JG710069		DDE1		04
	IC64	**XM145A00**	IC	UPD63200GS		DAC		07
	IC65	**XF291A00**	IC	UPC4570G2		OP AMP		03
	IC66	**XU770A00**	IC	PCM1800E/2K		A/D CONVERTER		07
	IC68	**XF291A00**	IC	UPC4570G2		OP AMP		03
	IC71	**XJ598A00**	IC	NJM78L05UA		REGULATOR +5V		02
	IC72	**XN086A00**	IC	NJM79L05UA		REGULATOR -5V		02
	IC73	**XT229A00**	IC	TC74VHC00F		NAND		01
	IC74	**XF291A00**	IC	UPC4570G2		OP AMP		03
	IC75	**XQ173A00**	IC	TC7W32FU(TE12L)		OR		01
	IC100	**XD657A00**	IC	TC74HC14AF-TP1		INVERTER		02

*: New Parts

RANK: Japan only

	REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
	IC101	**XT487A00**	IC	SN74VHC245F		BUFFER		03
*	IC102	**XW357A00**	IC	DS90C402M		LINE RECEIVER		
	IC103	**XN966A00**	IC	TC74VHC157F		MULTIPLEXER		02
	L2	**VL139800**	Coil	BLM31A700SPT 70				01
	L3	**VR579900**	Chip Inductance	BK2125HS601-T				01
	-30	**VR579900**	Chip Inductance	BK2125HS601-T				01
	L32	**VR579900**	Chip Inductance	BK2125HS601-T				01
	-35	**VR579900**	Chip Inductance	BK2125HS601-T				01
	L46	**VR579900**	Chip Inductance	BK2125HS601-T				01
	L49	**VR579900**	Chip Inductance	BK2125HS601-T				01
	L52	**VR579900**	Chip Inductance	BK2125HS601-T				01
	-62	**VR579900**	Chip Inductance	BK2125HS601-T				01
	L64	**VR579900**	Chip Inductance	BK2125HS601-T				01
	-67	**VR579900**	Chip Inductance	BK2125HS601-T				01
	L70	**VQ724900**	Chip Inductance	BK2125HM601-T				01
	L102	**VR579900**	Chip Inductance	BK2125HS601-T				01
	L103	**VR579900**	Chip Inductance	BK2125HS601-T				01
	L106	**VR579900**	Chip Inductance	BK2125HS601-T				01
	-112	**VR579900**	Chip Inductance	BK2125HS601-T				01
	L114	**VR579900**	Chip Inductance	BK2125HS601-T				01
	RA1	**RE044680**	Resistor Array	68X4				01
	-15	**RE044680**	Resistor Array	68X4				01
	RA16	**RE047100**	Resistor Array	10KX4				01
	-27	**RE047100**	Resistor Array	10KX4				01
	RA28	**RE044680**	Resistor Array	68X4				01
	RA29	**RE047100**	Resistor Array	10KX4				01
	RA30	**RE044680**	Resistor Array	68X4				01
	RA31	**RE047100**	Resistor Array	10KX4				01
	-33	**RE047100**	Resistor Array	10KX4				01
	RA34	**RE047150**	Resistor Array	15KX4				01
	RA35	**RE047150**	Resistor Array	15KX4				01
	RA36	**RE047220**	Resistor Array	22KX4				01
	RA37	**RE047220**	Resistor Array	22KX4				01
	RA38	**RE047150**	Resistor Array	15KX4				01
	RA39	**RE047150**	Resistor Array	15KX4				01
	RA40	**RE047220**	Resistor Array	22KX4				01
	RA41	**RE047100**	Resistor Array	10KX4				01
	RA42	**RE047220**	Resistor Array	22KX4				01
	RA43	**RE047220**	Resistor Array	22KX4				01
	RA44	**RE047100**	Resistor Array	10KX4				01
	-48	**RE047100**	Resistor Array	10KX4				01
	RA50	**RE044680**	Resistor Array	68X4				01
	RA51	**RE044680**	Resistor Array	68X4				01
	RA60	**RE044680**	Resistor Array	68X4				01
	-74	**RE044680**	Resistor Array	68X4				01
	RA82	**RE047100**	Resistor Array	10KX4				01
	RA83	**RE047100**	Resistor Array	10KX4				01
	RA85	**RE048100**	Resistor Array	100KX4				01
	RA86	**RE048100**	Resistor Array	100KX4				01
	TR1	**VD303700**	Transistor	2SC3326 A,B TE85R				01
	TR2	**VJ927200**	Transistor	2SA1162 O,Y				01
	TR3	**VJ927100**	Transistor	2SC2712 Y				01
	TR4	**VJ927200**	Transistor	2SA1162 O,Y				01
	TR5	**VJ927100**	Transistor	2SC2712 Y				01
	TR6	**VJ927100**	Transistor	2SC2712 Y				01
	TR7	**VD303700**	Transistor	2SC3326 A,B TE85R				01
	-10	**VD303700**	Transistor	2SC3326 A,B TE85R				01
	TR11	**VJ927200**	Transistor	2SA1162 O,Y				01
	TR12	**VD303700**	Transistor	2SC3326 A,B TE85R				01
	X1	**VV762900**	Quartz Crystal Unit	7M SMD-49				03
	X2	**VY681200**	Ceramic Resonator	8M CSTCC8.00MG				01
	X3	**VV345500**	Quartz Crystal Unit	DOC-49S5				05
	ZD1	**VU171500**	Zener Diode	UDZ 3.6BTE-17 3.6V				01
		UB012390	Monolithic Ceramic Cap.	B 390P 50V K		C:293		01
		UB012470	Monolithic Ceramic Cap.	B 470P 50V K		C:9,289,290		01
		UB012680	Monolithic Ceramic Cap.	B 680P 50V K		C:253,255,260,262,273, 275,279,281		01
		UB013100	Monolithic Ceramic Cap.	B 1000P 50V K		C:121-129		01
		UB013150	Monolithic Ceramic Cap.	B 1500P 50V K		C:294		01
		UB013220	Monolithic Ceramic Cap.	B 2200P 50V K		C:97,99,110		01

*: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
	UB013560	Monolithic Ceramic Cap.	B 5600P 50V K		C:252,259,272,278		01
	UB044100	Monolithic Ceramic Cap.	F 0.01 50V Z		C:98,100,214,215,338		01
	UB044680	Monolithic Ceramic Cap.	F 0.068 50V Z		C:197,198		01
	UB051220	Monolithic Ceramic Cap.	SL 22P 50V J		C:5,6		01
	UB051470	Monolithic Ceramic Cap.	SL 47P 50V J		C:59-85,333		01
	UB051680	Monolithic Ceramic Cap.	SL 68P 50V J		C:256,263,276,282		01
	UB052100	Monolithic Ceramic Cap.	SL 100P 50V J		C:86-93,254,261,274,280,322,327		01
	UB245100	Monolithic Ceramic Cap.	F 0.1 25V Z		C:1,3,8,10-12,14-18,22, 23,25-27,30,33-35, 38-40,42,94-96,101-107, 109,111-113,119,120,138, 140,141,143,145,151-158, 160-166,170-173,177, 210-212,217,218,246, 248, 266,268,283,284,288,302, 303,305,310,311,314,315, 317,318,320,321,325,326, 334-337,600-603		01
	VJ927300	Monolithic Ceramic Cap.	1.5 16V F		C:36,37		01
	UF037100	Electrolytic Cap. (chip)	10 16V		C:2,4,13,19,28,45,108, 142,168,245,258,265, 271,277,287,291,312, 316,329-332		01
	UF037470	Electrolytic Cap. (chip)	47 16V		C:24,41,44,167,247,249, 250,267,269,270,605		01
	UF038100	Electrolytic Cap. (chip)	100 16V		C:219		01
	UF046470	Electrolytic Cap. (chip)	4.7 25V		C:285,286,323		01
	UF066330	Electrolytic Cap. (chip)	3.3 50V		C:29		01
	UF138220	Electrolytic Cap. (chip)	220 16V UUR1C2		C:21,47,117,118		01
	UF147470	Electrolytic Cap. (chip)	47 25V UUR1E4		C:308,309,313		01
	UF148220	Electrolytic Cap. (chip)	220 25V UUR1E2		C:307,328		01
	UR629220	Electrolytic Cap.	2200 10.0V		C:20		
	VP473600	Electrolytic Cap.	100.00 10.0V		C:139,159,169,175, 194-196,201,604		01
*	**VP473700**	Electrolytic Cap.	220.00 10.0V		C:142,144,200,202,216		
	RD250000	Carbon Resistor (chip)	0.0 0.0 J		C:7,115,116,130-137		01
	RD250000	Carbon Resistor (chip)	0.0 0.0 J		R:66,92,141,142,150,151, 155,157,215,261, 272-277,299-302,500-503, 515,533-536		01
	RD153470	Carbon Resistor (chip)	4.7 1/4 J		R:67		01
	RD254100	Carbon Resistor (chip)	10.0 0.1 J		R:121,128		01
	RD254680	Carbon Resistor (chip)	68.0 0.1 J		R:6-8,97,98,143,144		01
	RD255100	Carbon Resistor (chip)	100.0 0.1 J		R:62,100,101,116,136, 148,230,269-271,298,506, 507,514		01
	RD255120	Carbon Resistor (chip)	120.0 0.1 J		R:258		01
	RD255150	Carbon Resistor (chip)	150.0 0.1 J		R:235		01
	RD255180	Carbon Resistor (chip)	180.0 0.1 J		R:56-61,63-65,96,114,115, 117		01
	RD255220	Carbon Resistor (chip)	220.0 0.1 J		R:5,26-29,124		01
	RD255470	Carbon Resistor (chip)	470.0 1/4 J		R:231,232,304		
	RD255680	Carbon Resistor (chip)	680.0 0.1 J		R:2,35,259,268		01
	RD256100	Carbon Resistor (chip)	1.0K 0.1 J		R:18-25,30,31,70,73,76, 79,86,102,103,123,195, 200,205,210,227,245, 255,257,290-293		01
	RD256330	Carbon Resistor (chip)	3.3K 0.1 J		R:4,39,252		01
	RD256470	Carbon Resistor (chip)	4.7K 0.1 J		R:250,251,306,508,510, 512,513		01
	RD256680	Carbon Resistor (chip)	6.8K 0.1 J		R:196,197,201,202,206, 207,211,212,254		01
	RD257100	Carbon Resistor (chip)	10.0K 0.1 J		R:1,10,11,13,14,32-34,36, 38,42,45-49,53,54,80, 88-90,99,104,118-120, 122,129,130,140,145, 152,160,161,164,190, 191,198,199,203, 204, 208,209,213,214, 217-219,225,228,234,		01

*: New Parts

RANK: Japan only

	REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
						237-240,242,246-248,		
						256,266,294-297,305,		
						509,511,529-530		
		RD257220	Carbon Resistor (chip)	22.0K 0.1 J		R:16,17,87		01
		RD257330	Carbon Resistor (chip)	33.0K 0.1 J		R:193,253		01
		RD257470	Carbon Resistor (chip)	47.0K 0.1 J		R:40,41,243		01
		RD257680	Carbon Resistor (chip)	68.0K 0.1 J		R:69,75		01
		RD258100	Carbon Resistor (chip)	100.0K 0.1 J		R:12,50,51,71,72,77,78,		01
						229,233,241,262-265,		
						286-289,303,307		
		RD258220	Carbon Resistor (chip)	220.0K 0.1 J		R:68,74,236		01
		RD258470	Carbon Resistor (chip)	470.0K 0.1 J		R:94,95,162,163,165		01
		RD258680	Carbon Resistor (chip)	680.0K 0.1 J		R:37		01
		VI192500	Carbon Resistor (chip)	100.0 1/10 D		R:405,505		01
		VI197400	Carbon Resistor (chip)	10.0K 1/10 D		R:44,45		01
*		**V3577000**	Circuit Board	JK		(XV914C0)		
		VA078900	Jumper Wire	0.55				
	20	**--**	Angle	JKAD		(V388510)		
	30	**--**	Angle	JKBC		(V388520)		
	40	**VU931500**	Holder, Jack					03
	50	**V2192700**	VR Shield					04
	60	**CB069250**	Cord Holder	BK-1				01
	70	**--**	Jack Shield Plate			(V474230)		
	C62	**VA078900**	Jumper Wire	0.55				
	CN1	**VB390100**	Connector Base Post	5P TE				01
	CN2	**VB390100**	Connector Base Post	5P TE				01
	CN3	**LB918050**	Base Post Connector	5P TE				01
	CN4	**VB390400**	Connector Base Post	8P TE				01
	CN5	**VF283300**	Connector Base Post	15P TE				01
	CN6	**VB390100**	Connector Base Post	5P TE				01
	CN7	**VB390500**	Connector Base Post	9P TE				03
	D1	**VB941200**	Diode	1SS133,1SS176				01
	-4	**VB941200**	Diode	1SS133,1SS176				01
	EM1	**FZ006970**	LC Filter	LS MT Y223NB				02
	-3	**FZ006970**	LC Filter	LS MT Y223NB				02
	IC1	**XQ824A00**	IC	NJM4556AD		OP AMP		02
	IC2	**XC520A00**	IC	UPC4570C		OP AMP		01
	-4	**XC520A00**	IC	UPC4570C		OP AMP		01
	J1	**VA078900**	Jumper Wire	0.55				
	J2	**FG644100**	Ceramic Capacitor-F	0.01 50V Z				01
	-5	**FG644100**	Ceramic Capacitor-F	0.01 50V Z				01
	J7	**VA078900**	Jumper Wire	0.55				
	-11	**VA078900**	Jumper Wire	0.55				
	J12	**VI307100**	Monolitic Cera. Cap.	0.1 50V Z T=52				
	J13	**VI307100**	Monolitic Cera. Cap.	0.1 50V Z T=52				
	J16	**VI307100**	Monolitic Cera. Cap.	0.1 50V Z T=52				
	J17	**VA078900**	Jumper Wire	0.55				
	J19	**VA078900**	Jumper Wire	0.55				
	J20	**FG644100**	Ceramic Capacitor-F	0.01 50V Z			01	
	J21	**VA078900**	Jumper Wire	0.55				
	J22	**FG644100**	Ceramic Capacitor-F	0.01 50V Z			01	
	J23	**VA078900**	Jumper Wire	0.55				
	-25	**VA078900**	Jumper Wire	0.55				
	JK1	**VM576000**	Phone Jack	YKB21-5074		PHONES		02
	JK2	**VB312600**	Phone Jack	YKB21-5012		OUTPUT(L/MONO,R)		02
	-5	**VB312600**	Phone Jack	YKB21-5012		INDIVIDUAL OUT (1,2)		02
	JK6	**V2349300**	Phone Jack	HLJ4416 JACK		AD INPUT		03
	JK8	**VJ144000**	DIN Connector	3 DIN YKF51-5041		MIDI(IN,OUT,THRU)		04
	JK9	**VV269500**	DIN Connector	DIN 8P MD-S813		TO HOST		03
	JK10	**VB312600**	Phone Jack	YKB21-5012		FOOT SWITCH		02
	JK11	**VB312600**	Phone Jack	YKB21-5012		SUSTAIN		02
	JK12	**VM576000**	Phone Jack	YKB21-5074		FOOT CONTROLLER		02
	JK13	**VM576000**	Phone Jack	YKB21-5074		FOOT VOLUME		02
	JK14	**VM552100**	Phone Jack	ST HSJ0912-01-01		BREATH		02
	L1	**VB835000**	Coil	FL5R200QNT				01
	-7	**VB835000**	Coil	FL5R200QNT				01
	L8	**VA078900**	Jumper Wire	0.55				
	L9	**VB835000**	Coil	FL5R200QNT				01
	-22	**VB835000**	Coil	FL5R200QNT				01

✻: New Parts

RANK: Japan only

REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
L24	**VB835000**	Coil	FL5R200QNT				01
-32	**VB835000**	Coil	FL5R200QNT				01
L33	**--**	Connector Assembly	JKB-4		(VK26370)		
R84	**VA078900**	Jumper Wire	0.55				
SW1	**VQ665200**	Slide Switch	SSSF144-S06N-0		HOST SELECT		03
TR2	**IC287820**	Transistor	2SC2878 A,B				01
TR4	**IC287820**	Transistor	2SC2878 A,B				01
-9	**IC287820**	Transistor	2SC2878 A,B				01
VR1	**VK312300**	Rotary Variable Resistor	RK09K1110-10KA				01
WJ1	**--**	GND Wire	JK L=80		(V397890)		
	FG612220	Ceramic Capacitor-B	220P 50V K		C:32		01
	FG612470	Ceramic Capacitor-B	470P 50V K		C:13,18,23,28		01
	FG613100	Ceramic Capacitor-B	1000P 50V K		C:3,8,15,20,25,30		01
	FG613150	Ceramic Capacitor-B	1500P 50V K		C:11,16,21,26		01
	FG644100	Ceramic Capacitor-F	0.01 50V Z		C:5,10,37-45,47-56		01
	FG652100	Ceramic Capacitor-SL	100P 50V J		C:1,2,6,7,12,17,22,27,31, 33,34,46,65		01
	UI538100	Electrolytic Cap.	100.00 16.0V		C:4,9		01
	UN837100	Electrolytic Cap.-BP	10.00 16.0V		C:35		01
	UR837220	Electrolytic Cap.	22.00 16.0V		C:14,19,24,29,36		01
	UR847100	Electrolytic Cap.	10.00 25.0V		C:57		01
	UR848100	Electrolytic Cap.	100.00 25.0V		C:58-61		01
	HF454560	Carbon Resistor	56.0 1/4 J		R:59,60		01
	HF455100	Carbon Resistor	100.0 1/4 J		R:7,16,19,27,35,43,52,56, 80,90,91		01 01
	HF455220	Carbon Resistor	220.0 1/4 J		R:5,14,69,72		01
	HF455470	Carbon Resistor	470.0 1/4 J		R:75		01
	HF456100	Carbon Resistor	1.0K 1/4 J		R:25,33,41,49,58,61,62, 71,74,76		01
	HF456180	Carbon Resistor	1.8K 1/4 J		R:77		01
	HF456270	Carbon Resistor	2.7K 1/4 J		R:20,28,36,44,70,73		01
	HF456470	Carbon Resistor	4.7K 1/4 J		R:63,66,78		01
	HF457100	Carbon Resistor	10.0K 1/4 J		R:1,3,4,9,10,12,13,18,21, 26,29,34,37,42,45,50, 55,81,88,89		01
	HF457120	Carbon Resistor	12.0K 1/4 J		R:23,31,39,47		01
	HF457220	Carbon Resistor	22.0K 1/4 J		R:64,67		01
	HF457470	Carbon Resistor	47.0K 1/4 J		R:6,15,22,24,30,32,38,40, 46,48,53,54,82		01
	HF458100	Carbon Resistor	100.0K 1/4 J		R:65,68		01
	HF458220	Carbon Resistor	220.0K 1/4 J		R:79		01
	HF459100	Carbon Resistor	1.0M 1/4 J		R:51,87		01
	VR659700	Circuit Board	PC		(XL057A0)		10
CN1	**LB918080**	Base Post Connector	8P TE				01
CN2	**VR629000**	Connector Assembly	PC-CONNECT				06
D1	**VB941200**	Diode	1SS133,1SS176				01
D2	**VB941200**	Diode	1SS133,1SS176				01
IC1	**XQ824A00**	IC	NJM4556AD		OP AMP		02
VR1	**VR661500**	Trimmer Potentiometer	B 50.0K 3P KVS				01
VR2	**VR661600**	Trimmer Potentiometer	B 100.0K 3P KVS				01
ZD1	**VQ451000**	Zener Diode	MTZJ5.1B 5.1V				01
	VI307100	Monolithic Ceramic Cap.	0.1 50V Z T=52				01
	HF755150	Carbon Resistor	150.0 1/4 J				01
	HF755180	Carbon Resistor	180.0 1/4 J				01
	HF755680	Carbon Resistor	680.0 1/4 J				01
	HF756100	Carbon Resistor	1.0K 1/4 J				01
	HF756120	Carbon Resistor	1.2K 1/4 J				01
	HF756270	Carbon Resistor	2.7K 1/4 J				01
	HF756560	Carbon Resistor	5.6K 1/4 J				01
	HF757560	Carbon Resistor	56.0K 1/4 J				01
*	**V3576600**	Circuit Board	PN		(XV912B0)		
*	**V3576700**	Circuit Board	RV		(XV912B0)		
CN4	**VB858200**	Connector Base Post	3P SE				01
CN5	**VB858900**	Connector Base Post	10P SE				01
CN6	**VB858700**	Connector Base Post	8P SE				01
CN7	**VB858600**	Connector Base Post	7P SE				01
CN8	**VB858200**	Connector Base Post	3P SE				01
CN9	**VB858400**	Connector Base Post	5P SE				01

*: New Parts

RANK: Japan only

	REF NO.	PART NO.	DESCRIPTION			REMARKS	QTY	RANK
	CR1	**VE222400**	Ceramic Resonator	8 MHZ EFO-FC8004A4				03
	D1	**VD631600**	Diode	1SS133,176,HSS104				01
	-47	**VD631600**	Diode	1SS133,176,HSS104				01
*	D48	**V4607200**	Shot Key Diode	1FWJ43N				
*	D49	**V4607200**	Shot Key Diode	1FWJ43N				
*	EC1	**V4434100**	Rotary Encoder	REB161(9*5)PVB17.5		PAGE		
*	EC2	**V4434100**	Rotary Encoder	REB161(9*5)PVB17.5		DATA		
	EM1	**VD542700**	EMI Filter	DSS306-93F223Z1				01
	IC1	**XS711200**	IC	MN101C027YB		CPU		06
	IC2	**VH885000**	Transistor Array	TD62785P SOURCE				04
	IC3	**VJ041400**	Transistor Array	TD62381P				04
	IC4	**XT744A00**	IC	TC74VHCT245AFT		BUFFER		07
	J	**VA078900**	Jumper Wire	0.55				
	J3	**VA078900**	Jumper Wire	0.55				
	-9	**VA078900**	Jumper Wire	0.55				
	LD1	**VS704700**	LED	SEL2210W TP8 RE		EF BYPASS,MASTER KEYBOARD		01
	-10	**VS704700**	LED	SEL2210W TP8 RE		VOICE,PERFORM,UTILITY, CARD,SEQ PLAY,EDIT,JOB, QUICK ACCESS		01
	R10	**VA078900**	Jumper Wire	0.55				
	RA1	**VF771900**	Resistor Array	RGLE8X103J				01
	SW1	**VZ085500**	Tact Switch	SKQNAM004A		SHIFT,EF BYPASS,		01
	-47	**VZ085500**	Tact Switch	SKQNAM004A		MASTER KEYBOARD,EXIT, ENTER,DEC/NO,DEC/YES, VOICE,PERFORM,STORE, UTILITY,CARD,SEQ PLAY, EDIT,JOB,PLAY/STOP,PRE1, PRE2,INT,EXT,PLG1,PLG2, QUICK ACCESS,A-H,1-16		01
*	VR6	**V4102900**	Rotary Variable Resistor	B 10.0K RK11K114		ASSIGNABLE KNOB(A•••2)		
*	-10	**V4102900**	Rotary Variable Resistor	B 10.0K RK11K114				
		FG644100	Ceramic Capacitor-F	0.01 50V Z		C:4,8-11		01
*		**VB639900**	Electrolytic Cap.	4.7 50.0V		C:5		
		V5220100	Electrolytic Cap.	220.00 10.0V		C:1-3,7,12		
		HF455100	Carbon Resistor	100.0 1/4 J		R:1-5		01
		HF456100	Carbon Resistor	1.0K 1/4 J		R:6,7		01
		HF457100	Carbon Resistor	10.0K 1/4 J		R:8-10		01
*		**V3577200**	Circuit Board	SM		(XV915C0)		
		VA078900	Jumper Wire	0.55				
	CN1	**--**	Connector , FFC	52793 26P SE		(V457490)		
	CN2	**V3962800**	Connector	SN015		CARD		
		RD255100	Carbon Resistor (chip)	100.0 0.1 J		R:4-21		01
		RD256100	Carbon Resistor (chip)	1.0K 0.1 J		R:3		01
		RD257100	Carbon Resistor (chip)	10.0K 0.1 J		R:2		01
*		**V3576900**	Circuit Board	SV		(XV913B0)		
	CN1	**VB858300**	Connector Base Post	4P SE				01
	CN2	**VB858400**	Connector Base Post	5P SE				01
	CN3	**VB858500**	Connector Base Post	6P SE				01
	J	**VA078900**	Jumper Wire	0.55				
	VR1	**VL445700**	Slide Variable Resistor	A10K EWA-NNDCH1A14		VOLUME		03
	VR2	**VC250600**	Slide Variable Resistor	B 10.0K EWA-NFOC		CONTROL SLIDER(1-4)		03
	-5	**VC250600**	Slide Variable Resistor	B 10.0K EWA-NFOC				03
		VN103500	Lithium Battery	CR2032				03
		VT119800	AC Cord	J 7A 125V 3P 2.5M		J		06
		VB927800	AC Cord	CSA		U		08
		VB928000	AC Cord	VDE		E		08
		VP204400	AC Cord	BS		B		10
		VQ240200	Adapter, AC Cord	KPR-24		J		06
*		**V3484100**	Power Supply Unit	J,U,C		J,U		
*		**V3484200**	Power Supply Unit	E B A		E,B		
		VP691000	Push Switch	SDDLB1				03
		VL785200	AC-IN Connector	ACINLET AC-P01CR02				03
		VQ764300	Rotary Variable Resistor	RK1631110T54A 10K				03
		VN245400	Rotary Variable Resistor	10.0K K161100S				03
		VQ988300	PC Sensor	MK-AE88TO-1				19
		VN474300	Rubber Contact	BE				11

✻: New Parts

RANK: Japan only

■S80 CIRCUIT DIAGRAM 1/4 (DM1/3)

S80

CPU

IC10 HD63B01Y0RCE0F

Flash CPU HD64F7045F28
MASK CPU HD6437045E24F
IC1

KEYBOARD CN1,CN3

KEYBOARD CN2,CN4

KEYBOAR AE2AFTER TOUCH I/F CN1

PHOTOCOUPLER

PC410T

INVERTER

LINE TRANSCEIVER

IC16 MSM3452FP

OP AMP

MPX

AT, BC, FC, FV, KNOB[1-14], L_KNOB[0-4], MW, PB, RB

TRANSCEIVER

IC11 TC74HC245F

D-FF

IC27 SN74HC273NSR

IC28 SN74HC273NSR

GATE ARRAY

IC9 S1C04

DEMULTIDLEXER

IC26 HD74LVC139FP

ANALOG SW

IC15 TC74HC4052AF

OR

IC29 TC74VHC32F

SYSTEM RESET

IC7 MSD21FP

BUFFER

IC31 SN74HC245NSR

FLASH ROM1 16M

IC2 ROM 16M

FLASH ROM2 16M

IC3 ROM 16M

SRAM 1M

IC4 SRAM 1M

IC5 SRAM 1M

DRAM 4M

IC6 M2M5142DCC-60JS

to DM2/3 J11

to DM2/3 J5

to DM2/3 B5

to DM2/3 B10

to DM2/3 J6 to DM2/3 C9

to DM2/3 P5

to DM2/3 P4

to DM2/3 A5

to DM2/3 B1

to DM2/3 H9 to DM3/3 B3 to DM2/3 H9 to DM3/3 B4

to DM3/3 B3 to DM3/3 B6

to DM2/3 A5

to DM2/3 H9

to PS-CN3

to JK-CN5

to SV-CN3

to RV-CN5

to WHEEL

to JK-CN7

to RV-CN6

to PN-CN7

to PLUGIN1

to PLUGIN2 -CN1

to LCD

28CC1-8813230 A

S80

■S80 CIRCUIT DIAGRAM 2/4 (DM2/3)

•MM1180ZTT (XP713A00) REGULATOR+3.3V	•NJM78L05UA (XJ598A00) REGULATOR +5V	•PC2933T (XS516A00) REGULATOR +3.3V •PC2950T (XT441A00) REGULATOR +9V	•NJM79L05UA (XN086A00) REGULATOR -5V
1: V in 2: GND 3: V out	1: OUTPUT 2: COMMON 3: INPUT	1: V in 2: GND 3: V out	1: GND 2: INPUT 3: OUTPUT

(セ) : Ceramic Capacitor
金被 : Metal Flame Resistor

Note : See parts list for details of circuit board component parts.

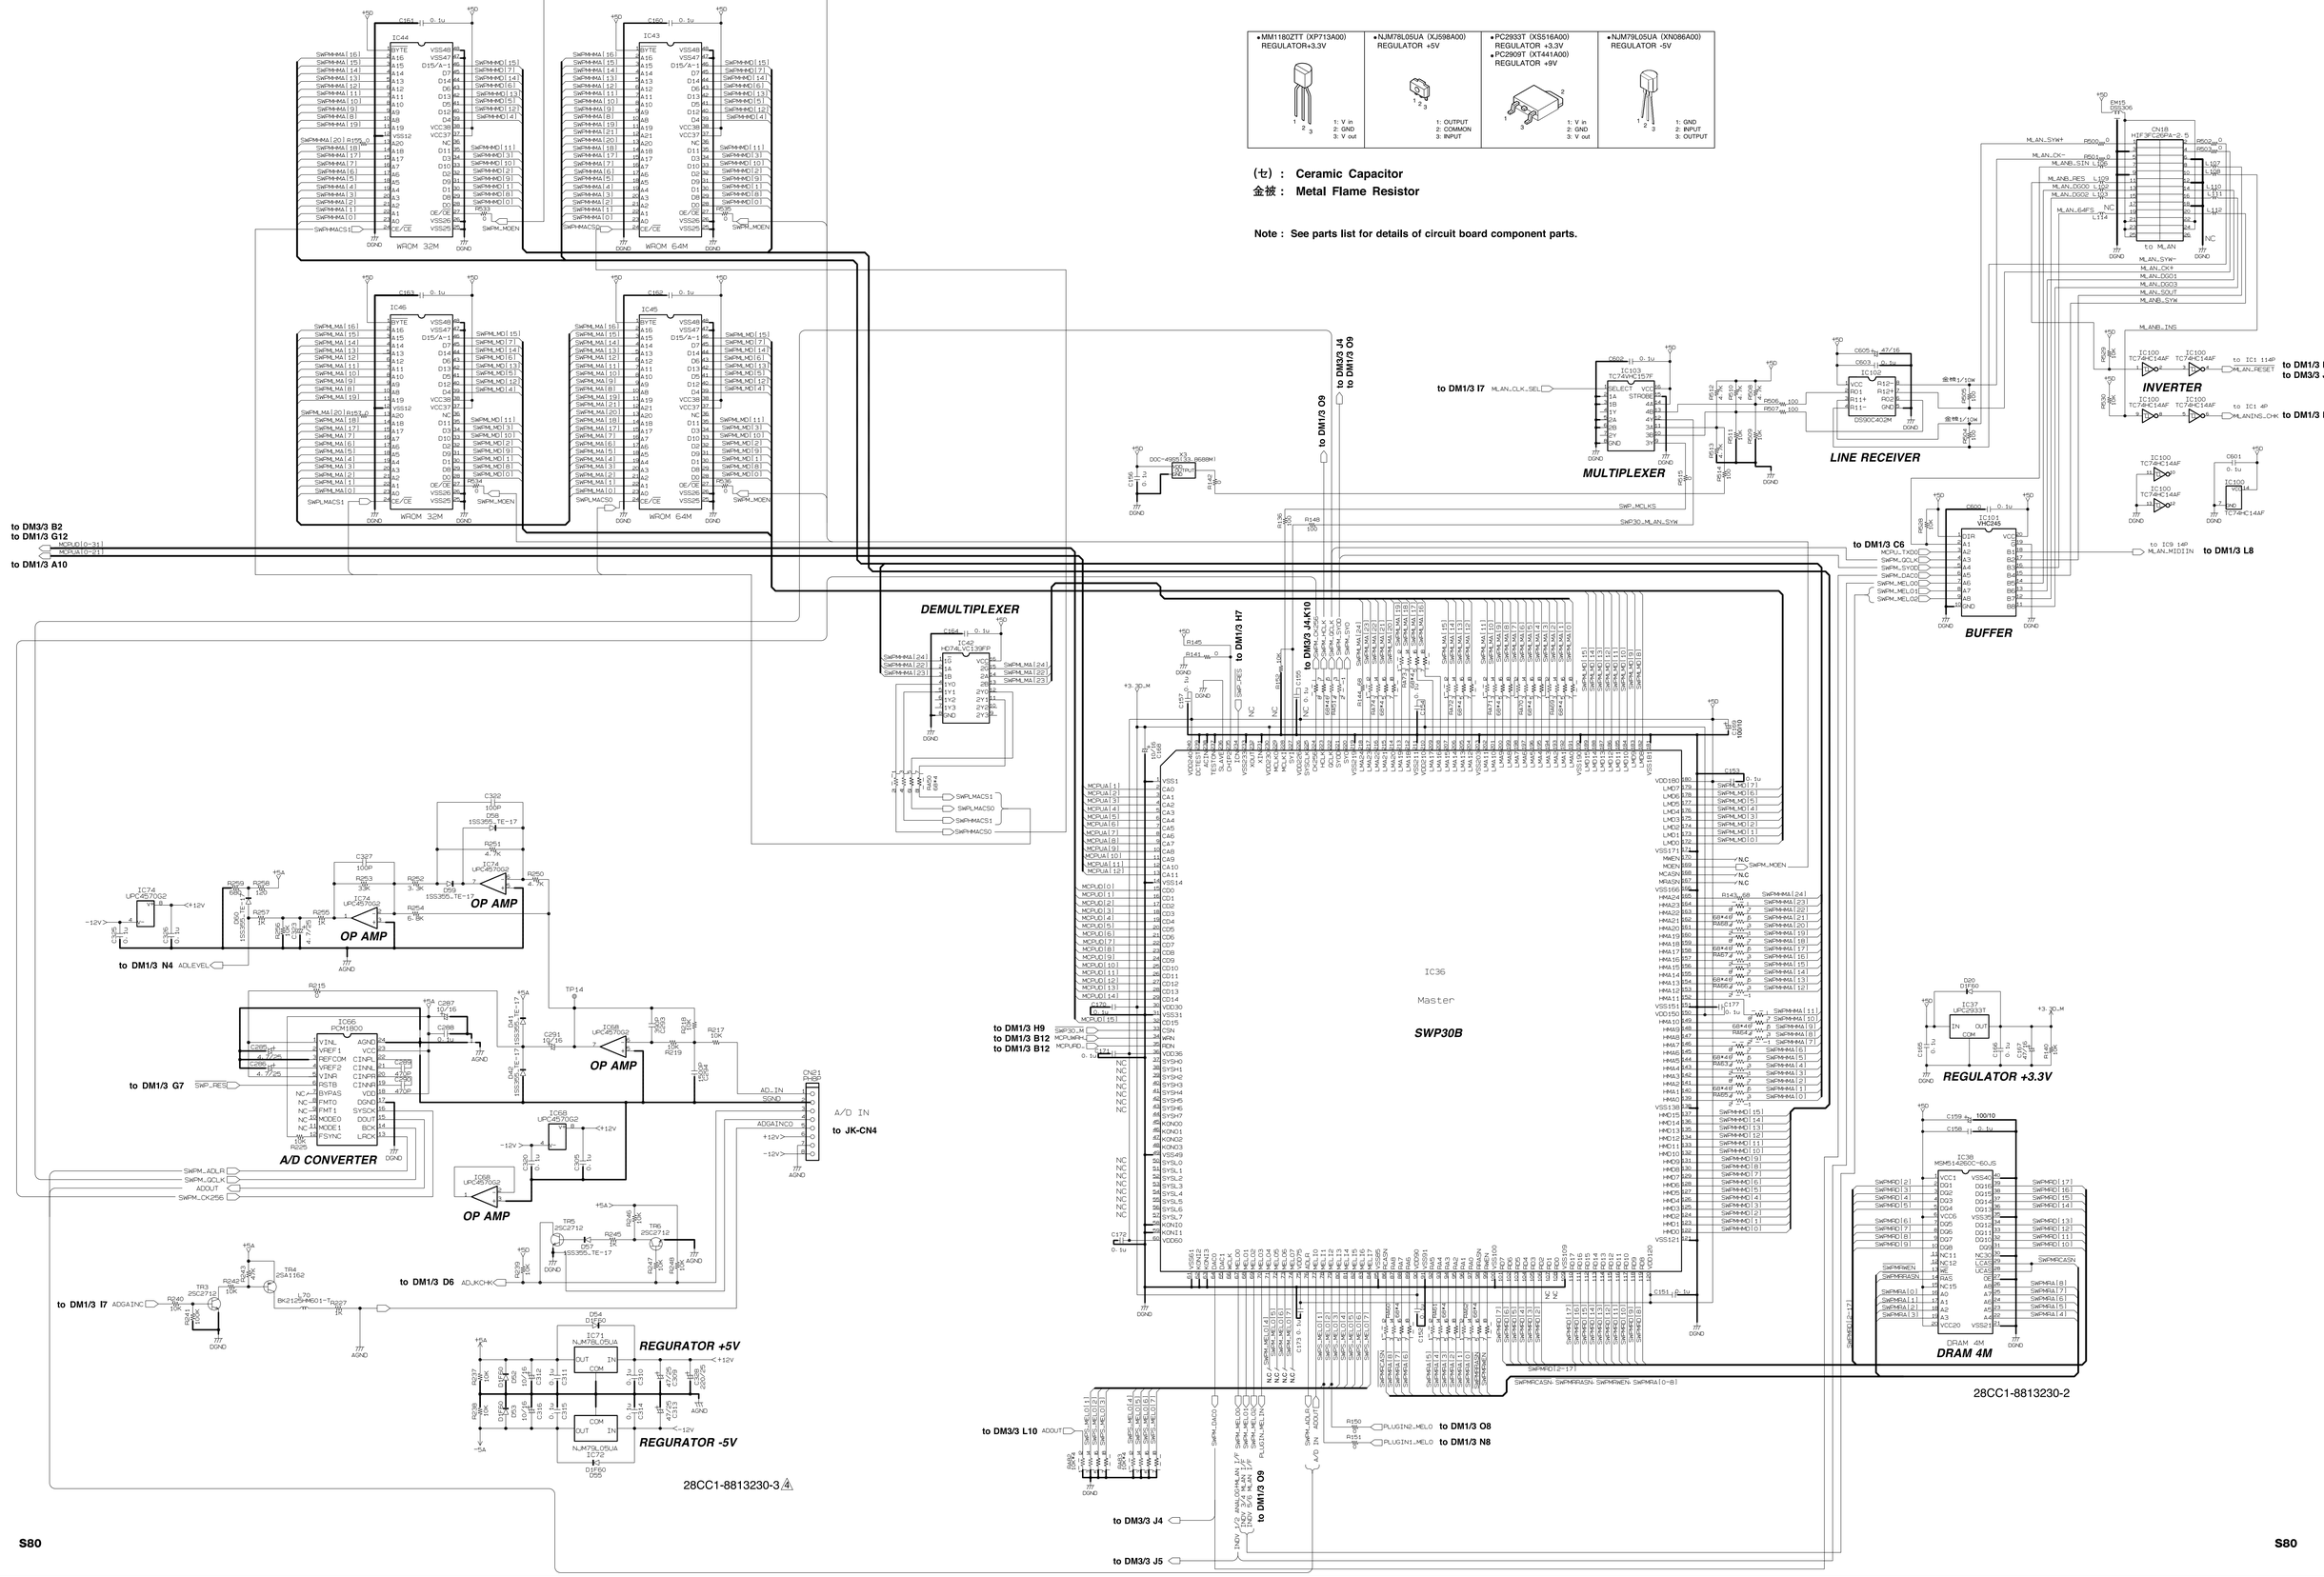

■S80 CIRCUIT DIAGRAM 3/4 (DM3/3, AE88L, AE C, AE88H)

BUS TRANSCEIVER

to DM1/3 G12
to DM2/3 A5
MCPUD[0-31]
IC50 TC74VHCT245
MCPUD[0] MCPUD[1] MCPUD[2] MCPUD[3] MCPUD[4] MCPUD[5] MCPUD[6] MCPUD[7]
SM-I/O[1] SM-I/O[2] SM-I/O[3] SM-I/O[4] SM-I/O[5] SM-I/O[6] SM-I/O[7] SM-I/O[8]
RAR9 100Kx4
RAR8 100Kx4
+3.3D_M
C210 0.1u
C211 0.1u
C212 0.1u
777 DGND

OR

IC75 TC7W32FU
SM_INS

BUS BUFFER

IC51 TC74VHC244F
IC55 TC74VHC32F
to DM1/3 B12 MCPURD_
to DM1/3 I9 SMIO_CS
R238 10K
C233 0.01u
SM-CLE-G
SM-ALE-G
SM-WP-G
SM-CE-G
SM-RE
SM-WE
SM-WP
SM-CE
SM-CLE
SM-ALE
R160 100K
R161 100K
R162 100K
R163 470K
R164 470K
R165 470K
R166 470K
VSM

D-FF

IC52 TC74VHC273F
MCPUD[0] MCPUD[1] MCPUD[2] MCPUD[3]
SM-WP-G
SM-CE-G
SM-ALE-G
SM-CLE-G
MCPUD[0] : SMART_WP
MCPUD[1] : SMART_CE
MCPUD[2] : SMART_ALE
MCPUD[3] : SMART_CLE
MCPUD[4] : SMART_VCNT
MCPUD[5] : SMART_CCNT

INVERTER

IC54 TC74VHC04
SM-CCNT-G
MCPUD[5]
MCPUD[4]
NC

to DM1/3 M10 HD_RES2
R190 10K
to DM1/3 I9 SMCTR_CS
IC55 TC74VHC32F

OR

to DM1/3 C6 SMART_VPRT
to DM1/3 D6 SMART_VINS
to DM1/3 D6 SMART_BUSY

CN52 HLW2655-2C7

Vsm
Vsm
SMART_MINS
+3.3D_SM
+3.3D_SM
DGND
SMART_VPRT
DGND
SM-I/O[5]
SM-I/O[6]
SM-I/O[4]
SM-I/O[7]
SM-I/O[3]
SM-I/O[8]
SM-I/O[2]
SM-VSEN
SM-I/O[1]
SM-WP
SMART_BUSY
SM-WE
SM-RE
SM-ALE
SM-CE
SM-CLE
DGND
SMART_VINS

to SM-CN1

SM-I/O[5] SM-I/O[6] SM-I/O[4] SM-I/O[7] SM-I/O[3] SM-I/O[8] SM-I/O[2] SM-I/O[1]
SM-WP SM-RE SM-WE SM-ALE SM-CE SM-CLE
R277 100 R276 100 R275 100 R274 100 R273 100 R272 100
SMART_BUSY R269 100
SMART_VPRT R270 100
SMART_VINS R271 100
DSS355E-TE-17
R267 100K
R268 100K
R269 100K
R270 100K
R271 100K
R272 100K
R273 100K
R274 100K
R275 100K
R276 100K
R277 100K
R278 100K
R279 100K
R280 100K
R281 100K
R282 100K
R283 100K
R284 100K
R285 100K
R286 100K
R287 100K
R288 100K
R289 100K
R290 100K
R291 100K
R292 100K
R293 100K
R294 100K
R295 100K
R296 100K
R297 100K
R298 100K
R299 100K
R300 100K
R301 100K
R302 100K
R303 100K
R304 100K
R305 10K
R306 47K
R307 100K
R308 100K
R309 100K
R310 100K
R311 100K
R312 100K
R313 100K
R314 100K
R315 100K
R316 100K
R317 100K
R318 100K
R319 100K
R320 100K
R321 100K
R322 100K
R323 100K
R324 100K
R325 100K
R326 100K
R327 100K
R328 100K
R329 100K
R330 100K
R331 100K
R332 100K
R333 100K
R334 100K
R335 100K
R336 100K
R337 100K
R338 100K
R339 100K
R340 100K
R341 100K
R342 100K
R343 100K
R344 100K
R345 100K
R346 100K
R347 100K
R348 100K
R349 100K
R350 100K
R351 100K
R352 100K
R353 100K
R354 100K
R355 100K
R356 100K
R357 100K
R358 100K
R359 100K
R360 100K
R361 100K
R362 100K
R363 100K
R364 100K
R365 100K
R366 100K
R367 100K
R368 100K
R369 100K
R370 100K
R371 100K
R372 100K
R373 100K
R374 100K
R375 100K
R376 100K
R377 100K
R378 100K
R379 100K
R380 100K
R381 100K
R382 100K
R383 100K
R384 100K
R385 100K
R386 100K
R387 100K
R388 100K
R389 100K
R390 100K
R391 100K
R392 100K
R393 100K
R394 100K
R395 100K
R396 100K
R397 100K
R398 100K
R399 100K
R400 100K
R401 100K
R402 100K
R403 100K
R404 100K
R405 100K
R406 100K
R407 100K
R408 100K
R409 100K
R410 100K
R411 100K
R412 100K
R413 100K
R414 100K
R415 100K
R416 100K
R417 100K
R418 100K
R419 100K
R420 100K
R421 100K
R422 100K
R423 100K
R424 100K
R425 100K
R426 100K
R427 100K
R428 100K
R429 100K
R430 100K
R431 100K
R432 100K
R433 100K
R434 100K
R435 100K
R436 100K
R437 100K
R438 100K
R439 100K
R440 100K
R441 100K
R442 100K
R443 100K
R444 100K
R445 100K
R446 100K
R447 100K
R448 100K
R449 100K
R450 100K
R451 100K
R452 100K
R453 100K
R454 100K
R455 100K
R456 100K
R457 100K
R458 100K
R459 100K
R460 100K
R461 100K
R462 100K
R463 100K
R464 100K
R465 100K
R466 100K
R467 100K
R468 100K
R469 100K
R470 100K
R471 100K
R472 100K
R473 100K
R474 100K
R475 100K
R476 100K
R477 100K
R478 100K
R479 100K
R480 100K
R481 100K
R482 100K
R483 100K
R484 100K
R485 100K
R486 100K
R487 100K
R488 100K
R489 100K
R490 100K
R491 100K
R492 100K
R493 100K
R494 100K
R495 100K
R496 100K
R497 100K
R498 100K
R499 100K
R500 100K
R501 100K
R502 100K
R503 100K
R504 100K
R505 100K
R506 100K
R507 100K
R508 100K
R509 100K
R510 100K
R511 100K
R512 100K
R513 100K
R514 100K
R515 100K
R516 100K
R517 100K
R518 100K
R519 100K
R520 100K
R521 100K
R522 100K
R523 100K
R524 100K
R525 100K
R526 100K
R527 100K
R528 100K
R529 100K
R530 100K
R531 100K
R532 100K
R533 100K
R534 100K
R535 100K
R536 100K
R537 100K
R538 100K
R539 100K
R540 100K
R541 100K
R542 100K
R543 100K
R544 100K
R545 100K
R546 100K
R547 100K
R548 100K
R549 100K
R550 100K
R551 100K
R552 100K
R553 100K
R554 100K
R555 100K
R556 100K
R557 100K
R558 100K
R559 100K
R560 100K
R561 100K
R562 100K
R563 100K
R564 100K
R565 100K
R566 100K
R567 100K
R568 100K
R569 100K
R570 100K
R571 100K
R572 100K
R573 100K
R574 100K
R575 100K
R576 100K
R577 100K
R578 100K
R579 100K
R580 100K
R581 100K
R582 100K
R583 100K
R584 100K
R585 100K
R586 100K
R587 100K
R588 100K
R589 100K
R590 100K
R591 100K
R592 100K
R593 100K
R594 100K
R595 100K
R596 100K
R597 100K
R598 100K
R599 100K
R600 100K
R601 100K
R602 100K
R603 100K
R604 100K
R605 100K
R606 100K
R607 100K
R608 100K
R609 100K
R610 100K
R611 100K
R612 100K
R613 100K
R614 100K
R615 100K
R616 100K
R617 100K
R618 100K
R619 100K
R620 100K
R621 100K
R622 100K
R623 100K
R624 100K
R625 100K
R626 100K
R627 100K
R628 100K
R629 100K
R630 100K
R631 100K
R632 100K
R633 100K
R634 100K
R635 100K
R636 100K
R637 100K
R638 100K
R639 100K
R640 100K
R641 100K
R642 100K
R643 100K
R644 100K
R645 100K
R646 100K
R647 100K
R648 100K
R649 100K
R650 100K
R651 100K
R652 100K
R653 100K
R654 100K
R655 100K
R656 100K
R657 100K
R658 100K
R659 100K
R660 100K
R661 100K
R662 100K
R663 100K
R664 100K
R665 100K
R666 100K
R667 100K
R668 100K
R669 100K
R670 100K
R671 100K
R672 100K
R673 100K
R674 100K
R675 100K
R676 100K
R677 100K
R678 100K
R679 100K
R680 100K
R681 100K
R682 100K
R683 100K
R684 100K
R685 100K
R686 100K
R687 100K
R688 100K
R689 100K
R690 100K
R691 100K
R692 100K
R693 100K
R694 100K
R695 100K
R696 100K
R697 100K
R698 100K
R699 100K
R700 100K
R701 100K
R702 100K
R703 100K
R704 100K
R705 100K
R706 100K
R707 100K
R708 100K
R709 100K
R710 100K
R711 100K
R712 100K
R713 100K
R714 100K
R715 100K
R716 100K
R717 100K
R718 100K
R719 100K
R720 100K
R721 100K
R722 100K
R723 100K
R724 100K
R725 100K
R726 100K
R727 100K
R728 100K
R729 100K
R730 100K
R731 100K
R732 100K
R733 100K
R734 100K
R735 100K
R736 100K
R737 100K
R738 100K
R739 100K
R740 100K
R741 100K
R742 100K
R743 100K
R744 100K
R745 100K
R746 100K
R747 100K
R748 100K
R749 100K
R750 100K
R751 100K
R752 100K
R753 100K
R754 100K
R755 100K
R756 100K
R757 100K
R758 100K
R759 100K
R760 100K
R761 100K
R762 100K
R763 100K
R764 100K
R765 100K
R766 100K
R767 100K
R768 100K
R769 100K
R770 100K
R771 100K
R772 100K
R773 100K
R774 100K
R775 100K
R776 100K
R777 100K
R778 100K
R779 100K
R780 100K
R781 100K
R782 100K
R783 100K
R784 100K
R785 100K
R786 100K
R787 100K
R788 100K
R789 100K
R790 100K
R791 100K
R792 100K
R793 100K
R794 100K
R795 100K
R796 100K
R797 100K
R798 100K
R799 100K
R800 100K
R801 100K
R802 100K
R803 100K
R804 100K
R805 100K
R806 100K
R807 100K
R808 100K
R809 100K
R810 100K
R811 100K
R812 100K
R813 100K
R814 100K
R815 100K
R816 100K
R817 100K
R818 100K
R819 100K
R820 100K
R821 100K
R822 100K
R823 100K
R824 100K
R825 100K
R826 100K
R827 100K
R828 100K
R829 100K
R830 100K
R831 100K
R832 100K
R833 100K
R834 100K
R835 100K
R836 100K
R837 100K
R838 100K
R839 100K
R840 100K
R841 100K
R842 100K
R843 100K
R844 100K
R845 100K
R846 100K
R847 100K
R848 100K
R849 100K
R850 100K
R851 100K
R852 100K
R853 100K
R854 100K
R855 100K
R856 100K
R857 100K
R858 100K
R859 100K
R860 100K
R861 100K
R862 100K
R863 100K
R864 100K
R865 100K
R866 100K
R867 100K
R868 100K
R869 100K
R870 100K
R871 100K
R872 100K
R873 100K
R874 100K
R875 100K
R876 100K
R877 100K
R878 100K
R879 100K
R880 100K
R881 100K
R882 100K
R883 100K
R884 100K
R885 100K
R886 100K
R887 100K
R888 100K
R889 100K
R890 100K
R891 100K
R892 100K
R893 100K
R894 100K
R895 100K
R896 100K
R897 100K
R898 100K
R899 100K
R900 100K
R901 100K
R902 100K
R903 100K
R904 100K
R905 100K
R906 100K
R907 100K
R908 100K
R909 100K
R910 100K
R911 100K
R912 100K
R913 100K
R914 100K
R915 100K
R916 100K
R917 100K
R918 100K
R919 100K
R920 100K
R921 100K
R922 100K
R923 100K
R924 100K
R925 100K
R926 100K
R927 100K
R928 100K
R929 100K
R930 100K
R931 100K
R932 100K
R933 100K
R934 100K
R935 100K
R936 100K
R937 100K
R938 100K
R939 100K
R940 100K
R941 100K
R942 100K
R943 100K
R944 100K
R945 100K
R946 100K
R947 100K
R948 100K
R949 100K
R950 100K
R951 100K
R952 100K
R953 100K
R954 100K
R955 100K
R956 100K
R957 100K
R958 100K
R959 100K
R960 100K
R961 100K
R962 100K
R963 100K
R964 100K
R965 100K
R966 100K
R967 100K
R968 100K
R969 100K
R970 100K
R971 100K
R972 100K
R973 100K
R974 100K
R975 100K
R976 100K
R977 100K
R978 100K
R979 100K
R980 100K
R981 100K
R982 100K
R983 100K
R984 100K
R985 100K
R986 100K
R987 100K
R988 100K
R989 100K
R990 100K
R991 100K
R992 100K
R993 100K
R994 100K
R995 100K
R996 100K
R997 100K
R998 100K
R999 100K
R1000 100K

REGURATOR +3.3V

D61 D1FS0
IC56 MM1582ZTT
5.0V/1%
GND
VIN
OUT
C319 0.1u
C318 1u
C317 0.1u
C316 1u
+5D
+50

DDE1

IC60 JG710069
IC63 JG710069
C283 0.1u
C284 0.1u
to DM2/3 J6 SWFM_CK256
to DM2/3 J6 SWFM_SYOD
to DM2/3 I12 SWFM_DAC0
to DM1/3 I12 SWFM_MEL00
to DM1/3 M9 HD_RES1
CLK SYW MIN1 MIN0 GND2 SEL.1 SEL0 SLIP
ICK DCLK DACO1 DACO0 VDD1 LE SHO SHO
NC NC NC NC

DAC

IC61 UPD63000GS
IC64 UPD63000GS
FSSEL CLK
GND SI/LSI
SELRSEL/RSI
DVDDBCK/WDCK
AGNDSAGND
IOUT LOUT
AVDD7 LREF
AVDD8 RREF
+5A
+5A
C245 10u/16
C246 0.1u
C247 10u/16
C248 0.1u
C249 47/6.3
C250 47/6.3
C395 10u/16
C396 0.1u
C397 10u/16
C398 0.1u
C399 47/6.3
C400 47/6.3

NAND

IC73 TC74VHC00
to DM2/3 P4 MLAN_RESET
R228 10K
R229 100K
TR1 2SC3326
R230 150
D49 RB501V-40
D50 RB501V-40
R231 470
R232 470
R233 470K
R234 10K
R235 150
R236 150
TR2 2SA1162
R237 10K
R238 10K
R251 0
D51 RB501V-40
C307 220/25
C308 47/25
+12V
-12V
A
777 AGND

LPF

C255 680P
C256 68P
R199 10K
IC62 UPC4570G2
C254 100P
C329 10/16
R290 1K
TR7 2SC3326
C262 680P
C263 68P
R204 10K
IC62 UPC4570G2
C261 100P
C330 10/16
R291 1K
TR8 2SC3326
C275 680P
C276 68P
R209 10K
IC66 UPC4570G2
C274 100P
C331 10/16
R292 1K
TR9 2SC3326
C281 680P
C282 68P
R214 10K
IC65 UPC4570G2
C280 100P
C332 10/16
R293 1K
TR10 2SC3326

OP AMP

TP10 TP11 TP12 TP13
C251 10/16
C258 10/16
C271 10/16
C277 10/16
R195 10K
R196 6.8K
R197 10K
R200 0
R201 6.8K
R202 10K
R205 10K
R206 6.8K
R207 10K
R210 10K
R211 6.8K
R212 10K
R302 0
R303 100K
R304 100K
R305 100K
R306 100K
R307 100K
R308 100K
R309 100K
R310 100K
R311 100K
R312 100K
R313 100K
R314 100K
R315 100K
R316 100K
R317 100K
R318 100K
R319 100K
R320 100K
R321 100K
R322 100K
R323 100K
R324 100K
R325 100K
R326 100K
R327 100K
R328 100K
R329 100K
R330 100K
R331 100K
R332 100K
R333 100K
R334 100K
R335 100K
R336 100K
R337 100K
R338 100K
R339 100K
R340 100K
R341 100K
R342 100K
R343 100K
R344 100K
R345 100K
R346 100K
R347 100K
R348 100K
R349 100K
R350 100K
R351 100K
R352 100K
R353 100K
R354 100K
R355 100K
R356 100K
R357 100K
R358 100K
R359 100K
R360 100K
R361 100K
R362 100K
R363 100K
R364 100K
R365 100K
R366 100K
R367 100K
R368 100K
R369 100K
R370 100K
R371 100K
R372 100K
R373 100K
R374 100K
R375 100K
R376 100K
R377 100K
R378 100K
R379 100K
R380 100K
R381 100K
R382 100K
R383 100K
R384 100K
R385 100K
R386 100K
R387 100K
R388 100K
R389 100K
R390 100K
R391 100K
R392 100K
R393 100K
R394 100K
R395 100K
R396 100K
R397 100K
R398 100K
R399 100K
R400 100K
R401 100K
R402 100K
R403 100K
R404 100K
R405 100K
R406 100K
R407 100K
R408 100K
R409 100K
R410 100K
R411 100K
R412 100K
R413 100K
R414 100K
R415 100K
R416 100K
R417 100K
R418 100K
R419 100K
R420 100K
R421 100K
R422 100K
R423 100K
R424 100K
R425 100K
R426 100K
R427 100K
R428 100K
R429 100K
R430 100K
R431 100K
R432 100K
R433 100K
R434 100K
R435 100K
R436 100K
R437 100K
R438 100K
R439 100K
R440 100K
R441 100K
R442 100K
R443 100K
R444 100K
R445 100K
R446 100K
R447 100K
R448 100K
R449 100K
R450 100K
R451 100K
R452 100K
R453 100K
R454 100K
R455 100K
R456 100K
R457 100K
R458 100K
R459 100K
R460 100K
R461 100K
R462 100K
R463 100K
R464 100K
R465 100K
R466 100K
R467 100K
R468 100K
R469 100K
R470 100K
R471 100K
R472 100K
R473 100K
R474 100K
R475 100K
R476 100K
R477 100K
R478 100K
R479 100K
R480 100K
R481 100K
R482 100K
R483 100K
R484 100K
R485 100K
R486 100K
R487 100K
R488 100K
R489 100K
R490 100K
R491 100K
R492 100K
R493 100K
R494 100K
R495 100K
R496 100K
R497 100K
R498 100K
R499 100K
R500 100K
R501 100K
R502 100K
R503 100K
R504 100K
R505 100K
R506 100K
R507 100K
R508 100K
R509 100K
R510 100K
R511 100K
R512 100K
R513 100K
R514 100K
R515 100K
R516 100K
R517 100K
R518 100K
R519 100K
R520 100K
R521 100K
R522 100K
R523 100K
R524 100K
R525 100K
R526 100K
R527 100K
R528 100K
R529 100K
R530 100K
R531 100K
R532 100K
R533 100K
R534 100K
R535 100K
R536 100K
R537 100K
R538 100K
R539 100K
R540 100K
R541 100K
R542 100K
R543 100K
R544 100K
R545 100K
R546 100K
R547 100K
R548 100K
R549 100K
R550 100K
R551 100K
R552 100K
R553 100K
R554 100K
R555 100K
R556 100K
R557 100K
R558 100K
R559 100K
R560 100K
R561 100K
R562 100K
R563 100K
R564 100K
R565 100K
R566 100K
R567 100K
R568 100K
R569 100K
R570 100K
R571 100K
R572 100K
R573 100K
R574 100K
R575 100K
R576 100K
R577 100K
R578 100K
R579 100K
R580 100K
R581 100K
R582 100K
R583 100K
R584 100K
R585 100K
R586 100K
R587 100K
R588 100K
R589 100K
R590 100K
R591 100K
R592 100K
R593 100K
R594 100K
R595 100K
R596 100K
R597 100K
R598 100K
R599 100K
R600 100K
R601 100K
R602 100K
R603 100K
R604 100K
R605 100K
R606 100K
R607 100K
R608 100K
R609 100K
R610 100K
R611 100K
R612 100K
R613 100K
R614 100K
R615 100K
R616 100K
R617 100K
R618 100K
R619 100K
R620 100K
R621 100K
R622 100K
R623 100K
R624 100K
R625 100K
R626 100K
R627 100K
R628 100K
R629 100K
R630 100K
R631 100K
R632 100K
R633 100K
R634 100K
R635 100K
R636 100K
R637 100K
R638 100K
R639 100K
R640 100K
R641 100K
R642 100K
R643 100K
R644 100K
R645 100K
R646 100K
R647 100K
R648 100K
R649 100K
R650 100K
R651 100K
R652 100K
R653 100K
R654 100K
R655 100K
R656 100K
R657 100K
R658 100K
R659 100K
R660 100K
R661 100K
R662 100K
R663 100K
R664 100K
R665 100K
R666 100K
R667 100K
R668 100K
R669 100K
R670 100K
R671 100K
R672 100K
R673 100K
R674 100K
R675 100K
R676 100K
R677 100K
R678 100K
R679 100K
R680 100K
R681 100K
R682 100K
R683 100K
R684 100K
R685 100K
R686 100K
R687 100K
R688 100K
R689 100K
R690 100K
R691 100K
R692 100K
R693 100K
R694 100K
R695 100K
R696 100K
R697 100K
R698 100K
R699 100K
R700 100K
R701 100K
R702 100K
R703 100K
R704 100K
R705 100K
R706 100K
R707 100K
R708 100K
R709 100K
R710 100K
R711 100K
R712 100K
R713 100K
R714 100K
R715 100K
R716 100K
R717 100K
R718 100K
R719 100K
R720 100K
R721 100K
R722 100K
R723 100K
R724 100K
R725 100K
R726 100K
R727 100K
R728 100K
R729 100K
R730 100K
R731 100K
R732 100K
R733 100K
R734 100K
R735 100K
R736 100K
R737 100K
R738 100K
R739 100K
R740 100K
R741 100K
R742 100K
R743 100K
R744 100K
R745 100K
R746 100K
R747 100K
R748 100K
R749 100K
R750 100K
R751 100K
R752 100K
R753 100K
R754 100K
R755 100K
R756 100K
R757 100K
R758 100K
R759 100K
R760 100K
R761 100K
R762 100K
R763 100K
R764 100K
R765 100K
R766 100K
R767 100K
R768 100K
R769 100K
R770 100K
R771 100K
R772 100K
R773 100K
R774 100K
R775 100K
R776 100K
R777 100K
R778 100K
R779 100K
R780 100K
R781 100K
R782 100K
R783 100K
R784 100K
R785 100K
R786 100K
R787 100K
R788 100K
R789 100K
R790 100K
R791 100K
R792 100K
R793 100K
R794 100K
R795 100K
R796 100K
R797 100K
R798 100K
R799 100K
R800 100K
R801 100K
R802 100K
R803 100K
R804 100K
R805 100K
R806 100K
R807 100K
R808 100K
R809 100K
R810 100K
R811 100K
R812 100K
R813 100K
R814 100K
R815 100K
R816 100K
R817 100K
R818 100K
R819 100K
R820 100K
R821 100K
R822 100K
R823 100K
R824 100K
R825 100K
R826 100K
R827 100K
R828 100K
R829 100K
R830 100K
R831 100K
R832 100K
R833 100K
R834 100K
R835 100K
R836 100K
R837 100K
R838 100K
R839 100K
R840 100K
R841 100K
R842 100K
R843 100K
R844 100K
R845 100K
R846 100K
R847 100K
R848 100K
R849 100K
R850 100K
R851 100K
R852 100K
R853 100K
R854 100K
R855 100K
R856 100K
R857 100K
R858 100K
R859 100K
R860 100K
R861 100K
R862 100K
R863 100K
R864 100K
R865 100K
R866 100K
R867 100K
R868 100K
R869 100K
R870 100K
R871 100K
R872 100K
R873 100K
R874 100K
R875 100K
R876 100K
R877 100K
R878 100K
R879 100K
R880 100K
R881 100K
R882 100K
R883 100K
R884 100K
R885 100K
R886 100K
R887 100K
R888 100K
R889 100K
R890 100K
R891 100K
R892 100K
R893 100K
R894 100K
R895 100K
R896 100K
R897 100K
R898 100K
R899 100K
R900 100K
R901 100K
R902 100K
R903 100K
R904 100K
R905 100K
R906 100K
R907 100K
R908 100K
R909 100K
R910 100K
R911 100K
R912 100K
R913 100K
R914 100K
R915 100K
R916 100K
R917 100K
R918 100K
R919 100K
R920 100K
R921 100K
R922 100K
R923 100K
R924 100K
R925 100K
R926 100K
R927 100K
R928 100K
R929 100K
R930 100K
R931 100K
R932 100K
R933 100K
R934 100K
R935 100K
R936 100K
R937 100K
R938 100K
R939 100K
R940 100K
R941 100K
R942 100K
R943 100K
R944 100K
R945 100K
R946 100K
R947 100K
R948 100K
R949 100K
R950 100K
R951 100K
R952 100K
R953 100K
R954 100K
R955 100K
R956 100K
R957 100K
R958 100K
R959 100K
R960 100K
R961 100K
R962 100K
R963 100K
R964 100K
R965 100K
R966 100K
R967 100K
R968 100K
R969 100K
R970 100K
R971 100K
R972 100K
R973 100K
R974 100K
R975 100K
R976 100K
R977 100K
R978 100K
R979 100K
R980 100K
R981 100K
R982 100K
R983 100K
R984 100K
R985 100K
R986 100K
R987 100K
R988 100K
R989 100K
R990 100K
R991 100K
R992 100K
R993 100K
R994 100K
R995 100K
R996 100K
R997 100K
R998 100K
R999 100K
R1000 100K

IC54 TC74VHC04

IC54 TC74VHC04
IC54 TC74VHC04
IC54 TC74VHC04
IC55 TC74VHC32F
IC75 TC7W32FU
+3.3D_M
C214 0.1u
C215 0.01u
C338 0.01u
777 DGND

INVERTER

IC54 TC74VHC04
TR11 2SA1162
TR12 2SC3326
R303 100K
R304 47K
R305 10K
R306 47K
R307 100K
SM_INS

LPF

C255 680P
C256 68P
R199 10K
IC62 UPC4570G2
C254 100P
C329 10/16
R290 1K
TR7 2SC3326
C262 680P
C263 68P
R204 10K
IC62 UPC4570G2
C261 100P
C330 10/16
R291 1K
TR8 2SC3326
C275 680P
C276 68P
R209 10K
IC66 UPC4570G2
C274 100P
C331 10/16
R292 1K
TR9 2SC3326
C281 680P
C282 68P
R214 10K
IC65 UPC4570G2
C280 100P
C332 10/16
R293 1K
TR10 2SC3326

OP AMP

C251 10/16
C258 10/16
C271 10/16
C277 10/16
R195 10K
R196 6.8K
R197 10K
R200 0
R201 6.8K
R202 10K
R205 10K
R206 6.8K
R207 10K
R210 10K
R211 6.8K
R212 10K
R302 0

DAC

IC61 UPD63000GS
IC64 UPD63000GS
+5A
+5A
C245 10u/16
C246 0.1u
C247 10u/16
C248 0.1u
C249 47/6.3
C250 47/6.3
C395 10u/16
C396 0.1u
C397 10u/16
C398 0.1u
C399 47/6.3
C400 47/6.3

DDE1

IC60 JG710069
IC63 JG710069
C283 0.1u
C284 0.1u
+5D

NAND

IC73 TC74VHC00
R228 10K
R229 100K
TR1 2SC3326
R230 150
D49 RB501V-40
D50 RB501V-40
R231 470
R232 470
R233 470K
R234 10K
R235 150
R236 150
TR2 2SA1162
R237 10K
R238 10K
R251 0
D51 RB501V-40
C307 220/25
C308 47/25
+12V
-12V
A
777 AGND

REGURATOR +3.3V

D61 D1FS0
IC56 MM1582ZTT
5.0V/1%
GND
VIN
OUT
C319 0.1u
C318 1u
C317 0.1u
C316 1u
+5D
+50

IC73 TC74VHC00
C321 0.1u
C334 0.1u
C335 0.1u
C336 0.1u
C337 0.1u
777 DGND
777 AGND

CN19 PHP2
R
AGND2
L
AGND1
OUTPUT
to VR

CN20 PHP5
INDV2
AGND4
INDV1
AGND3
MUTE
INDV1. 2
to JK-CN2

28CC1-8813230-3 4

AE88L

A-1~C8
C&A-F&8
C&1~F&1
G1~G2
to DM-CN103
to DM-CN102

AE C

to DM-CN103
to DM-CN102
C&1~C&4
C&A~F&A
C&1~C&3
C&5~F&5

AE88H

to DM-CN103
to DM-CN102
D&1~C7
C&A~F&A
C&1~C&
C&5~F&5

PS

CN2 B3B-XH-A
CN3 B11B-XH-A
+15V
+12V 0.4A
AGND
-12V 0.4A
-5V 3A
DGND
CN1 B6B-XH-A
TH1 SD-11
C12 0.01u /400V
T1 TUN100
D4 RBR40B
7812
BR1
C19 1000u /35V
C20 220u /25V
C24 0.01u /50V
ZD3 24V
C21 1000u /35V
C22 220u /25V
C25 0.01u /50V
ZD4 24V
7912
BR2
C18 0.01u /50V
C29 3300u /10V
BR3
C16 3300u /16V
C17 3300u /16V
C23 0.01u /50V
L3 18uH
F2 3.15A
R19 10
D3 RSR5A04
R9 560K 1/2W
R4 33K/2W 400V
D1 1N4.5S
D2 1SS120
ZD2 6.2V
R11 470
R20 3.3K
R12 270/2W
C14 0.033u/50V
Q1 2SK1338
R6 330/2W
PC1 TLP521-1
Q2 2SC2655
R15 1.2K
R13 15
R14 15K
ZD1 12V
C13 100P /1KV
R8 0.47/2W
C15 0.022u/50V
R10 300K 1/2W
R5 220/2W
C11 150u/200V
R3 2.2Ω/2W
C10 0.022u/50V
D5 RBR40B
D6 RBR40B
C26 1u/50V
R16 100
R17 2.2K
VR1 1KΩ
R18 2.7K
ZD5 6.2V
Q3 2SC1815
R22 100
R21 1K
R23 1K
IC1 μPC1093J HA17431FPA KIA431
C28 0.01u /50V
CN4 B2P4-VH
F1 2.0A
CN5 B2P3-VH
L
N
R1 680K 1/2W
C1 0.22u /250V
C2 0.22u /250V
C3 1000P/ 250V
C4 1000P/ 250V
L1 5.5mH
SIRB 60
DB1
FUSE
TYPE SPEC
F1 UL125C N1 1A 125V
F2 237 3.15A 125V
※J, U, C
V348410

PS

CN2 B3B-XH-A
CN3 B11B-XH-A
+15V
+12V 0.4A
AGND
-12V 0.4A
-5V 3A
DGND
CN1 B6B-XH-A
TH1 SD-11
C12 0.01u /400V
T1 TUN101
D4 RBR40B
7812
BR1
C19 1000u /35V
C20 220u /25V
C24 0.01u /50V
ZD3 24V
C21 1000u /35V
C22 220u /25V
C25 0.01u /50V
ZD4 24V
7912
BR2
C18 0.01u /50V
C29 3300u /10V
BR3
C16 3300u /16V
C17 3300u /16V
C23 0.01u /50V
L3 18uH
F2 T3.15A L
R19 10
D3 RSR5A04
R9 560K 1/2W
R4 68K/2W
D1 1N4.5S
D2 1SS120
ZD2 6.2V
R11 470
R20 3.3K
R12 100/2W
C14 0.022u /50V
Q1 2SK1338
R6 330/2W
PC1 CNY17F-2
Q2 2SC2655
R15 1K
R13 47
R14 15K
ZD1 12V
C13 470 /25V
R8 1.2/2W
C15 0.022u/50V
R10 300K 1/2W
R5 220/2W
C11 100u/400V
R3 3.3Ω/2W
C10 0.022u/50V
D5 RBR40B
D6 RBR40B
C26 1u/50V
R16 100
R17 2.2K
VR1 1KΩ
R18 2.7K
ZD5 6.2V
Q3 2SC1815
R22 100
R21 1K
R23 1K
IC1 μPC1093J HA17431FPA KIA431
C28 0.01u /50V
CN4 B2P4-VH
F1 T3.15A H
CN5 B2P3-VH
L
N
R1 680K 1/2W
C1 0.22u /250V
C2 0.22u /250V
C3 1000P/ 250V
C4 1000P/ 250V
L1 5.5mH
SIRB 60
DB1
FUSE
TYPE SPEC
F1 215 3.15A 250V
F2 218 3.15A 250V
※E, B, A
V348420

■S80 CIRCUIT DIAGRAM 4/4 (PN,SM,JK)

PN

Transistor Array
IC3 TD62381P
Transistor Array
IC2 TD62785P
CPU
IC1
MN101C027YB
to JK-CN6
to DM-CN17
28CC1-8813231 1

RV

ASSIGNABLE KNOB
PAGE EC1
DATA EC2
SHIFT SW1
to DM-CN14
to DM-CN6
28CC1-8813231 1

SV

MASTER VOLUME
CONTROL SLIDER
to DM-CN19
to JK-CN1
to DM-CN7
28CC1-8813231 1

SM

CN1 52852-2690
CN2 CN015R-3013-0 TOP VIEW
to DM-CN22
28CC1-8813231 1

PANEL LAYOUT
SV
RV
PN

JK

JK8 Front View
MIDI THRU
MIDI OUT
MIDI IN
JK9
TO-HOST
SELECT SWITCH
1x1 = MIDI
1x2 = PC2
1x3 = PC1
1x4 = MAC
to DM-CN4
Foot Switch
SUSTAIN
FOOT CONTROLLER
FOOT VOLUME
BREATH
to PN-CN9
to DM-CN8
to DM-CN20
to PS-CN2
to SV-CN2
PHONES
OUTPUT L/MONO
output R
INDV. 1
INDV. 2
28CC1-8813232 2