
9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *Screws adjacent to ▼ mark on product are used for disassembly.*
● *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

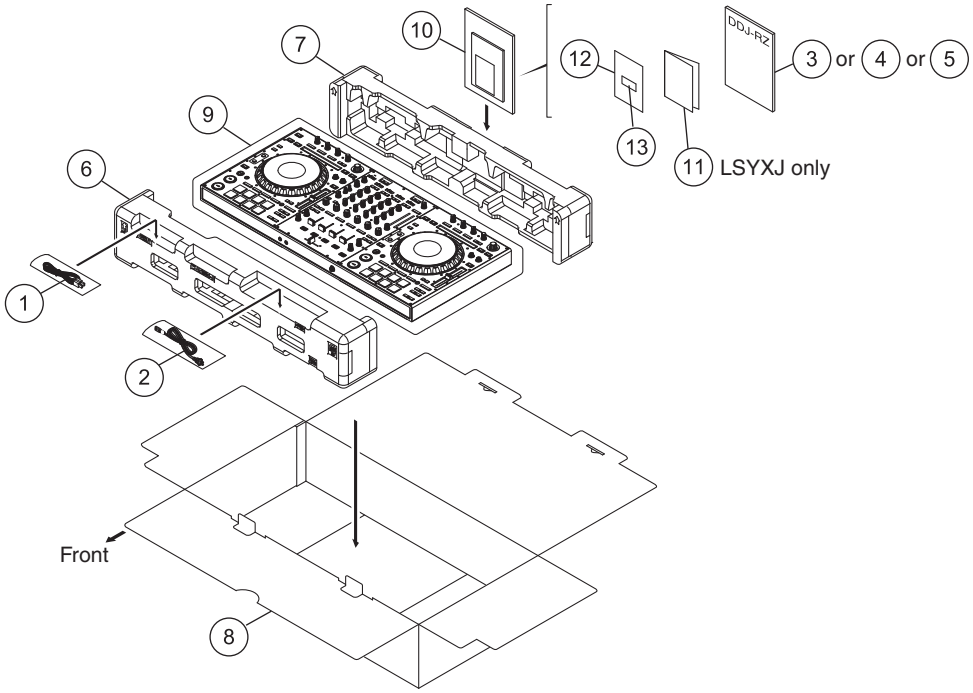

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	USB Cable	DDE1128
⚠	2	Power Cord	See Contrast table (2)
	3	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	4	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	5	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	6	Pad/F	DHA1914
	7	Pad/R	DHA1915
	8	Packing Case	See Contrast table (2)
	9	Mirror Mat (1200*1000)	DHL1169
NSP	10	Polyethylene Bag	AHG7117
NSP	11	Warranty	See Contrast table (2)
NSP	12	Leaflet	DRM1410
NSP	13	rekordbox dj license key	DXA2304

(2) CONTRAST TABLE

DDJ-RZ/UXJCB, LSYXJ and XJCN are constructed the same except for the following:


Mark	No.	Symbol and Description	DDJ-RZ/UXJCB	DDJ-RZ/LSYXJ	DDJ-RZ/XJCN
⚠	2	Power Cord	DDG1108	ADG1244	DDG1114
	3	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Ne, Es, Pt, Ru)	Not used	DRH1327	Not used
	4	Operating Instructions (Quick Start Guide)(En)	DRH1326	Not used	Not used
	5	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	DRH1328
	8	Packing Case	DHG3417	DHG3416	DHG3419
NSP	11	Warranty	Not used	ARY7158	Not used

9.2 TOP and CHASSIS SECTION

DDJ-SZ/UXJCB and DDJ-RZ/UXJCB, LSYXJ, XJCN are constructed the same except for the following:
For convenience of the system, the part names for the DDJ-RZ are simplified. The part names in parentheses are those for the DDJ-SZ.

Mark	No.	Symbol and Description	DDJ-SZ/UXJCB	DDJ-RZ	Remaks
	4	Knob (Rotary SW Knob (C))	DAA1180	DAA1344	
	8	Knob/BRS (Dial Knob)	DAA1259	DAA1342	
	14	Plate (Plate/MIX)	DAH2976	DAH3045	
	15	Plate (Plate/DEL)	DAH2982	DAH3046	
	16	Plate (Plate/DER)	DAH2983	DAH3047	
	31	Chassis	DNK6286	DNK6475	
	32	Shaft (Shaft/EXT)	DNK6305	DNK6410	
	38	DS Tape (DS Tape/ALR)	DEH1050	DEH1079	
	40	DS Tape (DS Tape/PAJ)	DEH1056	DEH1080	
		Knob/EQ (Knob/SHR)	DAA1333	DAA1302	No. 49
		Escutcheon	Not used	DNK6473	No. 50
		Escutcheon	Not used	DNK6474	No. 51
		DS Tape	Not used	DEH1064	No. 52

TOP and CHASSIS SECTION

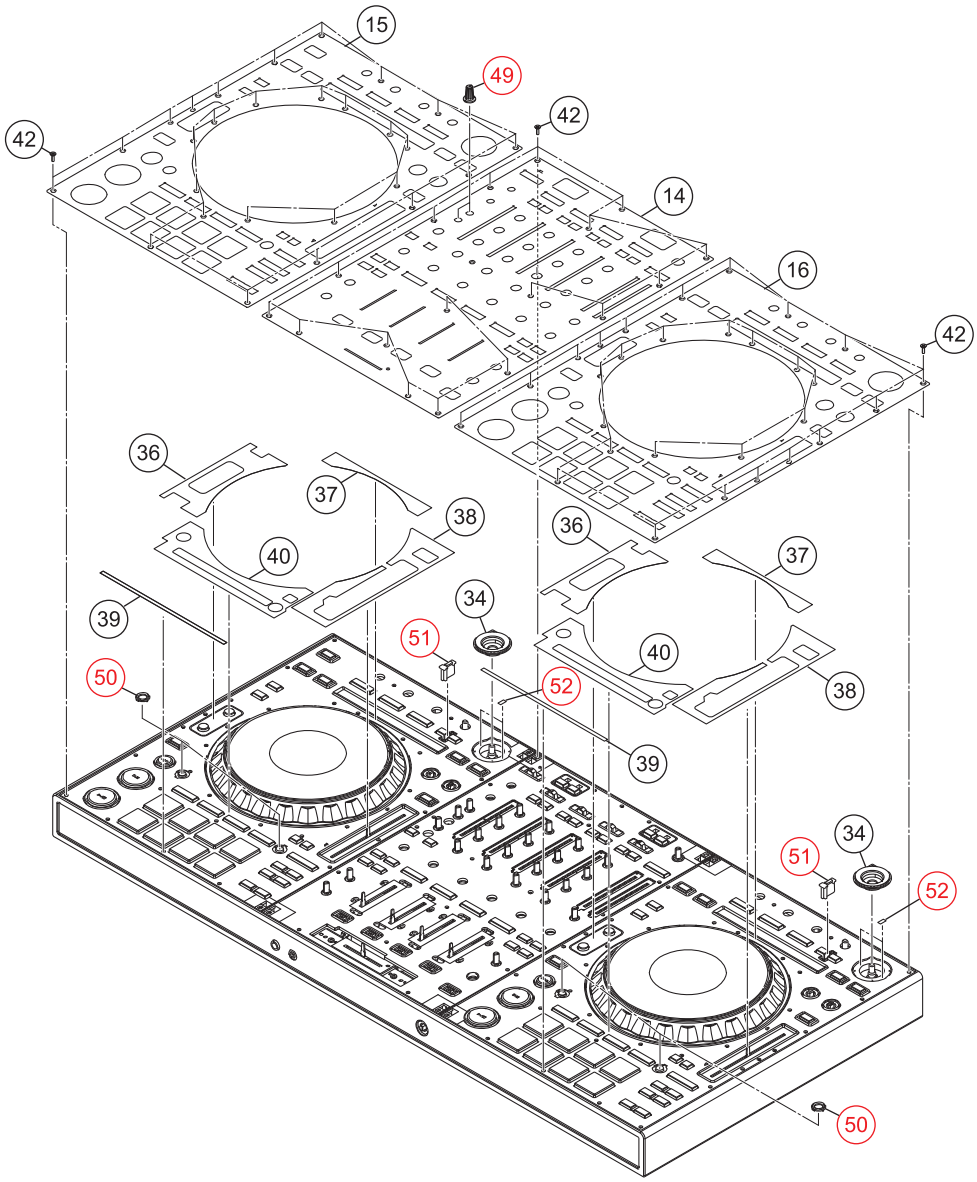

9.3 TERMINAL SECTION


DDJ-SZ/UXJCB and DDJ-RZ/LSYXJ, UXJCB, XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SZ/UXJCB	DDJ-RZ
	1	MAIN Assy	DWX3535	DWX3751
	2	USBB Assy	DWX3555	DWX3752
	3	AIJK Assy	DWX3536	DWX3768
	4	AOJK Assy	DWX3537	DWX3769
	5	HPJK Assy	DWX3538	DWX3770
	6	CRFCV Assy	DWX3547	DWX3777
	7	PSWB Assy	DWX3560	DWX3755
	8	STRB Assy	DWX3585	DWX3761

9.4 CONTROL PANEL SECTION

DDJ-SZ/UXJCB and DDJ-RZ/LSYXJ, UXJCB, XJCN are constructed the same except for the following:
For convenience of the system, the part names for the DDJ-RZ are simplified. The part names in parentheses are those for the DDJ-SZ.

Mark	No.	Symbol and Description	DDJ-SZ/UXJCB	DDJ-RZ	Remaks
	1	DEUP Assy	DWX3548	DWX3760	
	2	KSWB Assy	DWX3549	DWX3757	
	3	SLDB Assy	DWX3550	DWX3758	
	4	DEUPR Assy	DWX3580	DWX3762	
	21	Barrier (Barrier/DEL)	DEC3546	DEC3631	
	22	Barrier (Barrier/DER)	DEC3547	DEC3632	
		SEQL Assy	Not used	DWX3763	No. 34
		QUAL Assy	Not used	DWX3764	No. 35
		QUAR Assy	Not used	DWX3765	No. 36
		SEQR Assy	Not used	DWX3766	No. 37
		Connector Assy	Not used	PF04PP-B17	No. 38
		Connector Assy	Not used	PF07PP-B17	No. 39
		Crimp Connector	Not used	PF08PP-B12	No. 40
		Crimp Connector	Not used	PF08PP-B17	No. 41
		Barrier	Not used	DEC3630	No. 42
		Stopper	Not used	DNK6532	No. 43
		Binder	Not used	ZCA-SKB90BK	No. 44
		Screw	BPZ30P080FNI	BPZ30P100FTB	No. 45

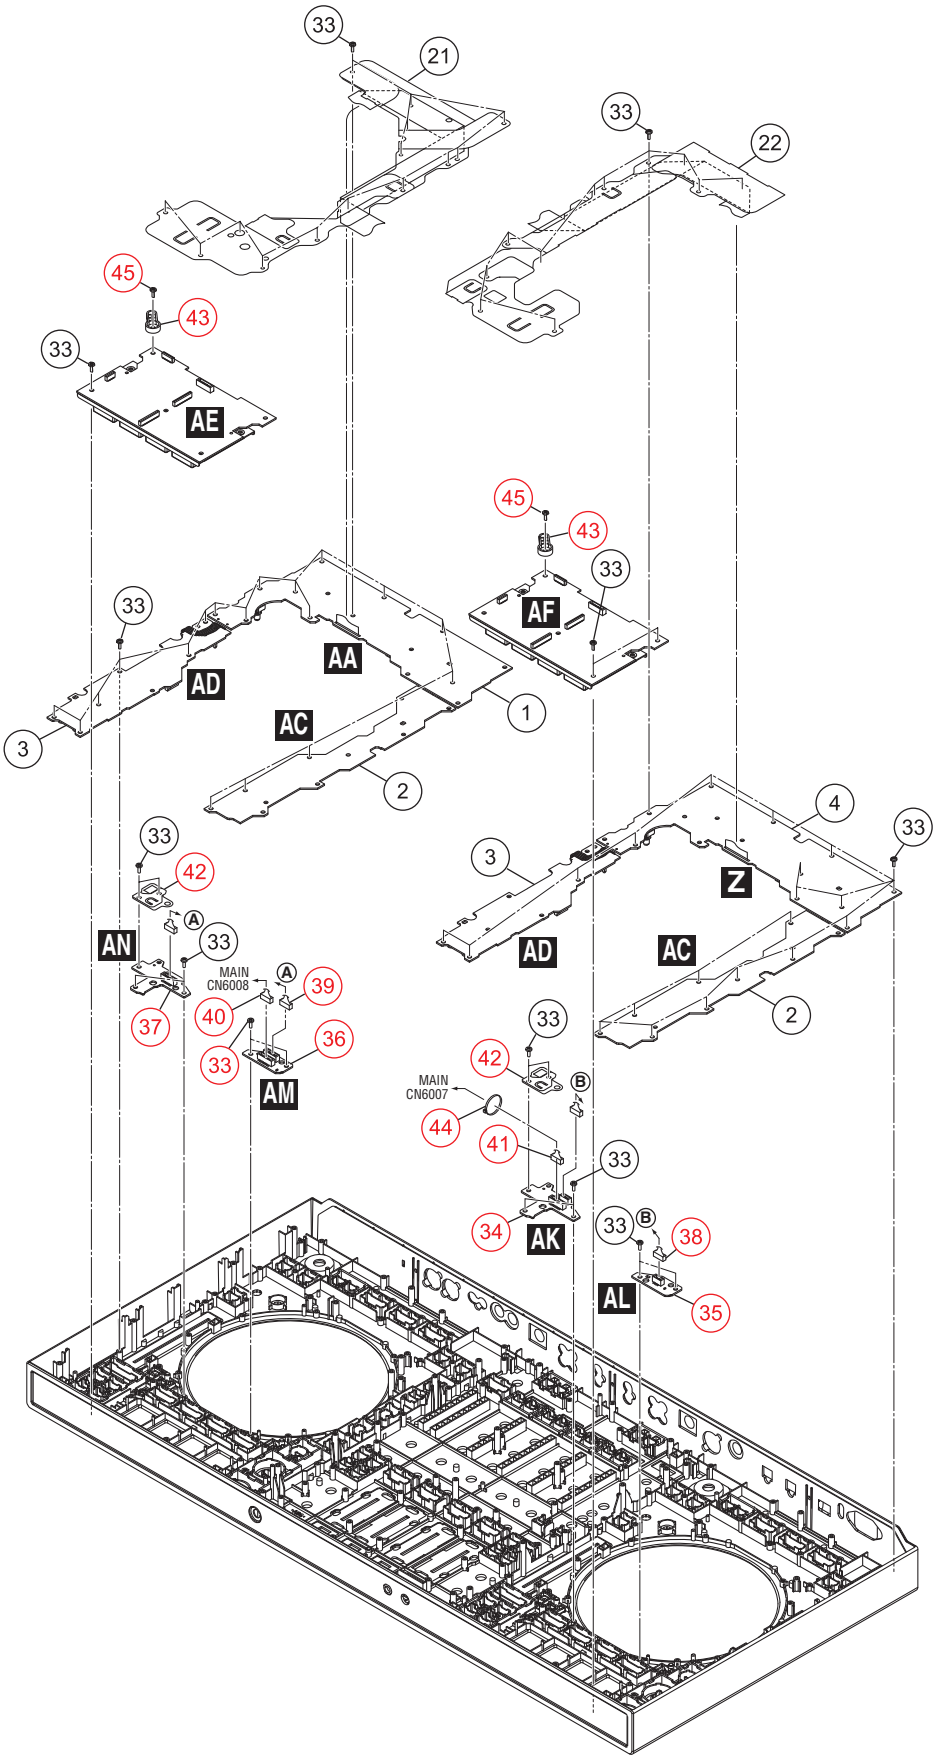

33
21
33
22
45
43
33
AE
45
43
33
AF
33
AD
AA
AC
1
3
2
33
42
AN
A
33
MAIN
CN6008
A
39
40
37
33
36
AM
3
4
33
Z
AD
AC
2
33
42
MAIN
CN6007
B
44
41
33
34
AK
33
B
38
AL
35

9.5 MIXER SECTION


DDJ-SZ/UXJCB and DDJ-RZ/LSYXJ, UXJCB, XJCN are constructed the same except for the following:
For convenience of the system, the part names for the DDJ-RZ are simplified. The part names in parentheses are those for the DDJ-SZ.

Mark	No.	Symbol and Description	DDJ-SZ/UXJCB	DDJ-RZ	Remaks
	1	MXRA Assy	DWX3543	DWX3753	
	2	MXRB Assy	DWX3544	DWX3767	
	3	FAD1 Assy	DWX3540	DWX3772	
	4	FAD2 Assy	DWX3541	DWX3773	
	5	FAD3 Assy	DWX3539	DWX3771	
	6	FAD4 Assy	DWX3542	DWX3774	
	16	Stay (Stay/MIX)	DND1280	DND1285	
		Spacer/CHF	Not used	DEC3558	No. 23

MIXER SECTION

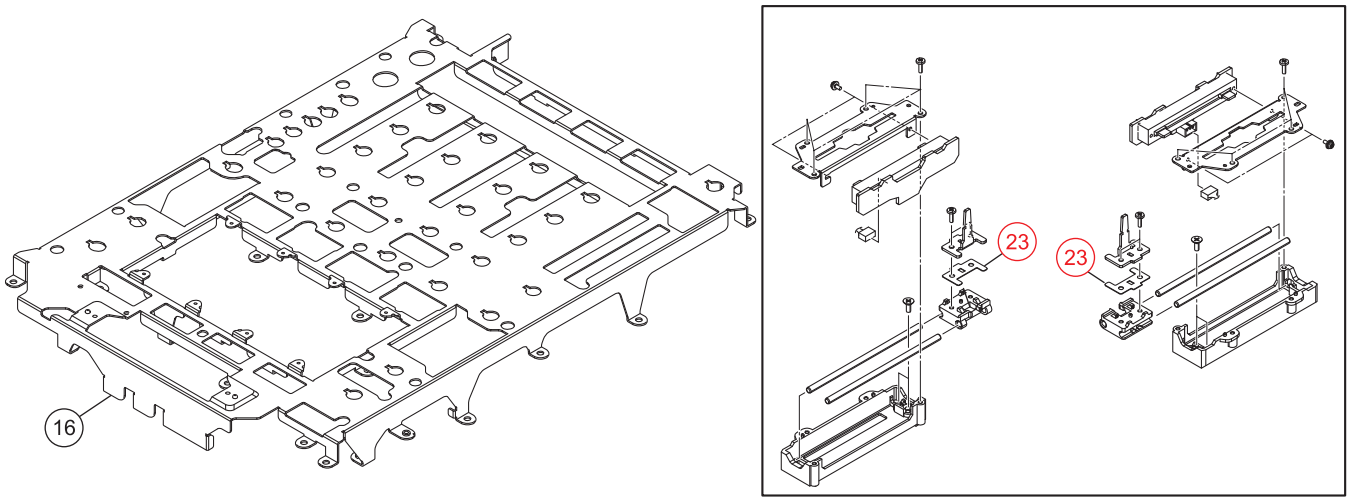

9.6 PANEL and BUTTON SECTION

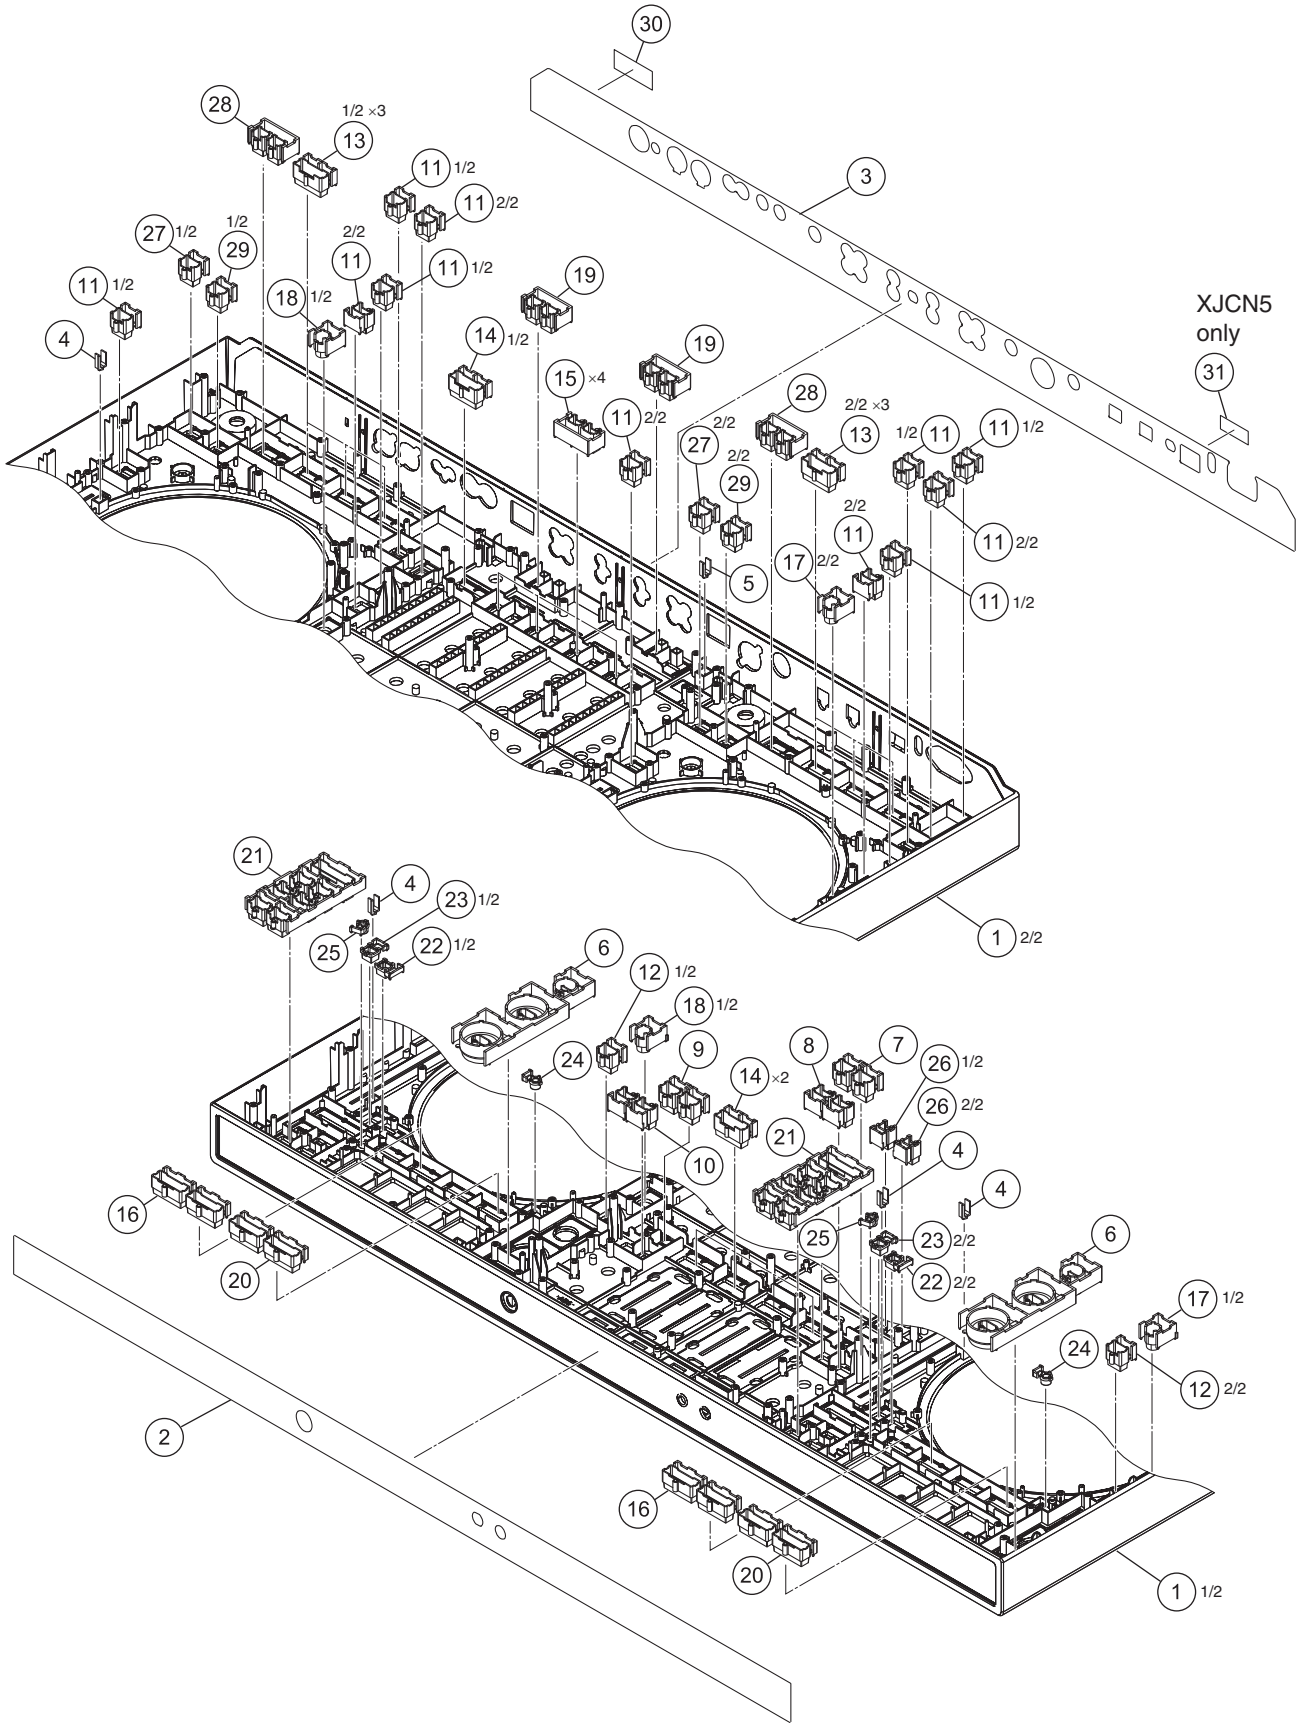

(1) PANEL and BUTTON SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Control Panel	DNK6531
	2	Sheet	DAH3068
	3	Sheet	See Contrast table (2)
	4	Lens/TMP	DNK6307
	5	Lens/MIC	DNK6308
	6	Button	DAC3161
	7	Button	DAC3160
	8	Button/CX2	DAC2984
	9	Button	DAC3154
	10	Button/FX2	DAC2986
	11	Button	DAC3125
	12	Button/SHT	DAC2989
	13	Button/ON	DAC2991
	14	Button	DAC3155
	15	Button/FX	DAC2995
	16	Button/PM2	DAC2997
	17	Button/DEL	DAC3000
	18	Button/DER	DAC3001
	19	Button	DAC3156
	20	Button	DAC3158
	21	Button	DAC3128
	22	Button	DAC3120
	23	Button	DAC3121
	24	Button	DAC3122
	25	Button	DAC3123
	26	Button	DAC3124
	27	Button	DAC3127
	28	Button	DAC3157
	29	Button	DAC3159
NSP	30	Serial Label (UPC)	DRW2311
NSP	31	Name Label	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-RZ/UXJCB, LSYXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-RZ/UXJCB	DDJ-RZ/LSYXJ	DDJ-RZ/XJCN
	3	Sheet	DAH3088	DAH3088	DAH3070
NSP	31	Name Label	Not used	Not used	DAL1289

9.7 JOG DIAL SECTION

DDJ-SZ/UXJCB and DDJ-RZ/LSYXJ, UXJCB, XJCN are constructed the same except for the following:

For convenience of the system, the part names for the DDJ-RZ are simplified. The part names in parentheses are those for the DDJ-SZ.

Mark	No.	Symbol and Description	DDJ-SZ/UXJCB	DDJ-RZ
	1	JFLL Assy	DWX3545	DWX3775
	2	JFLR Assy	DWX3546	DWX3776
	3	JLL1 Assy	DWX3556	DWX3778
	4	JLL2 Assy	DWX3557	DWX3779
	5	JLL3 Assy	DWX3558	DWX3781
	6	JLL4 Assy	DWX3559	DWX3782
	7	JLR1 Assy	DWX3561	DWX3783
	8	JLR2 Assy	DWX3562	DWX3784
	9	JLR3 Assy	DWX3563	DWX3785
	10	JLR4 Assy	DWX3564	DWX3786
	11	JOGTL Assy	DWX3551	DWX3754
	12	JOGTR Assy	DWX3565	DWX3756
	13	JOGR Assy	DWX3552	DWX3759
	18	Plate (Plate/JOG)	DAH2915	DAH3048
	37	Jog Dial (Jog Dial/BAS)	DNK6270	DNK6408
	38	Jog Dial (Jog Dial/A)	DNK6271	DNK6409
	39	Jog Dial (Jog Dial/B)	DNK6272	DNK6476
	47	Screw	IMZ30P060FTB	DBA1442