
9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

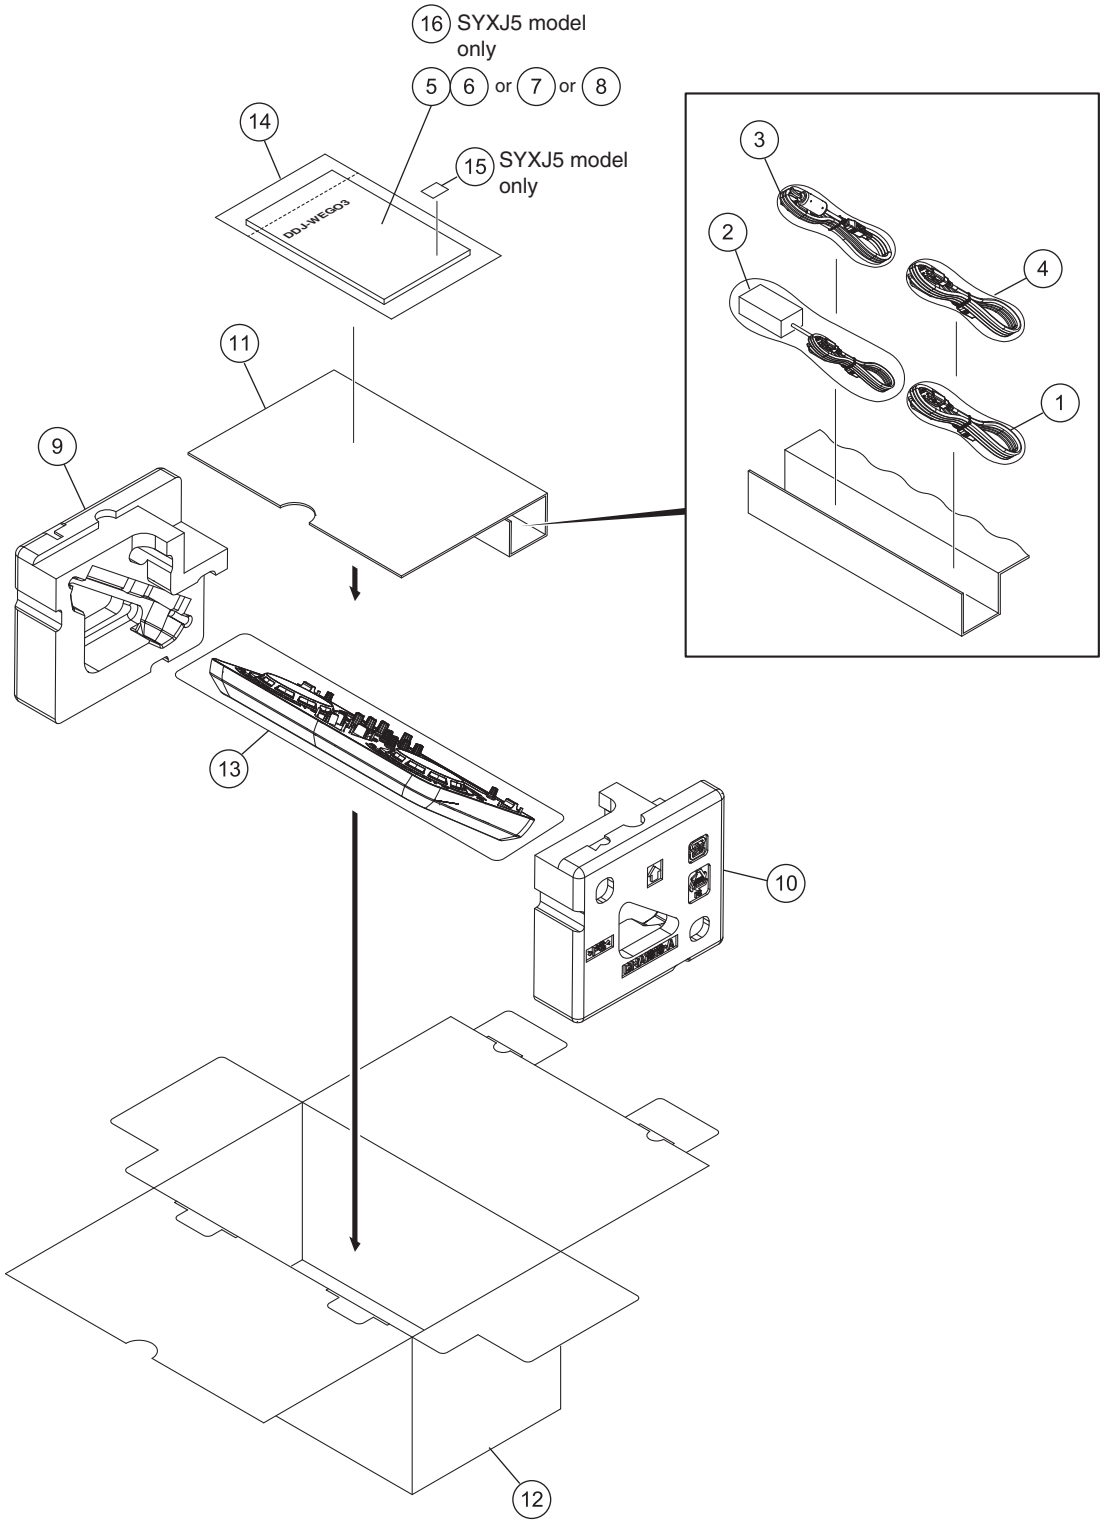

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table (2)
⚠	2	AC Adapter	DWR1546
	3	USB Cable	DDE1140
	4	iPhone/iPad Connection Cable (Lightning)	DDE1145
	5	Operating Instructions (DJ unit Setup)	See Contrast table (2)
	6	Operating Instructions (DJ unit Setup)	See Contrast table (2)
	7	Operating Instructions (DJ unit Setup)	See Contrast table (2)
	8	Operating Instructions (DJ unit Setup)	See Contrast table (2)
	9	Pad/L	DHA1918
	10	Pad/R	DHA1919
	11	Partition/ACC	DHC1086
	12	Packing Case	See Contrast table (2)
	13	Packing Sheet	AHG7053
NSP	14	Polyethylene Bag	AHG7117
	15	Label/IM1	See Contrast table (2)
NSP	16	Warranty	See Contrast table (2)


(2) CONTRAST TABLE


DDJ-WEGO3-K/SYXJ5, UXJCB, AXJ5, DDJ-WEGO3-W/SYXJ5, UXJCB, AXJ5, DDJ-WEGO3-R/SYXJ5 and UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-WEGO3-K /SYXJ5	DDJ-WEGO3-K /UXJCB	DDJ-WEGO3-K /AXJ5	DDJ-WEGO3-W /SYXJ5	DDJ-WEGO3-W /UXJCB	DDJ-WEGO3-W /AXJ5
⚠	1	Power Cord	ADG1154	XDG3052	ADG7079	ADG1154	XDG3052	ADG7079
	5	Operating Instructions (DJ unit Setup) (En, Fe, De, It, Nl)	DRH1287	Not used	Not used	DRH1287	Not used	Not used
	6	Operating Instructions (DJ unit Setup) (Es, Pt, Ru, Ko, Ja)	DRH1288	Not used	Not used	DRH1288	Not used	Not used
	7	Operating Instructions (DJ unit Setup) (En)	Not used	DRH1289	Not used	Not used	DRH1289	Not used
	8	Operating Instructions (DJ unit Setup) (Zhcn)	Not used	Not used	DRH1291	Not used	Not used	DRH1291
	12	Packing Case	DHG3373	DHG3374	DHG3376	DHG3369	DHG3370	DHG3372
	15	Label/IM1	DRW2534	Not used	Not used	DRW2534	Not used	Not used
NSP	16	Warranty	ARY7158	Not used	Not used	ARY7158	Not used	Not used

Mark	No.	Symbol and Description	DDJ-WEGO3-R /SYXJ5	DDJ-WEGO3-R /UXJCB
⚠	1	Power Cord	ADG1154	XDG3052
	5	Operating Instructions (DJ unit Setup) (En, Fe, De, It, Nl)	DRH1287	Not used
	6	Operating Instructions (DJ unit Setup) (Es, Pt, Ru, Ko, Ja)	DRH1288	Not used
	7	Operating Instructions (DJ unit Setup) (En)	Not used	DRH1289
	8	Operating Instructions (DJ unit Setup) (Zhcn)	Not used	Not used
	12	Packing Case	DHG3397	DHG3399
	15	Label/IM1	DRW2534	Not used
NSP	16	Warranty	ARY7158	Not used

9.2 EXTERIOR SECTION

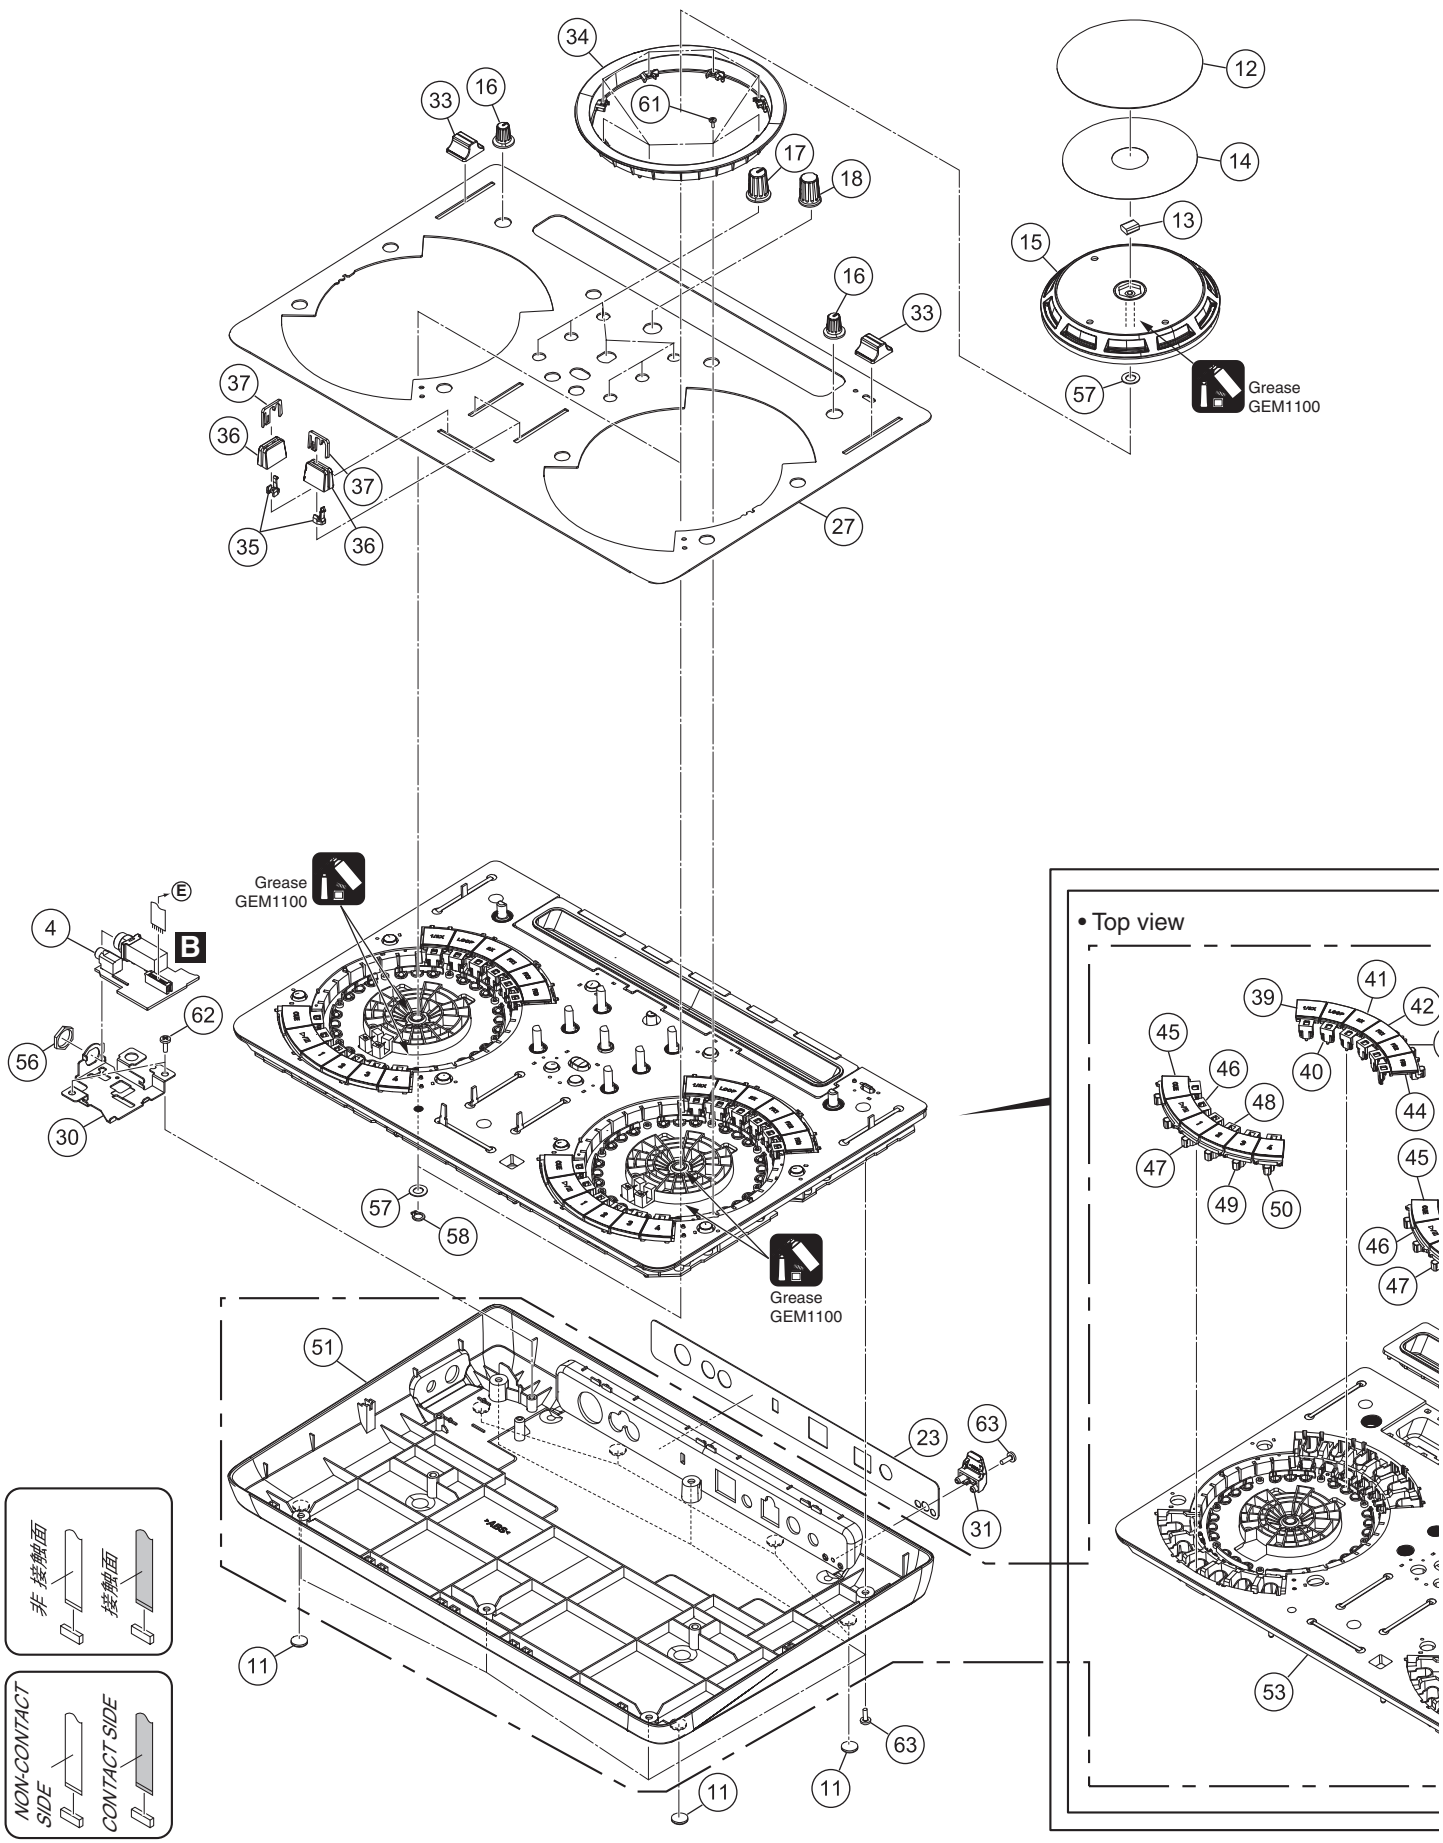

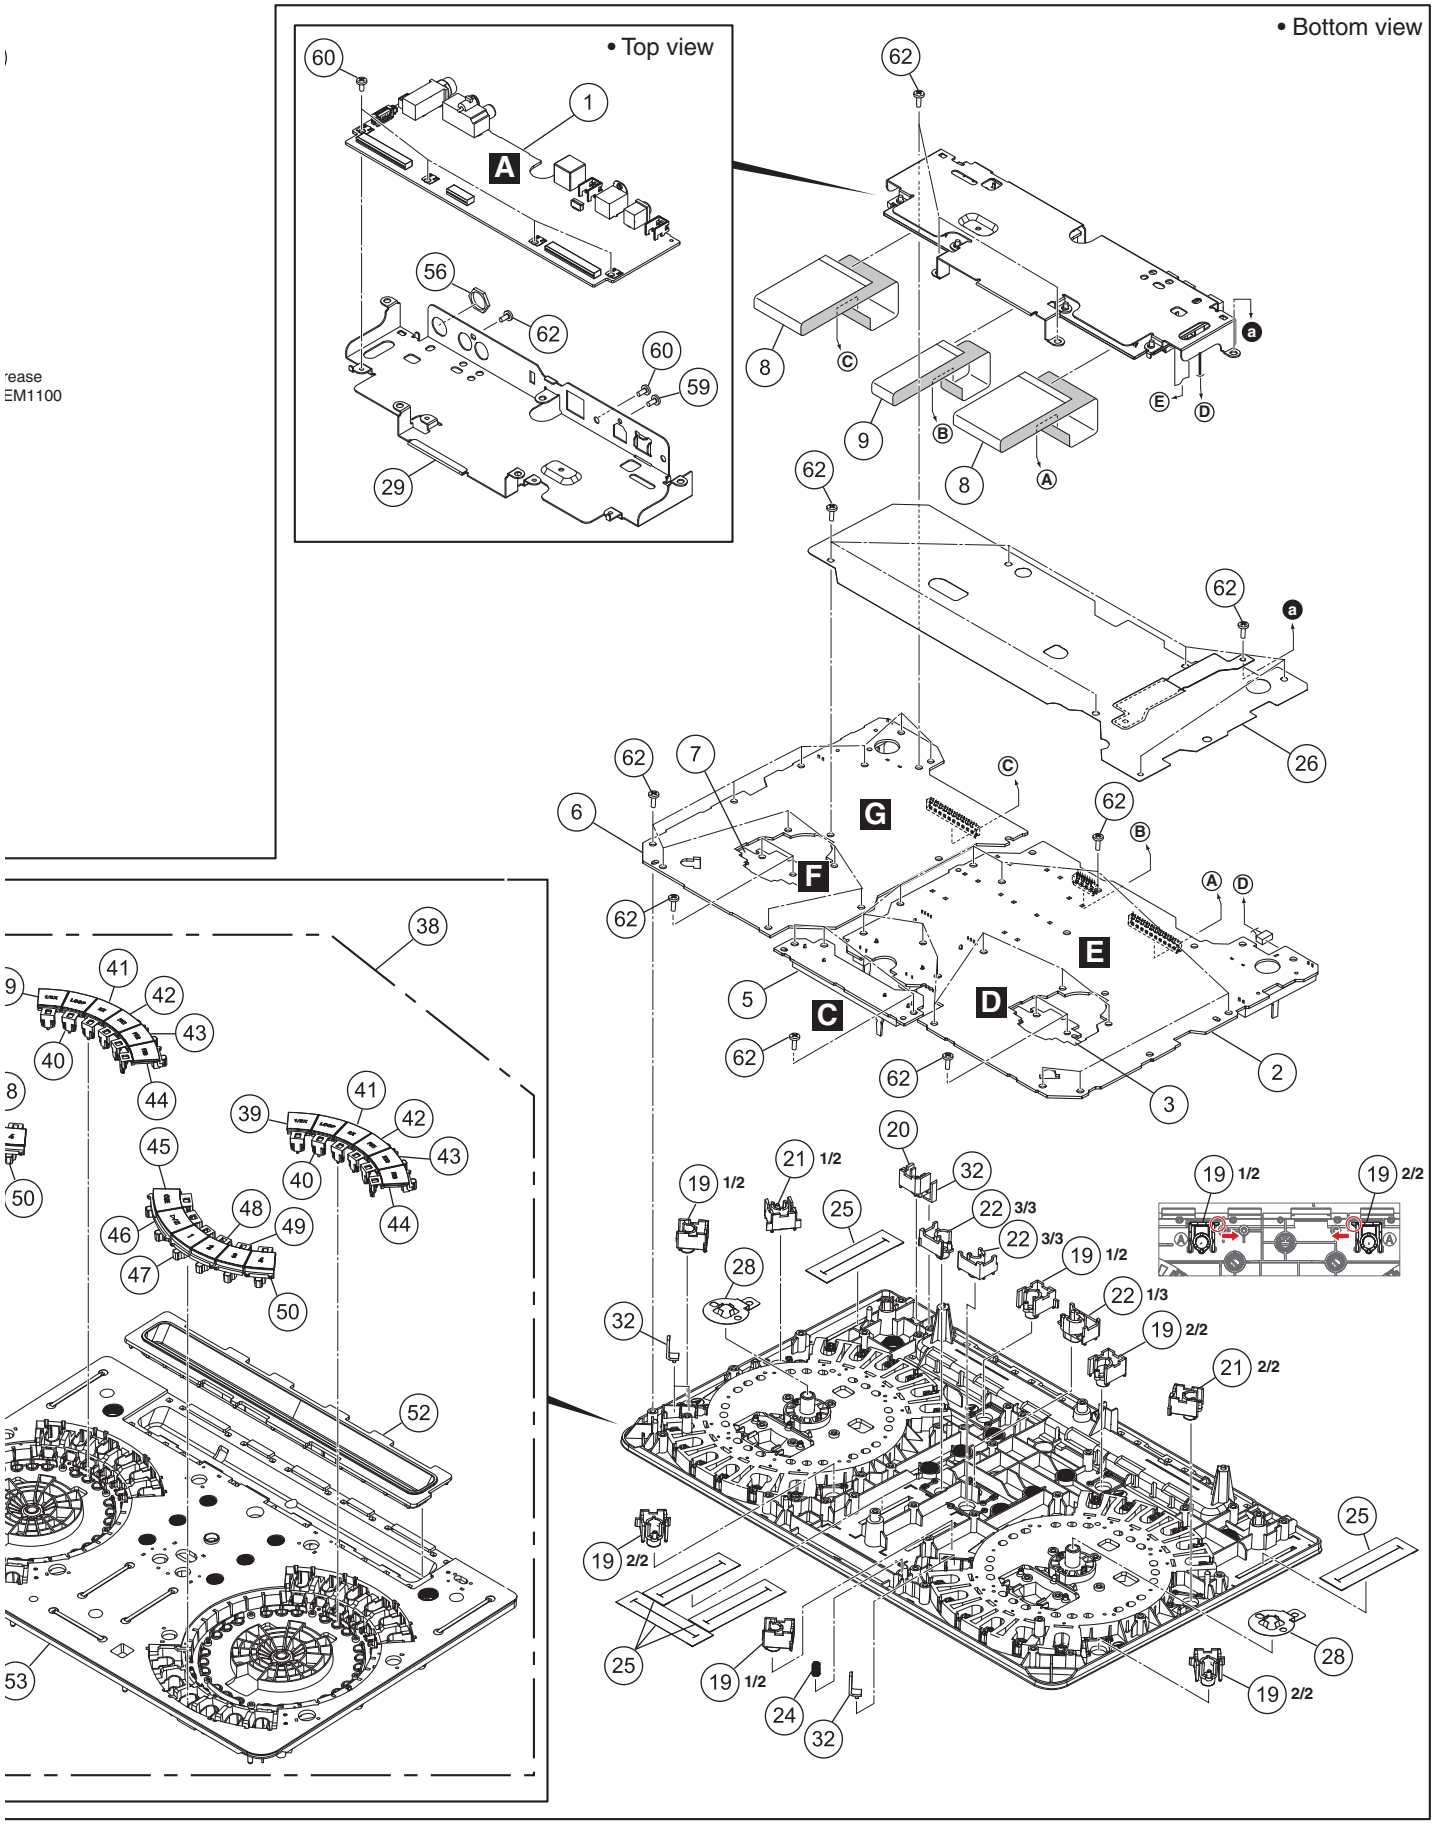
• Top view
• Bottom view
A
B
C
D
E
F
G
1
2
3
5
6
7
8
9
19 1/2
19 2/2
20
21 1/2
21 2/2
22 3/3
22 1/3
24
25
26
28
29
32
38
39
40
41
42
43
44
45
46
47
48
49
50
52
53
56
59
60
62

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN Assy	DWX3591
	2	PNL1B Assy *1	DWX3592
NSP	3	JOG1 Assy *1	DWX3593
	4	HPJK Assy	DWX3594
	5	CRFD Assy	DWX3597
	6	PNL2B Assy *2	DWX3595
NSP	7	JOG2 Assy *2	DWX3596
	8	FFC/39P	DDD1673
	9	FFC/15P	DDD1674
	10	•••••	
	11	Foot/RUB	DEB2012
	12	Plate/JOG	See Contrast table (2)
	13	Gasket/JOG	DEC3539
	14	DS Tape/JOG	DEH1057
	15	Jog Dial/ASW	See Contrast table (2)
	16	Rotary Knob S (Black)	See Contrast table (2)
	17	Knob/PLS	See Contrast table (2)
	18	Knob/RBK	See Contrast table (2)
	19	Button/TMP	See Contrast table (2)
	20	Button/TIM	See Contrast table (2)
	21	Button/MT	See Contrast table (2)
	22	Button/CUE	See Contrast table (2)
	23	Sheet/TML	See Contrast table (2)
	24	Coil Spring/SFX	DBH1796
	25	Fader Packing	DEC3355
	26	Barrier	DEC3559
	27	Panel/AL	See Contrast table (2)
	28	Plate/CND	DNH3137
	29	Stay/TML	DNH3162
	30	Stay/PHN	DNH3163
	31	Hook/CRD	See Contrast table (2)
	32	Lens/PWR	DNK6089
	33	Knob/SLD	See Contrast table (2)
	34	Escutcheon	See Contrast table (2)
	35	Stopper/SLD	DNK6365

Mark	No.	Description	Part No.
	36	Knob/SL1	See Contrast table (2)
	37	Knob/SL2	See Contrast table (2)
⚠	38	1..Panel/BS	See Contrast table (2)
	39	2..Button/BL1	See Contrast table (2)
	40	2..Button/BL2	See Contrast table (2)
	41	2..Button/BL3	See Contrast table (2)
	42	2..Button/BF1	See Contrast table (2)
	43	2..Button/BF2	See Contrast table (2)
	44	2..Button/BF3	See Contrast table (2)
	45	2..Button/BC	See Contrast table (2)
	46	2..Button/BP	See Contrast table (2)
	47	2..Button/BH1	See Contrast table (2)
	48	2..Button/BH2	See Contrast table (2)
	49	2..Button/BH3	See Contrast table (2)
	50	2..Button/BH4	See Contrast table (2)
⚠	51	2..Chassis	See Contrast table (2)
	52	2..Holder/PAD	See Contrast table (2)
⚠	53	2..Panel/BS	DNK6362
	54	•••••	
	55	•••••	
	56	Nut (M12)	NKX2FNI
	57	Washer	WA62D095D050
	58	Washer	YC60FAC
	59	Screw (M3*5)	DBA1340
	60	Screw	BBZ30P060FTC
	61	Screw	BPZ20P050FTC
	62	Screw	BPZ30P080FNI
	63	Screw	See Contrast table (2)

*1: As the PNL1B Assy and JOG1 Assy are wired with jumper leads.
If a DWX3592 (PNL1B Assy) is ordered, the PNL1B Assy and JOG1 Assy wired with jumper leads will be delivered.
The part supply is impossible in JOG1 Assy alone (NSP: non-service part).

*2: As the PNL2B Assy and JOG2 Assy are wired with jumper leads.
If a DWX3595 (PNL2B Assy) is ordered, the PNL2B Assy and JOG2 Assy wired with jumper leads will be delivered.
The part supply is impossible in JOG2 Assy alone (NSP: non-service part).

(2) CONTRAST TABLE

DDJ-WEGO3-K, DDJ-WEGO3-W and DDJ-WEGO3-R are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-WEGO3-K	DDJ-WEGO3-W	DDJ-WEGO3-R
	12	Plate/JOG	DAH2999	DAH2999	Not used
	12	Plate	Not used	Not used	DAH3024
	15	Jog Dial/ASW	DXB2160	DXB2160	Not used
	15	Jog Dial	Not used	Not used	DXB2166
	16	Rotary Knob S (Black)	DAA1262	Not used	DAA1262
	16	Knob/SWH	Not used	DAA1335	Not used
	17	Knob/PLS	DAA1324	Not used	DAA1324
	17	Knob/WHT	Not used	DAA1336	Not used
	18	Knob/RBK	DAA1337	Not used	DAA1337
	18	Knob/RWH	Not used	DAA1334	Not used
	19	Button/TMP	DAC2845	Not used	DAC2845
	19	Button/SFT	Not used	DAC3006	Not used
	20	Button/TIM	DAC2849	Not used	DAC2849
	20	Button/STB	Not used	DAC3010	Not used
	21	Button/MT	DAC2875	Not used	DAC2875
	21	Button/SNC	Not used	DAC3005	Not used
	22	Button/CUE	DAC3012	DAC3007	DAC3012
	23	Sheet/TML	DAH3001	DAH3000	DAH3001
	27	Panel/AL	DNB1236	DNB1235	DNB1238
	31	Hook/CRD	DNK6084	Not used	DNK6084
	31	Hook/CDW	Not used	DNK6398	Not used
	33	Knob/SLD	DNK6283	Not used	DNK6283
	33	Knob/TMP	Not used	DNK6355	Not used
	34	Escutcheon	DNK6359	DNK6351	DNK6359
	36	Knob/SL1	DNK6369	DNK6366	DNK6369
	37	Knob/SL2	DNK6370	DNK6367	DNK6370
⚠	38	Panel/BS	DXB2159	DXB2158	DXB2159
	39	Button/BL1	DAC3055	Not used	DAC3055
	39	Button/WL1	Not used	DAC3043	Not used
	40	Button/BL2	DAC3056	Not used	DAC3056
	40	Button/WL2	Not used	DAC3044	Not used
	41	Button/BL3	DAC3057	Not used	DAC3057
	41	Button/WL3	Not used	DAC3045	Not used
	42	Button/BF1	DAC3058	Not used	DAC3058
	42	Button/WF1	Not used	DAC3046	Not used
	43	Button/BF2	DAC3059	Not used	DAC3059
	43	Button/WF2	Not used	DAC3047	Not used
	44	Button/BF3	DAC3060	Not used	DAC3060
	44	Button/WF3	Not used	DAC3048	Not used
	45	Button/BC	DAC3061	Not used	DAC3061
	45	Button/WC	Not used	DAC3049	Not used
	46	Button/BP	DAC3062	Not used	DAC3062
	46	Button/BP	Not used	DAC3050	Not used
	47	Button/BH1	DAC3063	Not used	DAC3063
	47	Button/WH1	Not used	DAC3051	Not used
	48	Button/BH2	DAC3064	Not used	DAC3064
	48	Button/WH2	Not used	DAC3052	Not used
	49	Button/BH3	DAC3065	Not used	DAC3065
	49	Button/WH3	Not used	DAC3053	Not used
	50	Button/BH4	DAC3066	Not used	DAC3066
	50	Button/WH4	Not used	DAC3054	Not used
⚠	51	Chassis	DNK6357	DNK6348	DNK6404
	52	Holder/PAD	DNK6358	DNK6349	DNK6358
	63	Screw	BPZ30P100FTB	BPZ30P080FNI	BPZ30P100FTB