
9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

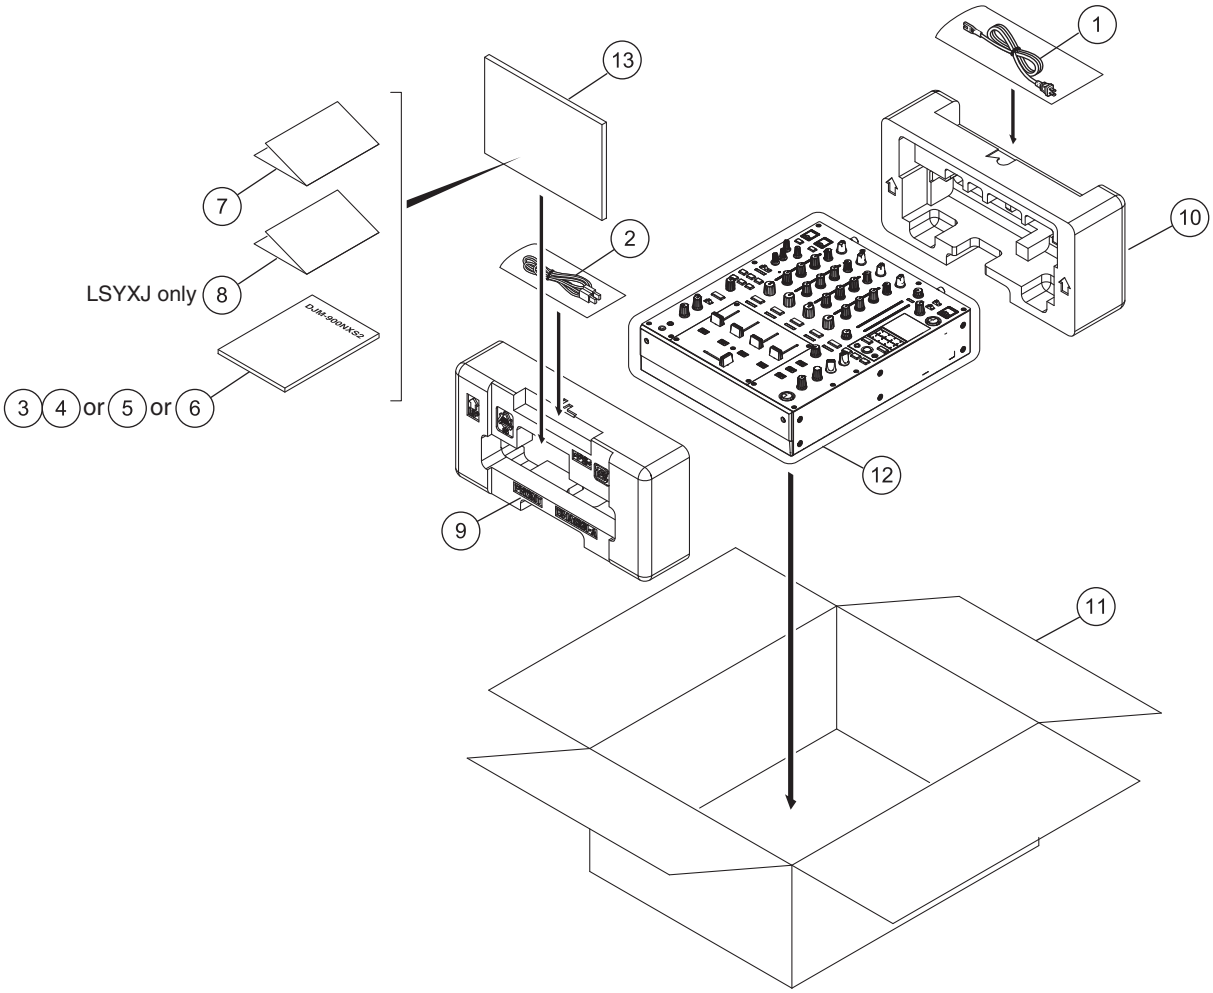

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table
	2	USB Cable	DDE1128
	3	Operating Instructions (Quick Start Guide)	See Contrast table
	4	Operating Instructions (Quick Start Guide)	See Contrast table
	5	Operating Instructions (Quick Start Guide)	See Contrast table
	6	Operating Instructions (Quick Start Guide)	See Contrast table
NSP	7	Leaflet	See Contrast table
NSP	8	Warranty	See Contrast table
	9	Packing Pad	DHA1931
	10	Packing Pad	DHA1932
	11	Packing Case	See Contrast table
	12	Packing Sheet	RHC1023
NSP	13	Polyethylene Bag	AHG7117

(2) CONTRAST TABLE

DJM-900NXS2/LSYXJ, UXJCB and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-900NXS2 /LSYXJ	DJM-900NXS2 /UXJCB	DJM-900NXS2 /XJCN
⚠	1	Power Cord	ADG1244	DDG1108	DDG1114
	3	Operating Instructions (Quick Start Guide)(En, Fr, De, It)	DRH1331	Not used	Not used
	4	Operating Instructions (Quick Start Guide)(Nl, Es, Pt, RU)	DRH1332	Not used	Not used
	5	Operating Instructions (Quick Start Guide)(En)	Not used	DRH1330	Not used
	6	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	DRH1333
NSP	7	Leaflet	DRH1275	DRH1275	DRH1274
NSP	8	Warranty	ARY7158	Not used	Not used
	11	Packing Case	DHG3429	DHG3445	DHG3447

9.2 EXTERIOR SECION

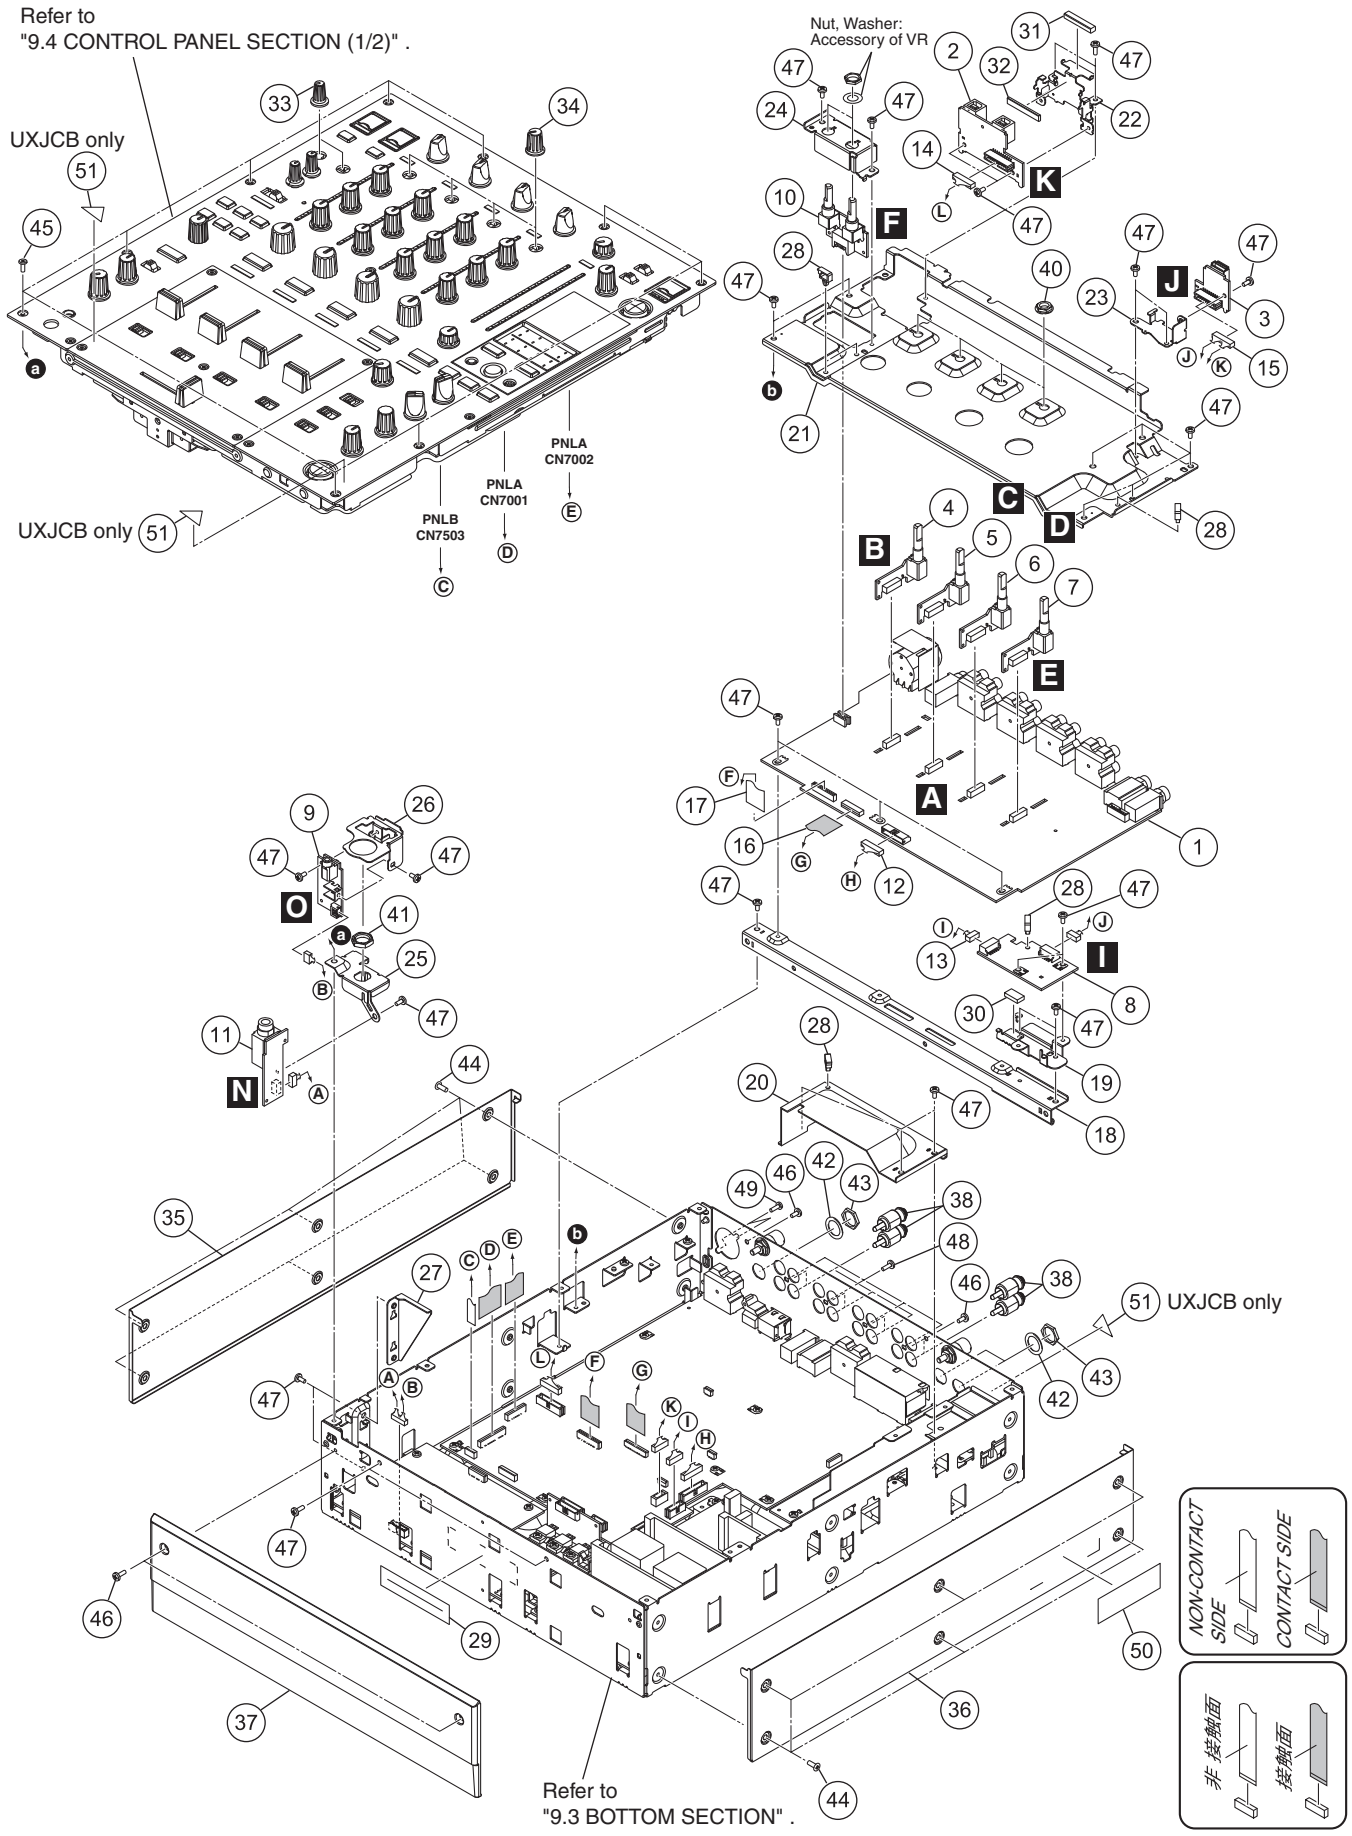

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	AINB Assy	DWX3713
	2	USBB Assy	DWX3711
	3	USBC Assy	DWX3712
	4	TRM1 Assy	DWX3715
	5	TRM2 Assy	DWX3716
	6	TRM3 Assy	DWX3717
	7	TRM4 Assy	DWX3718
	8	USBP Assy	DWX3734
	9	HPJM Assy	DWX3739
	10	MTRM Assy	DWX3729
	11	HPJK Assy	DWX3731
	12	Crimp Connector	PF10PP-D07
	13	Connector Assy	PF06PP-S12
	14	Shielded Conn-Cable	DDA1054
	15	Shielded Conn-Cable	DDA1056
	16	40P FFC	DDD1550
	17	FFC	DDD1715
	18	Stay	DNF1960
	19	Stay	DNF1951
	20	Case	DNF1952
	21	Stay	DNF1953
	22	Stay	DNF1954
	23	Stay	DNF1955
	24	Stay	DNF1958
	25	Stay	DNF1966
	26	Stay	DNF1967
	27	Stay	DNF1968
	28	Locking Mini Clamp	DEC2439
	29	Fader Packing	DEC2903
	30	Sheet	DEC3621
	31	EMC Gasket	DEC3637
	32	EMC Gasket	DEC3638
	33	Knob	DAA1354
	34	Knob/CH	DAA1321
	35	Panel	DNF1956
	36	Panel	DNF1957
⚠	37	Panel	DNK6509
	38	Plug/Pin	DKM1024
	39	•••••	
	40	Flange Nut M7	DBN1011
	41	Nut M12	DBN1018
	42	Washer	DEC2920
	43	Nut	NKX2FTC
	44	Screw (FE)	DBA1290
	45	Screw	DBA1446
	46	Screw	BBZ30P060FTB
	47	Screw	BBZ30P060FTC
	48	Screw	BPZ30P080FTB
	49	Screw	PPZ30P080FTB
NSP	50	Name Label	See Contrast table
NSP	51	Label	See Contrast table

(2) CONTRAST TABLE

DJM-900NXS2/LSYXJ, UXJCB and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-900NXS2 /LSYXJ	DJM-900NXS2 /UXJCB	DJM-900NXS2 /XJCN
NSP	50	Name Label	DRW2687	DRW2675	DRW2674
NSP	51	Label	Not used	DRW1975	Not used


9.3 BOTTOM SECION

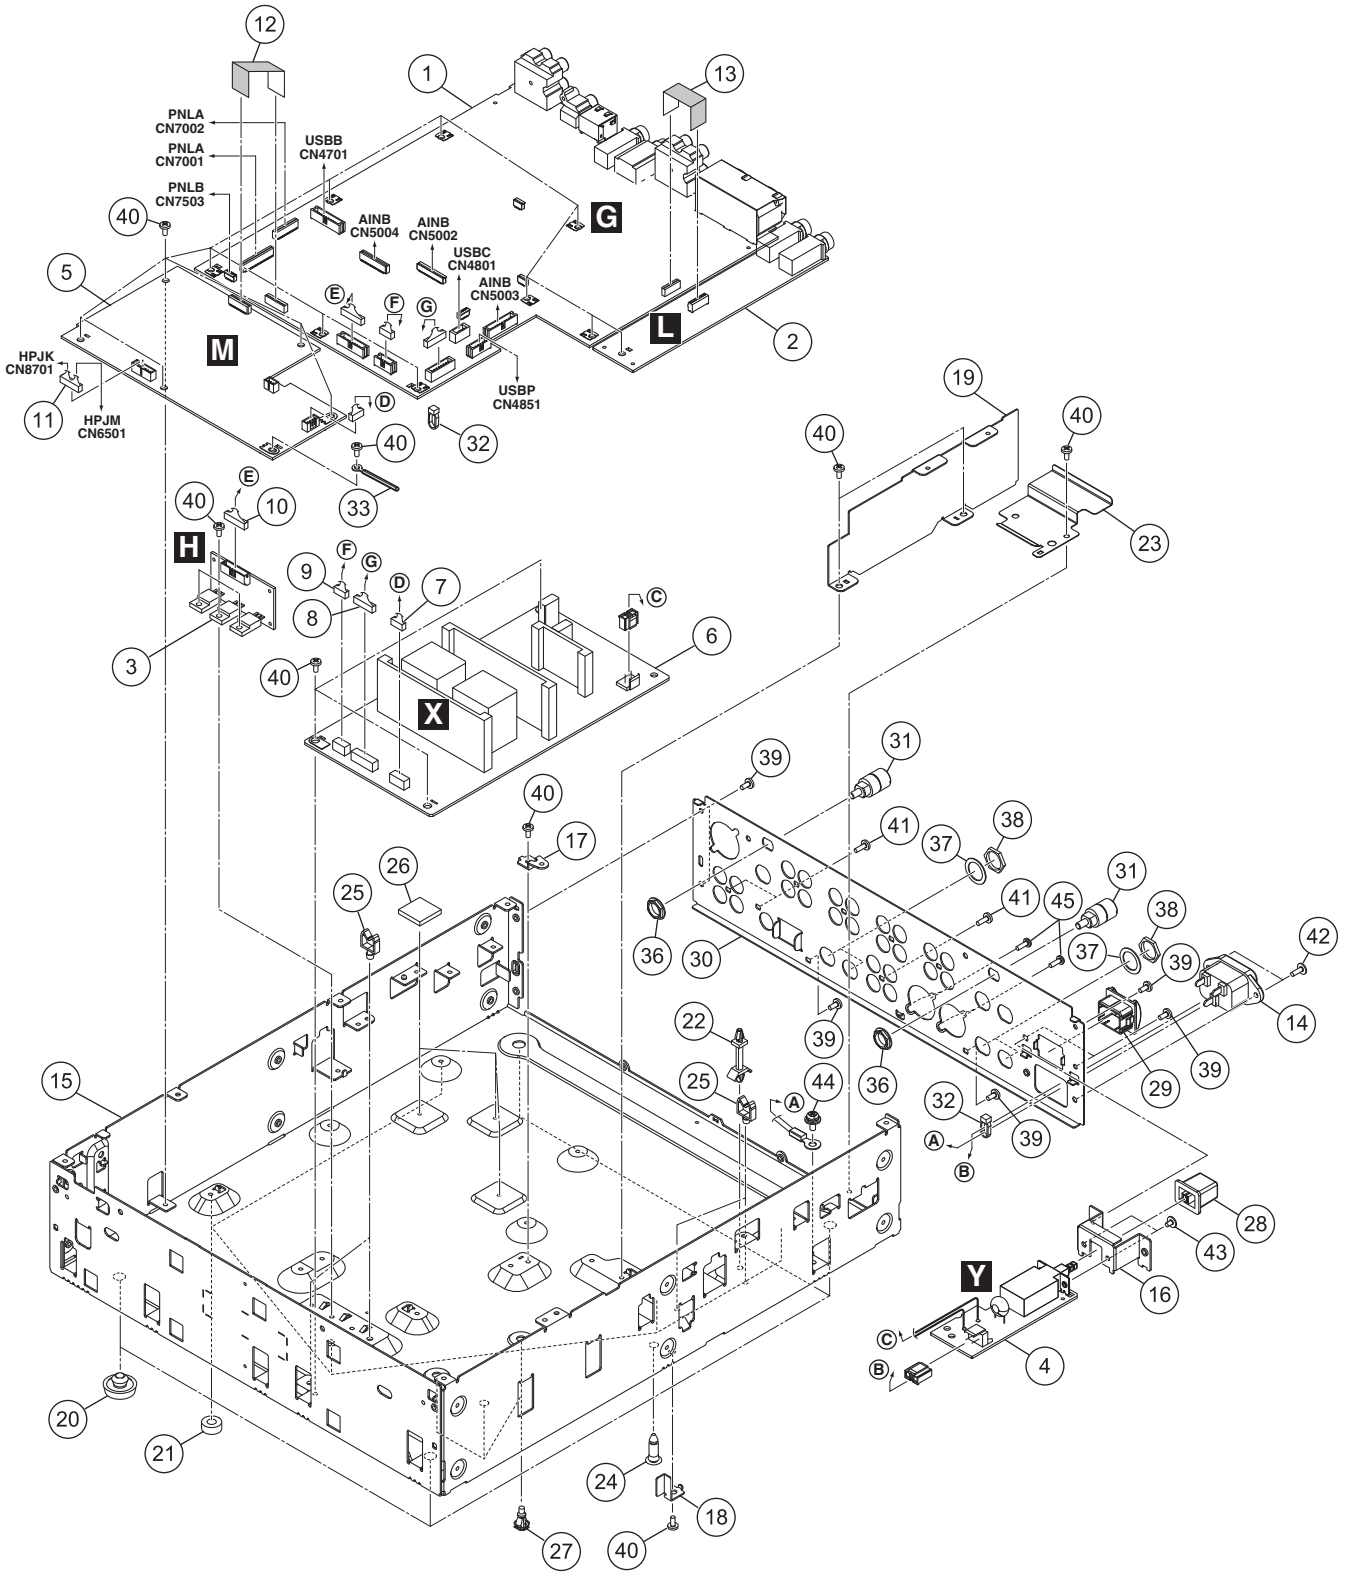

BOTTOM SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN Assy	DWX3710
	2	SEND Assy	DWX3714
	3	REGB Assy	DWX3721
	4	ACSW Assy	DWX3722
	5	HPPW Assy	DWX3728
⚠	6	SW POWER SUPPLY	DWR1549
	7	Crimp Connector	PF05PP-S25
	8	Crimp Connector	PF08PP-S20
	9	Connector Assy	PF04PP-S12
	10	Crimp Connector	PF09PP-S07
	11	Shielded Conn-Cable	DDA1061
	12	FFC	DDD1714
	13	FFC	DDD1716
⚠	14	AC Inlet	DKP3978
	15	Chassis	DNA1457
	16	Bracket PSW	DNF1759
NSP	17	PCB Stay (FE)	VNE2489
	18	Stay	DNF1950
	19	Shield Plate	DNF1959
	20	Foot (Rubber)	REC-434
NSP	21	Spacer	AEB7092
NSP	22	PCB Spacer	AEC1446
	23	Sheet	DEC3617
	24	PCB Holder	PNW2029
	25	Holder	VEC1355
	26	Sheet	DEC3618
	27	Spacer	DEC3636
	28	Power Knob	DAC2306
	29	Power Knob Guard	DNK4534
	30	Rear Panel	DNC2119
	31	Earth Terminal	DKE1019
	32	Cable Tie	ZCA-SKB90BK
	33	Cord Clamper (Steel)	RNH-184
	34	•••••	
	35	•••••	
	36	Flange Nut M9	DBN1008
	37	Washer	DEC2920
	38	Nut	NKX2FTC
	39	Screw	BBZ30P060FTB
	40	Screw	BBZ30P060FTC
	41	Screw	BPZ30P080FTB
	42	Screw	IBZ30P080FTB
	43	Screw	IMZ30P040FTC
	44	Screw	PMH40P080FTC
	45	Screw	PPZ30P080FTB

9.4 CONTROL PANEL SECTION (1/2)

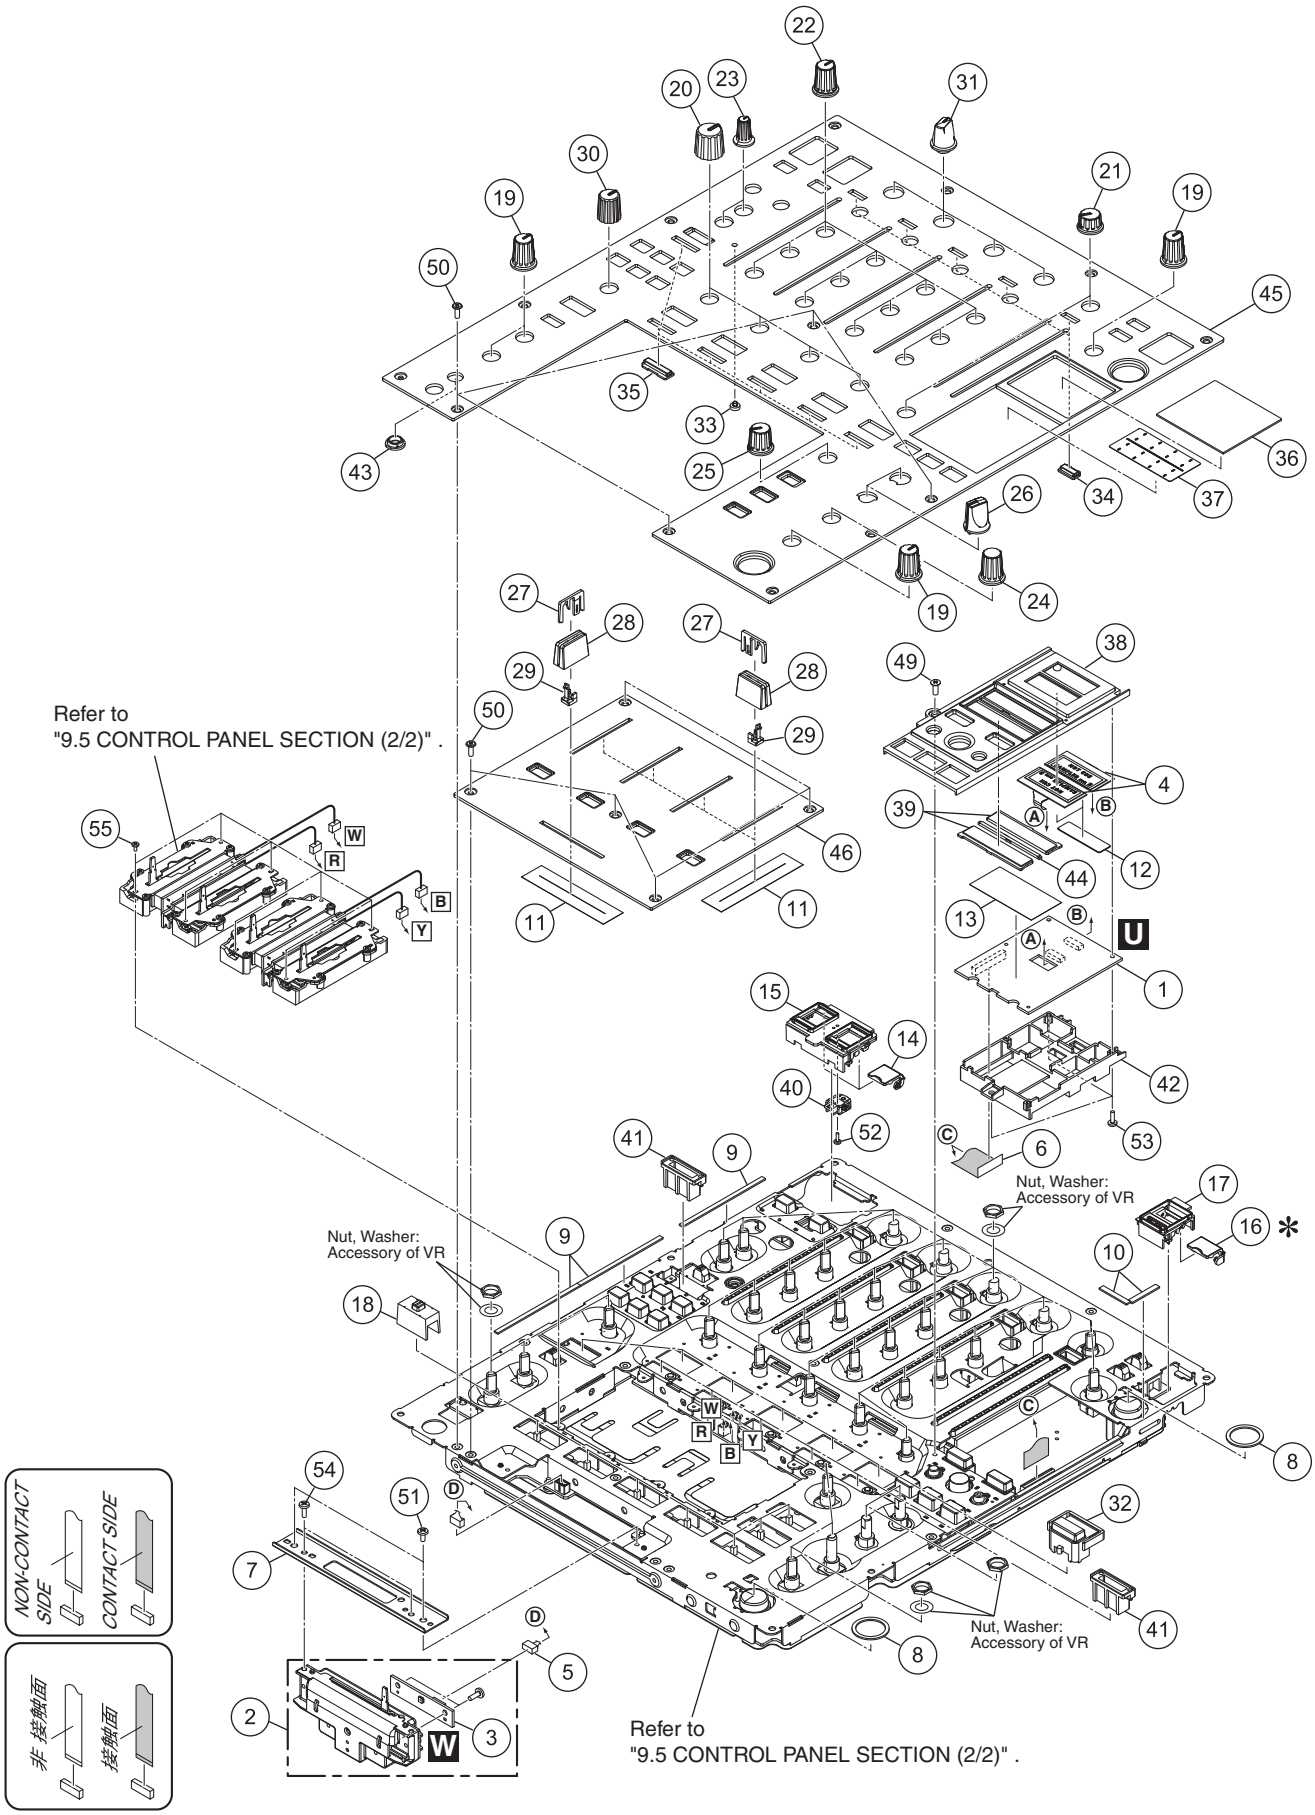



CONTROL PANEL SECTION (1/2) PARTS LIST

Mark	No.	Description	Part No.
	1	CDCB Assy	DWX3733
	2	1..CROSS FADER Assy	DXA2257
NSP	3	2..CRFD Assy	DWX3258
	4	Matrix OEL	MXS4057
	5	Connector Assy	PF03PP-B07
	6	FFC	DDD1719
	7	Stay/CRF	DNF1927
	8	SW Packing (EF)	DEC2929
	9	Packing/L	DEC3416
	10	Packing/S	DEC3417
	11	Fader Packing	DEC2903
	12	Sheet	DEC3615
	13	Tape	DEH1083
	14	Lid	DNK6550
	15	Panel	DNK6539
	16	Lid	See Contrast table *
	17	Panel	DNK6651
	18	Slide SW Cap (W)	DAC2401
	19	Rotary Knob (BN)	DAA1220
	20	Knob/FRE	DAA1309
	21	Rotary Knob Low (BN)	DAA1265
	22	Knob/RSW	DAA1305
	23	Knob/RSW	DAA1307
	24	Rotary SW Knob (C)	DAA1180
	25	Rotary SW Knob (MA)	DAA1198
	26	Select Knob	DAA1205
	27	Slider Knob 2	DAC2685
	28	Slider Knob 1	DAC2684
	29	Slider Knob Stopper	DNK5888
	30	Knob (RES)	DAA1250
	31	Knob	DAA1345
	32	Button/CUE	DAC2882
	33	Lens	DNK4532
	34	Lens	DNK6516
	35	Lens	DNK6517
	36	Plate	DAK1003
	37	Panel	DNK6514
	38	Panel	DNK6515
	39	Lens	DNK6518
	40	Holder	DNK6549
	41	Holder	DNK6512
	42	Holder	DNK6513
	43	Holder	DNK6552
	44	Lens	DNK6553
	45	Control Panel	DNB1243
	46	Panel	DAH3053
	47	•••••	
	48	•••••	
	49	Screw (FE)	DBA1290
	50	Screw	DBA1446
	51	Screw	BBZ30P060FTC
	52	Screw	BPZ20P060FTC
	53	Screw	BPZ26P080FTC
	54	Screw	BPZ30P080FTB
	55	Screw	BSZ20P040FTB

Note*:
The shape of the lid (No.16) has been changed to improve the quality of attachment.
Check [Before change] and [After change] rows in the table below and choose the lid and stay (No.8 on the next page) to replace.


■ Contrast table

Mark	No.	Part Name		Part No.	Stay	Note
	16	Lid	Before Change	DNK6551	DND1286 (NSP)	For details of each part, refer to the table below.
			After Change	DNK6652	DND1308	

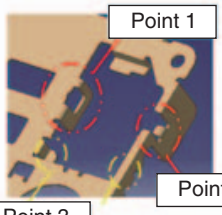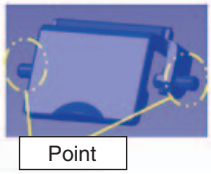Before change	After change	Note
Stay (DND1286)  Lid (DNK6551) 	Stay (DND1308)  Lid (DNK6652) 	Number of units before change: LSYXJ: 4,000 UXJCB: 2,000 XJCN: 100 (The number of units is approximate. Serial number is unavailable.)


9.5 CONTROL PANEL SECTION (2/2)

• Bottom view

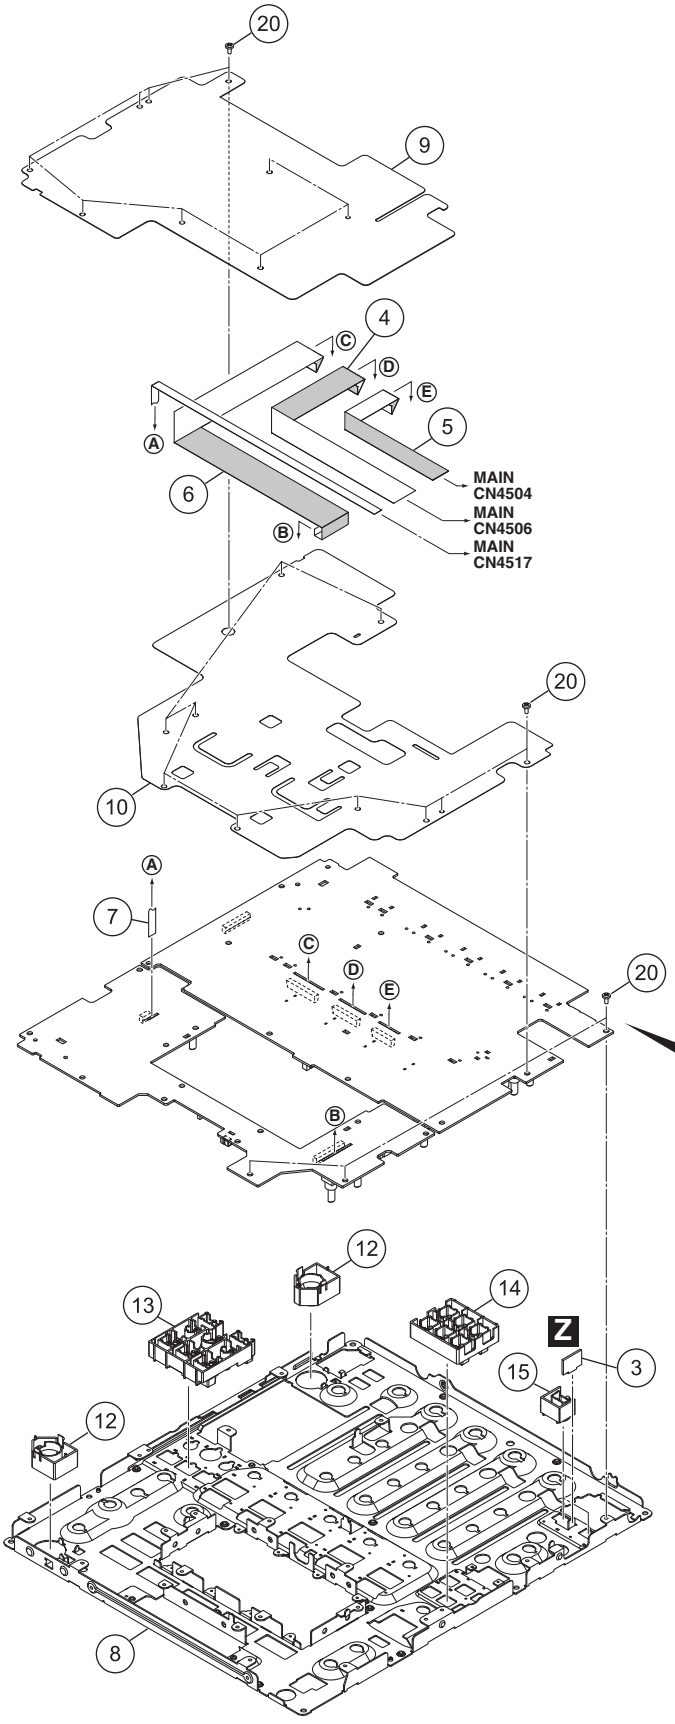


■ Channel Fader Section

*: These parts may substitute it each other.
*: 相互で代用可能

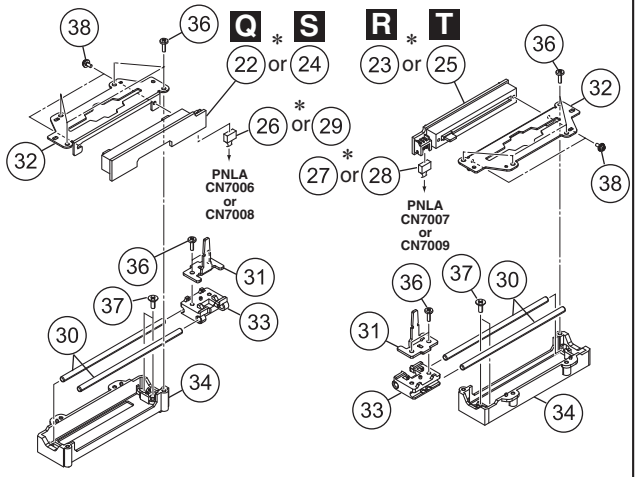



Lubricating oil
(GYA1001)

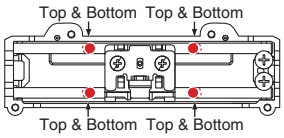

Note:
Greasing must be performed at a total of 8 points, 2 points each for the upper and bottom places of each shaft. (0.4 to 1 mg per point × 8 points)
After applying grease, move the slider base back and forth from one end to the other for approximately 10 to 20 strokes, in order to fully spread the grease.

注意:
グリス塗布位置は各シャフト上下2箇所ずつ計8箇所です。
(1ポイント当たり 0.4〜1 mg ×8ポイント)
グリス塗布後はスライダーベースを動かして (フルストローク)
摺動部にグリスを十分なじませてください。
(動かす回数の目安は10〜20往復)

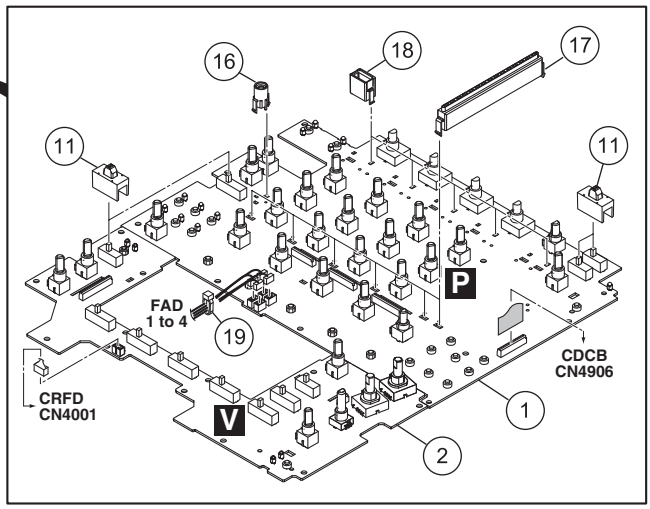

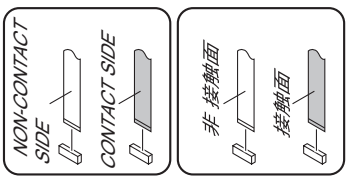

CONTROL PANEL SECTION (2/2) PARTS LIST

Mark	No.	Description	Part No.
	1	PNLA Assy	DWX3719
	2	PNLB Assy	DWX3720
	3	GRDM Assy	DWX3862
	4	FFC	DDD1717
	5	FFC	DDD1718
	6	FFC	DDD1720
	7	FFC	DDD1738
	8	Stay	DND1308
	9	Sheet	DEC3616
	10	Sheet	DEC3620
	11	Cap	DAC3136
	12	Button	DAC3141
	13	Button	DAC3142
	14	Button	DAC3143
	15	Button	DAC3144
	16	Lens Holder	DNK4533
	17	Level Meter Assy	DXB1882
	18	Holder	DNK6511
	19	Cable Tie	ZCA-SKB90BK
	20	Screw	BBZ30P060FTC
	21	•••••	
	22	FAD1 Assy	DWX3723
	23	FAD2 Assy	DWX3724
	24	FAD3 Assy	DWX3725
	25	FAD4 Assy	DWX3726
	26	Connector Assy	PF03PP-B10
	27	Crimp Connector	PF03PP6B10
	28	Connector Assy	PF03PP4B12
	29	Connector Assy	PF03PP2B12
NSP	30	Guide Shaft VK1	DLA1978
	31	Lever Plate	DNH2954
	32	VR Stay	DNH2955
	33	Slider Base	DNK5851
	34	Shaft Holder	DNK5852
	35	•••••	
	36	Screw	BPZ20P060FTC
	37	Screw	CPZ26P080FTC
	38	Screw	PMH20P040FTC