
9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *Screws adjacent to ▼ mark on product are used for disassembly.*
● *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

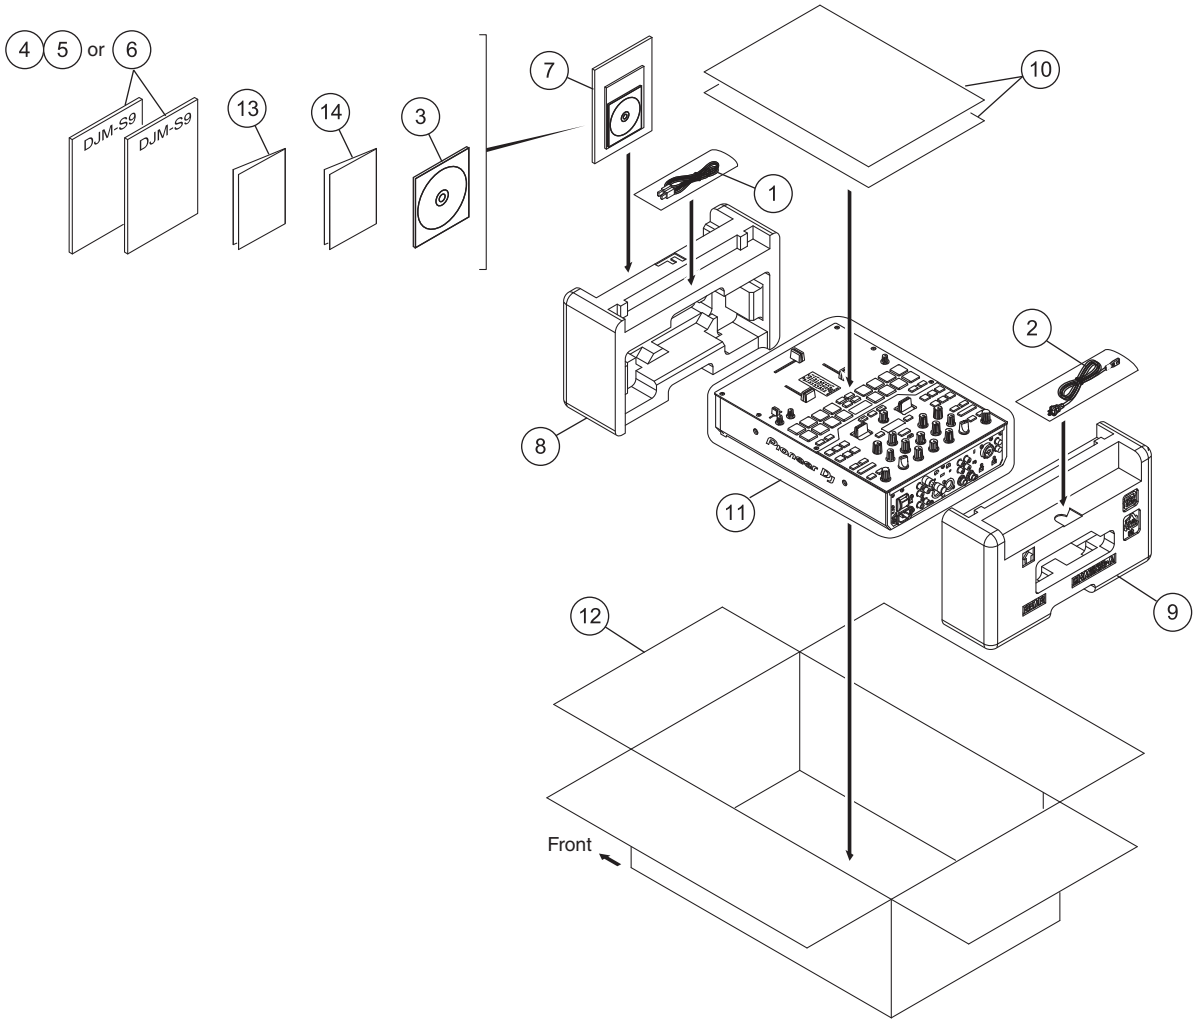

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	USB Cable	DDE1128
⚠	2	Power Cord	See Contrast table (2)
NSP	3	CD ROM Assy/DVS	DXX2734
	4	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	5	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	6	Operating Instructions (Quick Start Guide)	See Contrast table (2)
NSP	7	Polyethylene Bag	AHG7117
	8	Packing Pad	DHA1929
	9	Packing Pad	DHA1930
	10	Packing Board	DHB1002
	11	Sheet	RHX1006
	12	Packing Case	See Contrast table (2)
NSP	13	Leaflet/FPC	DRM1393
NSP	14	Warranty Card	See Contrast table (2)

(2) CONTRAST TABLE

DJM-S9/LSYXJ, DJM-S9/UXJCB, DJM-S9-N/LSYXJ and DJM-S9-N/UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-S9 /LSYXJ	DJM-S9 /UXJCB	DJM-S9-N /LSYXJ	DJM-S9-N /UXJCB
⚠	2	Power Cord	ADG1244	DDG1108	ADG1244	DDG1108
	4	Operating Instructions (Quick Start Guide) (En, Fr, De, It)	DRH1334	Not used	DRH1334	Not used
	5	Operating Instructions (Quick Start Guide) (Nl, Es, Pt, Rs)	DRH1335	Not used	DRH1335	Not used
	6	Operating Instructions (Quick Start Guide) (En)	Not used	DRH1336	Not used	DRH1336
	12	Packing Case	DHG3420	DHG3421	DHG3435	DHG3436
NSP	14	Warranty Card	ARY7158	Not used	ARY7158	Not used

9.2 EXTERIOR and CH FADER SECTION

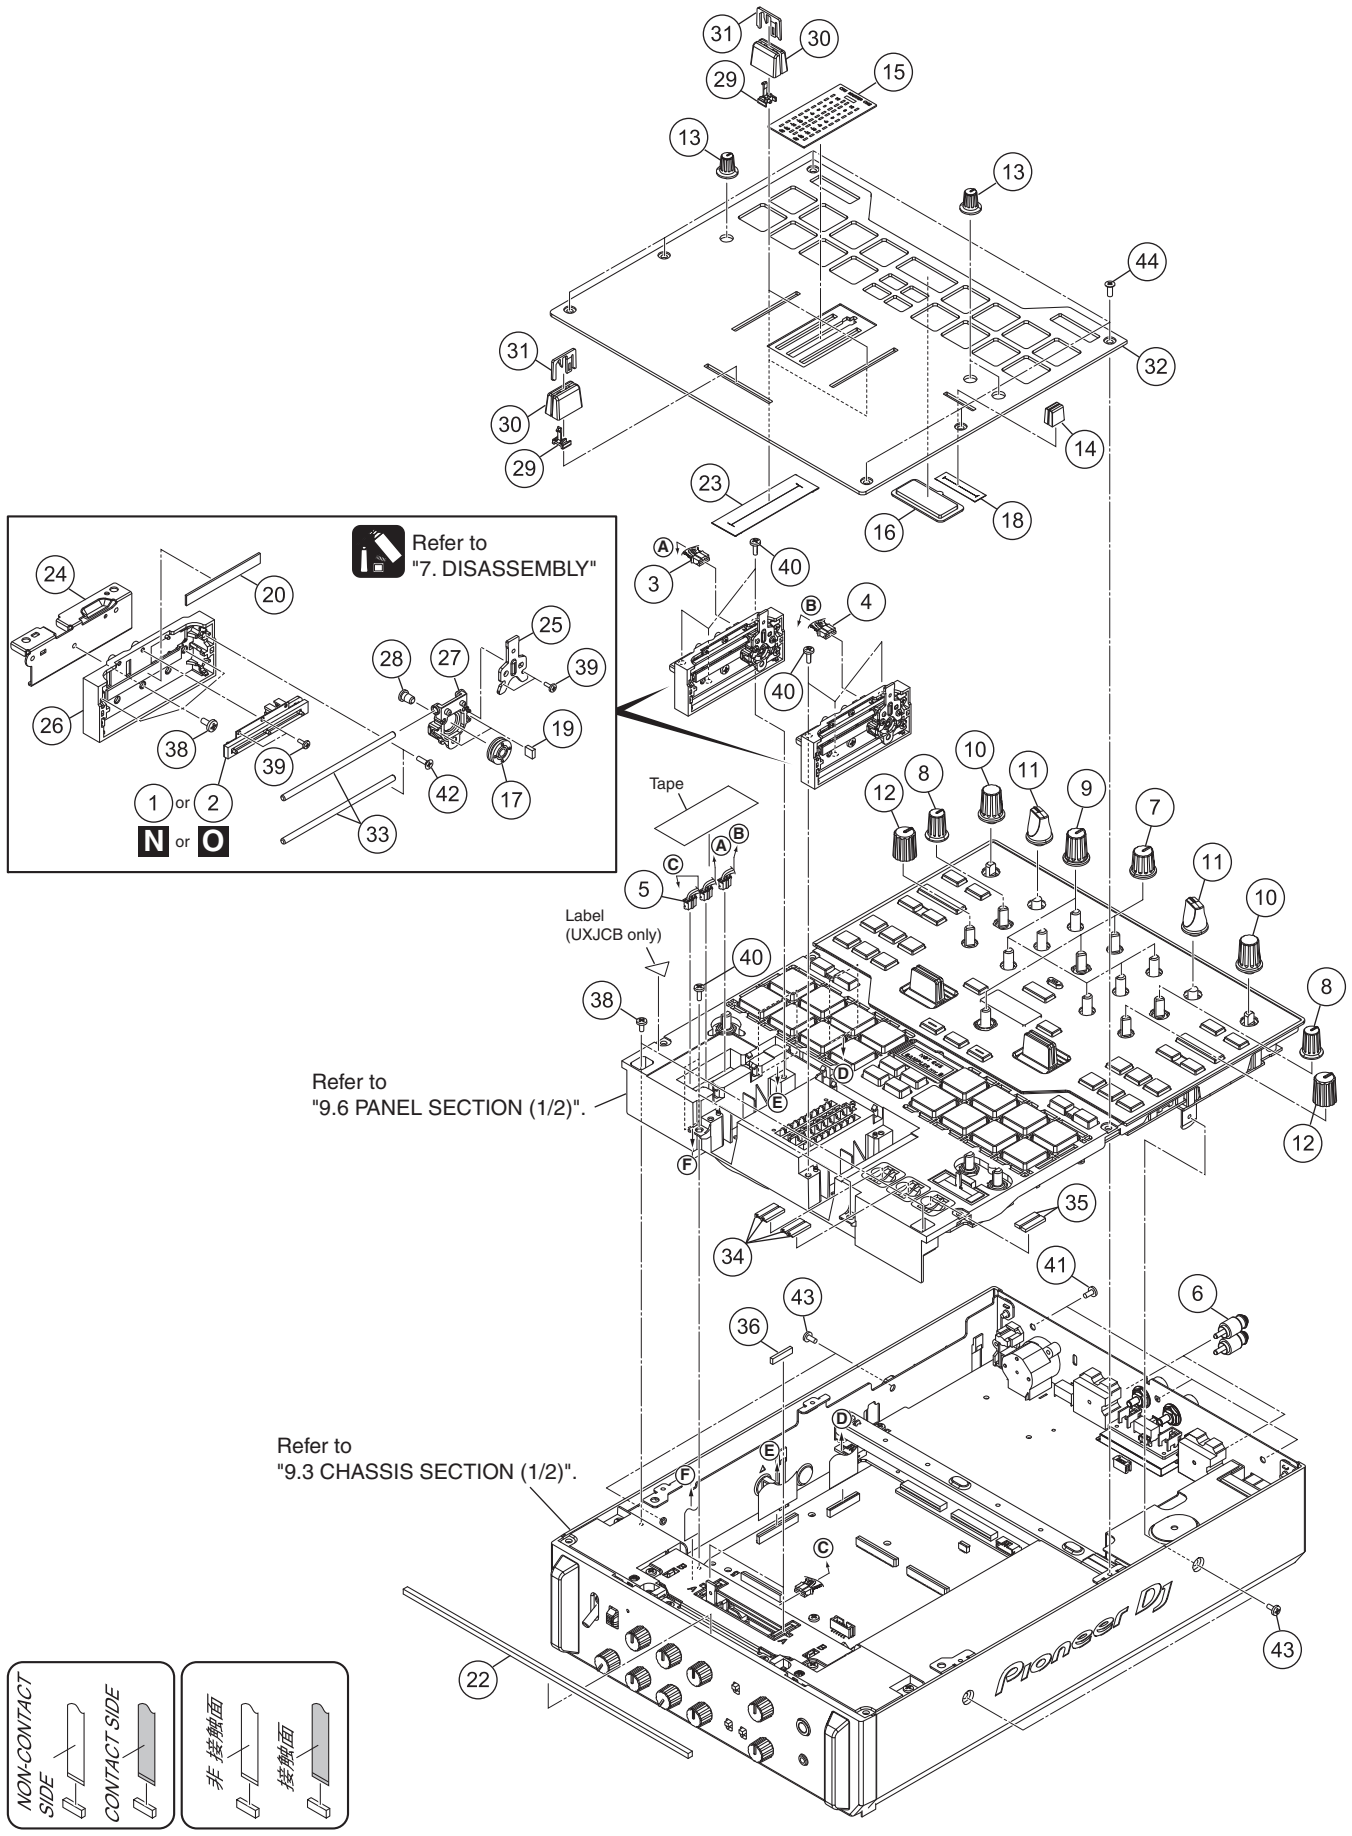

(1) EXTERIOR and CH FADER SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CH1FD Assy	DWX3689
	2	CH2FD Assy	DWX3690
	3	Connector Assy	PF03PP2B07
	4	Connector Assy	PF03PP-B17
	5	Connector Assy	PF04PP-B12
	6	Plug/Pin	DKM1024
	7	Rotary SW Knob (MA)	DAA1198
	8	Rotary SW Knob S (C)	DAA1204
	9	Knob/RSW	DAA1305
	10	Knob	DAA1344
	11	Knob	DAA1345
	12	Knob/CL	See Contrast table (2)
	13	Knob	DAA1346
	14	Knob	DAC3088
	15	Plate	DAH3033
	16	Window	DAH3034
	17	Damper	DEB2032
	18	Fader Packing (B)	DEC2572
NSP	19	Cushion	DEC3356
	20	Felt	DEC3603
	21	. . . . .	
	22	Cushion	DEC3639
	23	Packing	DEC3642
	24	Stay	DNF1942
	25	Lever	DNH3211
	26	Holder	DNK6425
	27	Slider	DNK6426
	28	Brake	DNK6427
	29	Stopper	DNK6440
	30	Knob	See Contrast table (2)
	31	Slider Knob 2	See Contrast table (2)
	32	Panel	See Contrast table (2)
	33	Guide Bar	VLL1514
	34	Fader Bumper A	GNK1010
	35	Fader Bumper B	DEC3596
	36	Fader Bumper C	DEC3605
	37	. . . . .	
	38	Screw	BBZ30P060FTC
	39	Screw	BPZ20P050FTC
	40	Screw	BPZ30P080FNI
	41	Screw	BSZ30P060FTB
	42	Screw	CPZ26P080FTC
	43	Screw	IBZ30P080FTB
	44	Screw	See Contrast table (2)


(2) CONTRAST TABLE

DJM-S9/LSYXJ, DJM-S9/UXJCB, DJM-S9-N/LSYXJ and DJM-S9-N/UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-S9 /LSYXJ	DJM-S9 /UXJCB	DJM-S9-N /LSYXJ	DJM-S9-N /UXJCB
	12	Knob/CL	DAA1320	DAA1320	Not used	Not used
	12	Knob	Not used	Not used	DAA1350	DAA1350
	30	Knob	DAC3089	DAC3089	DAC3100	DAC3100
	31	Slider Knob 2	DAC2685	DAC2685	Not used	Not used
	31	Knob	Not used	Not used	DAC3164	DAC3164
	32	Panel	DNB1241	DNB1241	DEA1038	DEA1038
	44	Screw	DBA1446	DBA1446	DBA1447	DBA1447

9.3 CHASSIS SECTION (1/2)

* This acetate tape is for protecting cables.
If it is peeled away, be sure to adhere new acetate tape.

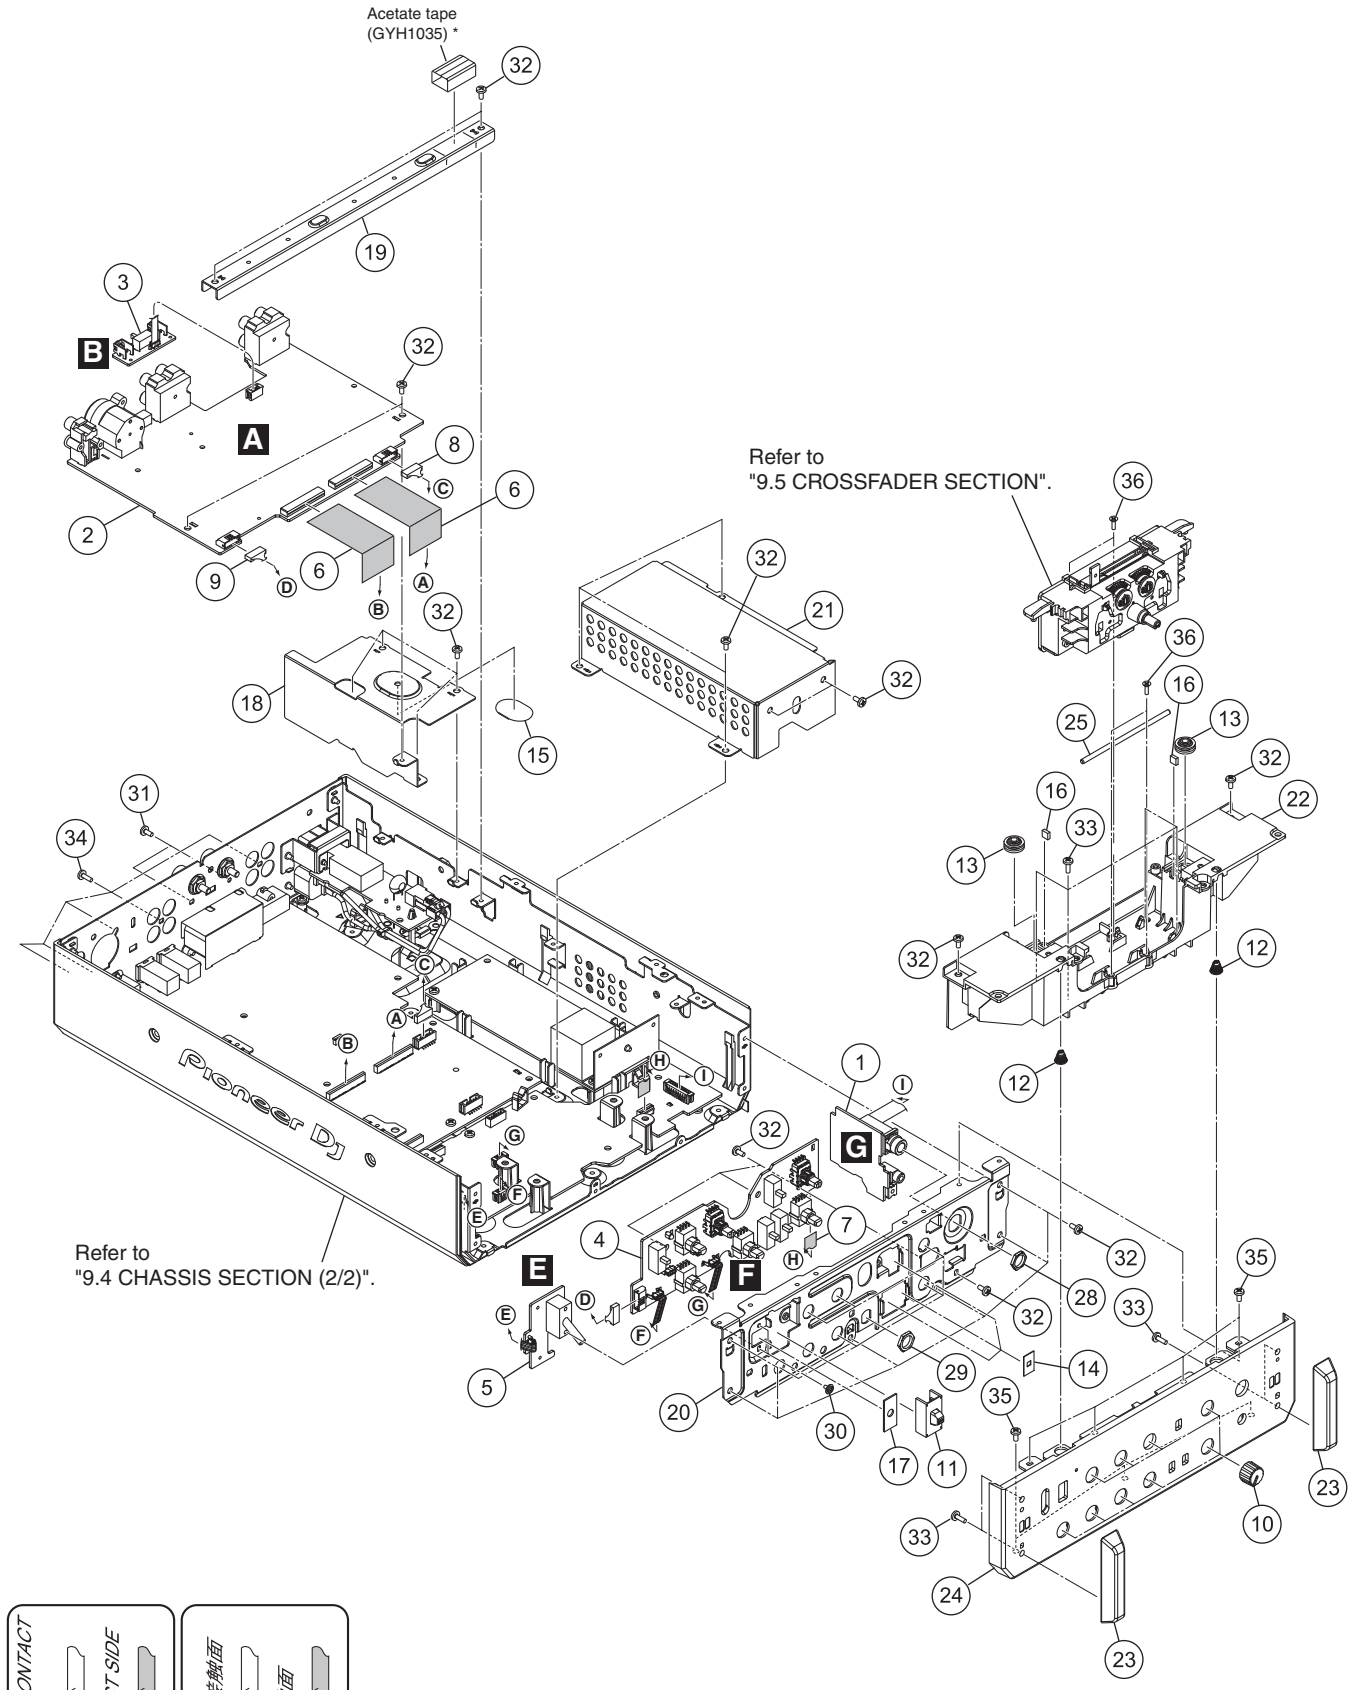

(1) CHASSIS SECTION (1/2) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	HPJK Assy	DWX3686
	2	INPUT Assy	DWX3683
	3	ATT Assy	DWX3682
	4	FRVR Assy	DWX3687
	5	MCSW Assy	DWX3688
	6	FFC	DDD1701
	7	FFC	DDD1702
	8	Connector Assy	PF06PP-D05
	9	Shielded Conn-Cable	DDA1059
	10	Knob	DAA1348
	11	Cap/MIC	DAC2773
	12	Spring	DBH1810
	13	Damper/SI	DEB2008
	14	Slide SW Packing (B)	DEC2590
⚠	15	Insulating Sheet	DEC3629
	16	Cushion	DEC3640
	17	SW Packing	DED1177
	18	Shield Case	DNF1943
	19	Stay	DNF1944
	20	Stay	DNF1945
	21	Shield Case	DNF1946
⚠	22	Holder	DNK6429
	23	Guard	DNK6441
⚠	24	Panel	See Contrast table (2)
	25	Guide Bar	VLL1514
	26	. . . . .	
	27	. . . . .	
	28	Nut M12	DBN1018
	29	Nut	NK90FTC
	30	Screw	AMZ26P040FTC
	31	Screw	BBZ30P060FTB
	32	Screw	BBZ30P060FTC
	33	Screw	BPZ30P080FNI
	34	Screw	BPZ30P080FTB
	35	Screw	BSZ30P060FTB
	36	Screw	CPZ26P080FTC

(2) CONTRAST TABLE

DJM-S9/LSYXJ, DJM-S9/UXJCB, DJM-S9-N/LSYXJ and DJM-S9-N/UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-S9 /LSYXJ	DJM-S9 /UXJCB	DJM-S9-N /LSYXJ	DJM-S9-N /UXJCB
⚠	24	Panel	DXA2291	DXA2291	DXA2298	DXA2298


9.4 CHASSIS SECTION (2/2)

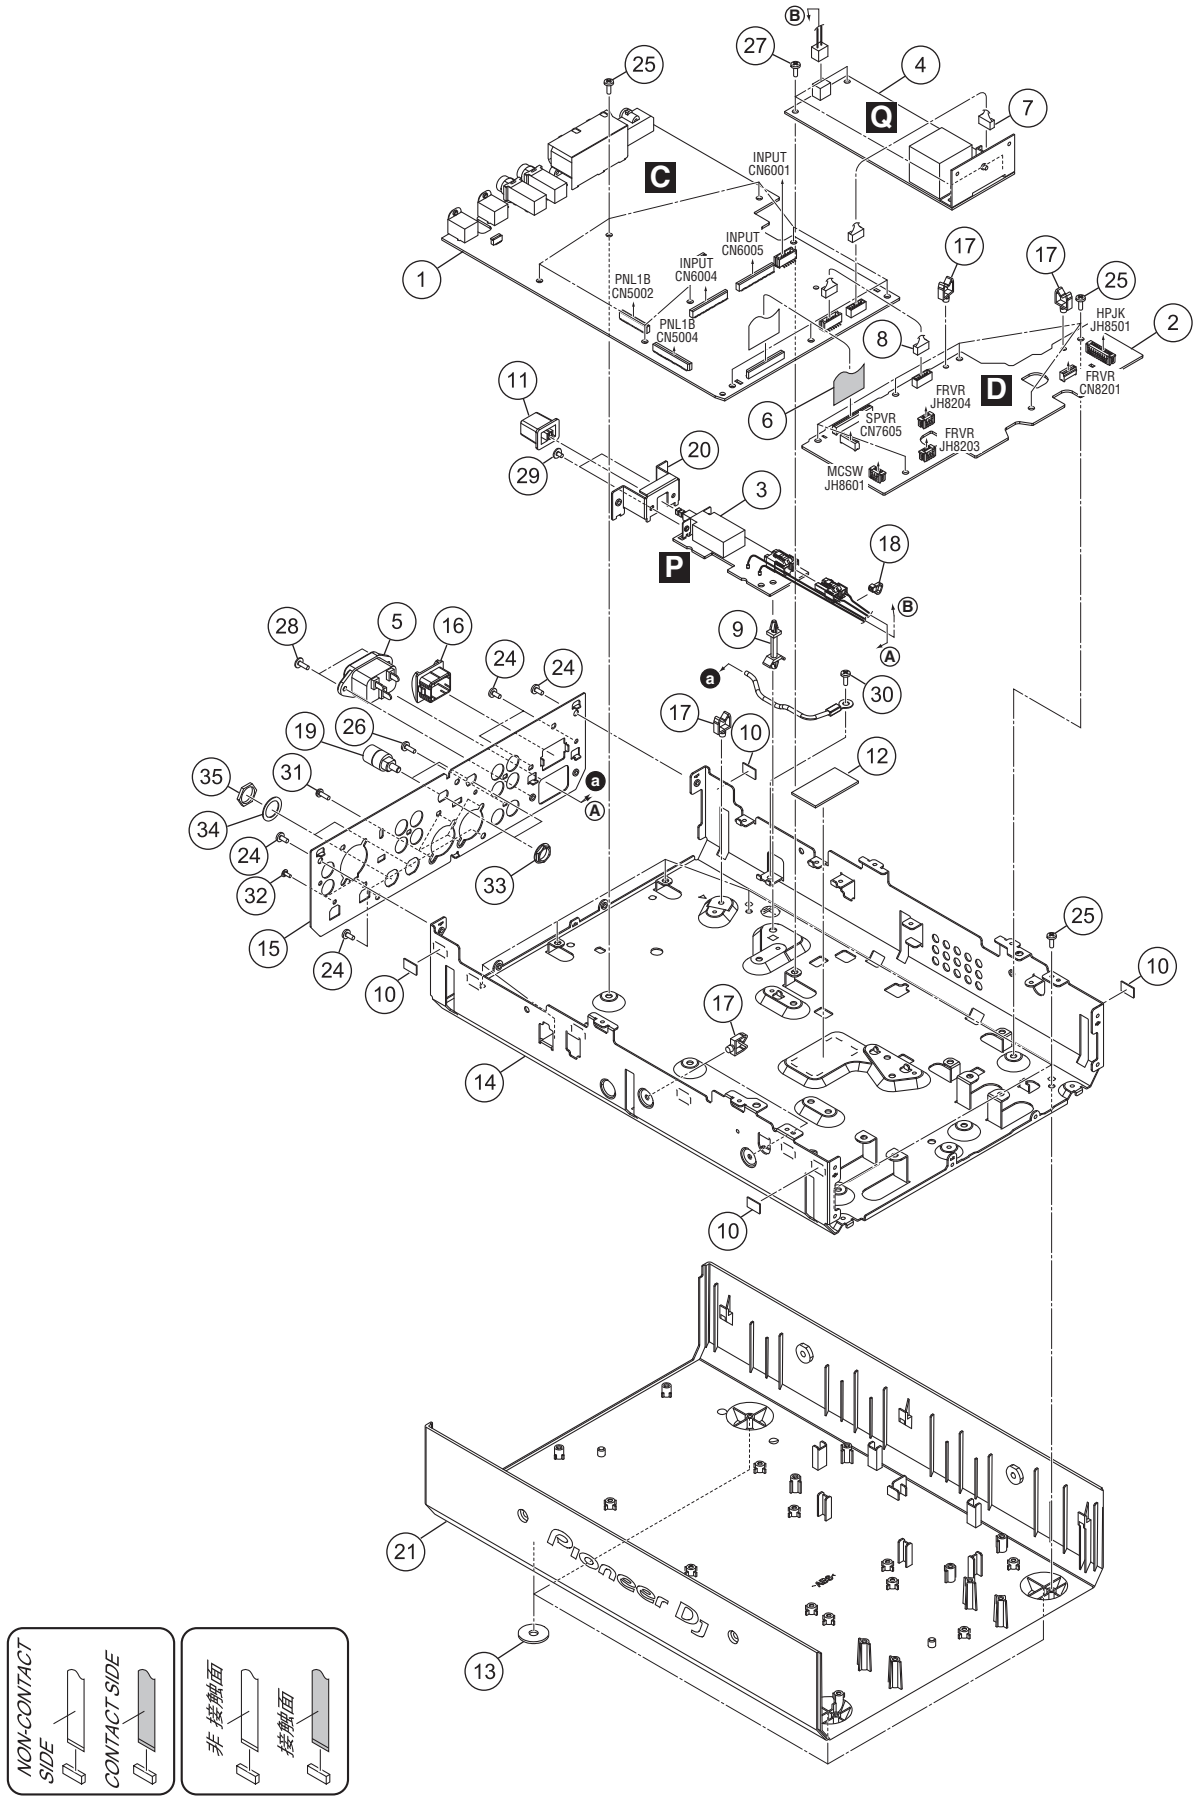

CHASSIS SECTION (2/2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN Assy	DWX3673
	2	HPAMP Assy	DWX3684
	3	ACSW Assy	DWR1547
⚠	4	POWER SUPPLY Assy	DWR1463
⚠	5	AC Inlet	DKP3973
	6	FFC	DDD1701
	7	Crimp Connector	DDC1023
	8	Connector Assy	PF06PP-D05
NSP	9	PCB Spacer	AEC1446
	10	Cushion 11x7	AED7092
	11	Power Knob	DAC2306
	12	Heat Cond Sheet	DEB2026
	13	Cushion	DEC3177
NSP	14	Chassis	DNA1456
	15	Rear Panel	DNC2118
	16	Power Knob Guard	DNK4534
	17	Holder	VEC1355
	18	Binder	ZCA-SKB90BK
	19	Earth Terminal	DKE1019
	20	Bracket PSW	DNF1759
⚠	21	Chassis	DNK6442
	22	. . . . .	
	23	. . . . .	
	24	Screw	BBZ30P060FTB
	25	Screw	BPZ30P080FNI
	26	Screw	BPZ30P080FTB
	27	Screw	BPZ30P100FTB
	28	Screw	IBZ30P080FTB
	29	Screw	IMZ30P040FTC
	30	Screw	PMH40P080FTC
	31	Screw	PPZ30P080FTB
	32	Screw (M3*5)	DBA1340
	33	Flange Nut M9	DBN1008
	34	Washer	DEC2920
	35	Nut (M12)	NKX2FNI


9.5 CROSSFADER SECTION

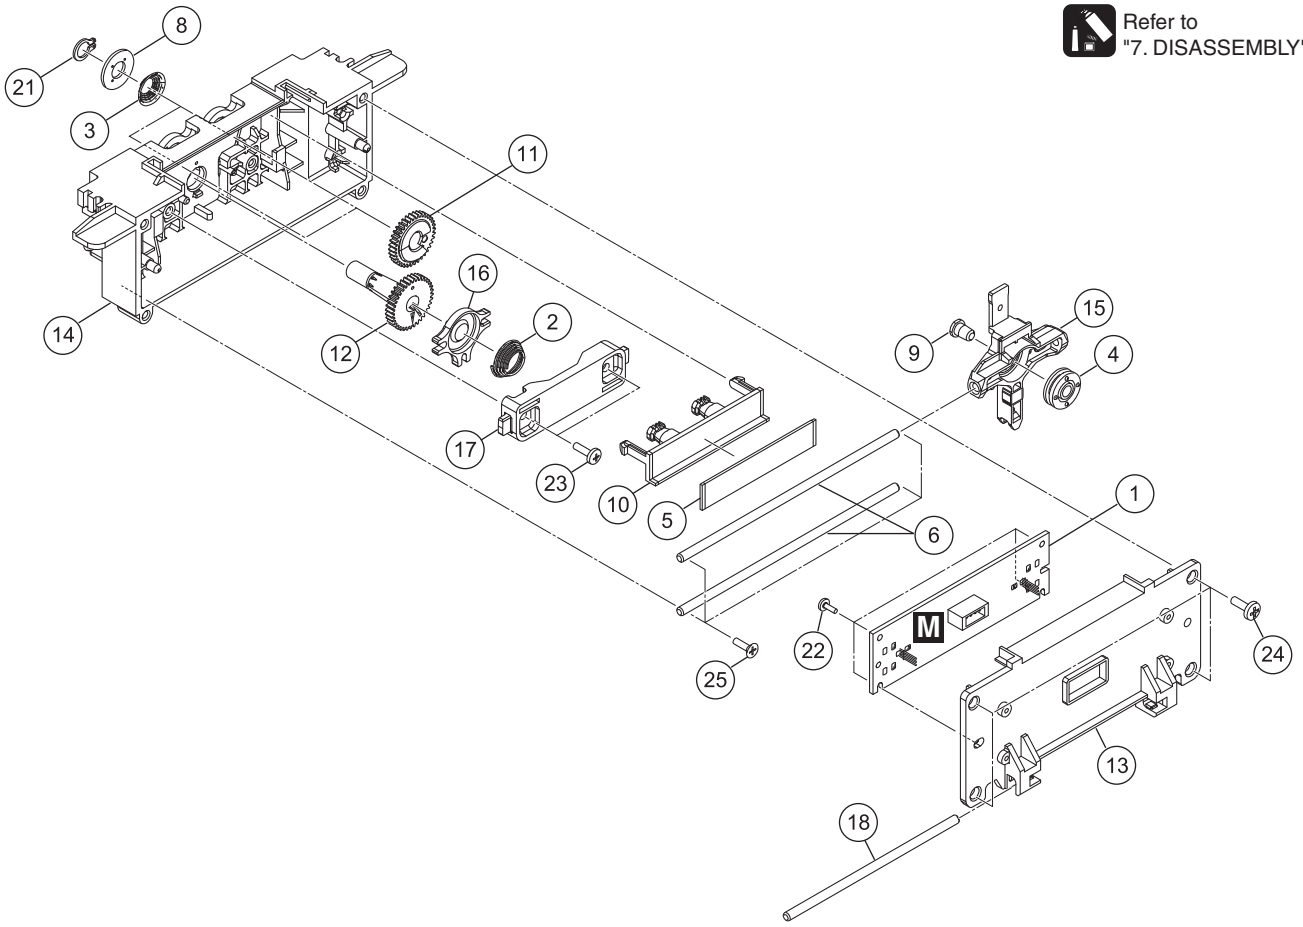

CROSSFADER SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CRFD Assy	DWX3678
	2	Spring/TRQ	DBH1792
	3	Spring	DBH1809
	4	Damper	DEB2032
	5	Felt	DEC3597
	6	Shaft	DLA2240
	7	. . . . .	
	8	Bush (MA)	DNK5086
	9	Brake	DNK6427
	10	Brake	DNK6428
	11	Gear	DNK6430
	12	Gear	DNK6431
	13	Holder	DNK6432
	14	Holder	DNK6433
	15	Slider	DEA1037
	16	Brake	DNK6445
	17	Plate	DNK6446
	18	Guide Bar	VLL1514
	19	. . . . .	
	20	. . . . .	
	21	Washer	YC60FAC
	22	Screw	BPZ20P050FTC
	23	Screw	BPZ26P080FTC
	24	Screw	BPZ30P080FNI
	25	Screw	CPZ26P080FTC

9.6 PANEL SECTION (1/2)

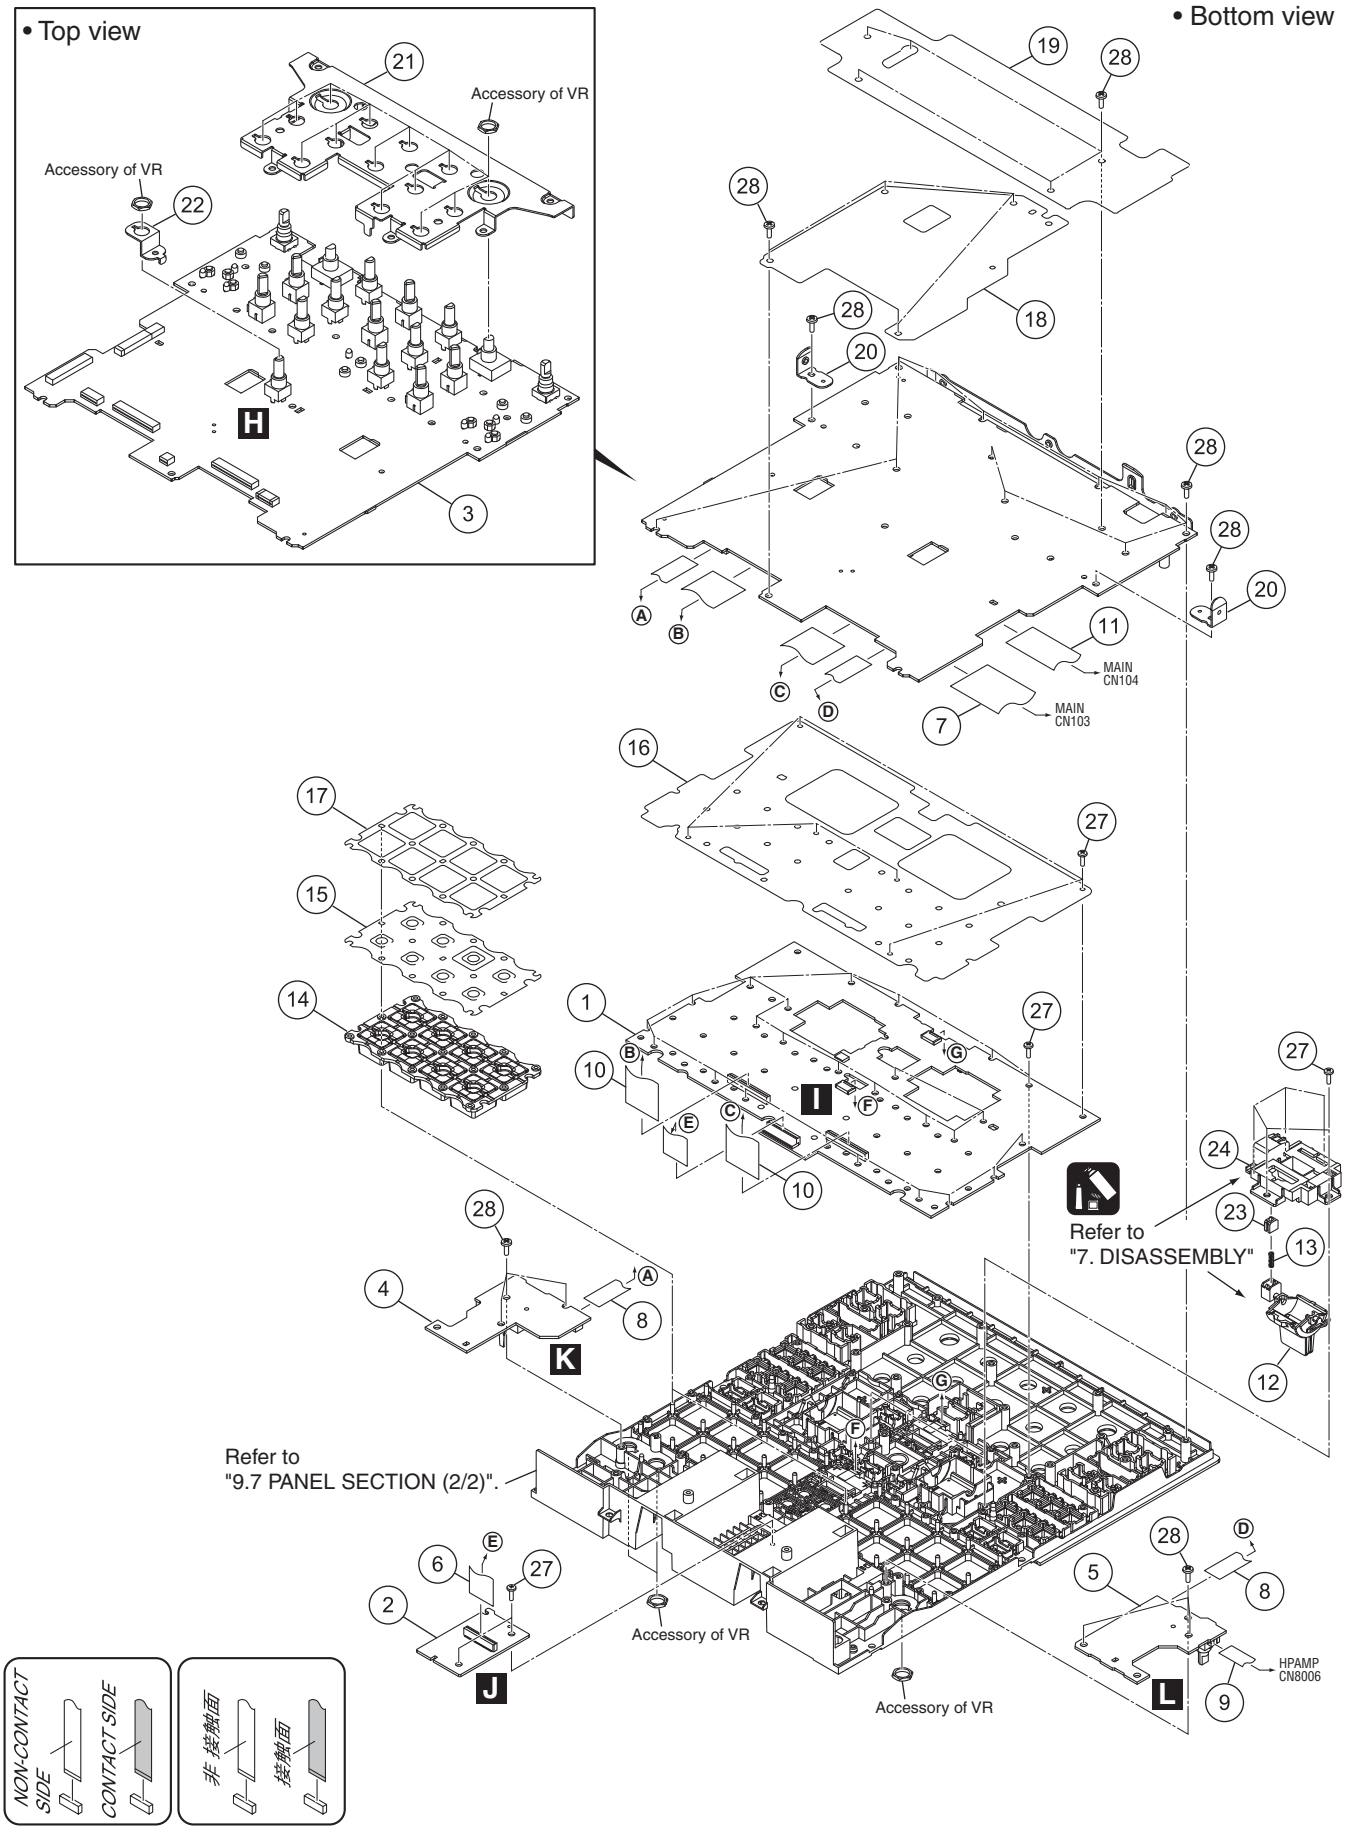


PANEL SECTION (1/2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	PADB Assy	DWX3675
	2	LVMT Assy	DWX3679
	3	PNL1B Assy	DWX3685
	4	HPFD Assy	DWX3680
	5	SPVR Assy	DWX3681
	6	FFC/21P	DDD1655
	7	FFC	DDD1698
	8	FFC	DDD1699
	9	FFC	DDD1700
	10	FFC	DDD1701
	11	FFC	DDD1724
	12	Lever	DAC3081
	13	Lever Spring	DBH1702
	14	Button	DEB2014
	15	Sheet	DEC3593
	16	Sheet	DEC3600
	17	Spacer	DEC3601
	18	Sheet	DEC3635
	19	I-Shield Sheet	DEC3644
	20	Stay	DNH3212
	21	Stay	DNH3213
	22	Stay	DNH3214
	23	Lever Cap	DNK5344
	24	Holder	DNK6435
	25	. . . . .	
	26	. . . . .	
	27	Screw	BPZ26P080FTC
	28	Screw	BPZ30P080FNI

9.7 PANEL SECTION (2/2)

• Bottom view

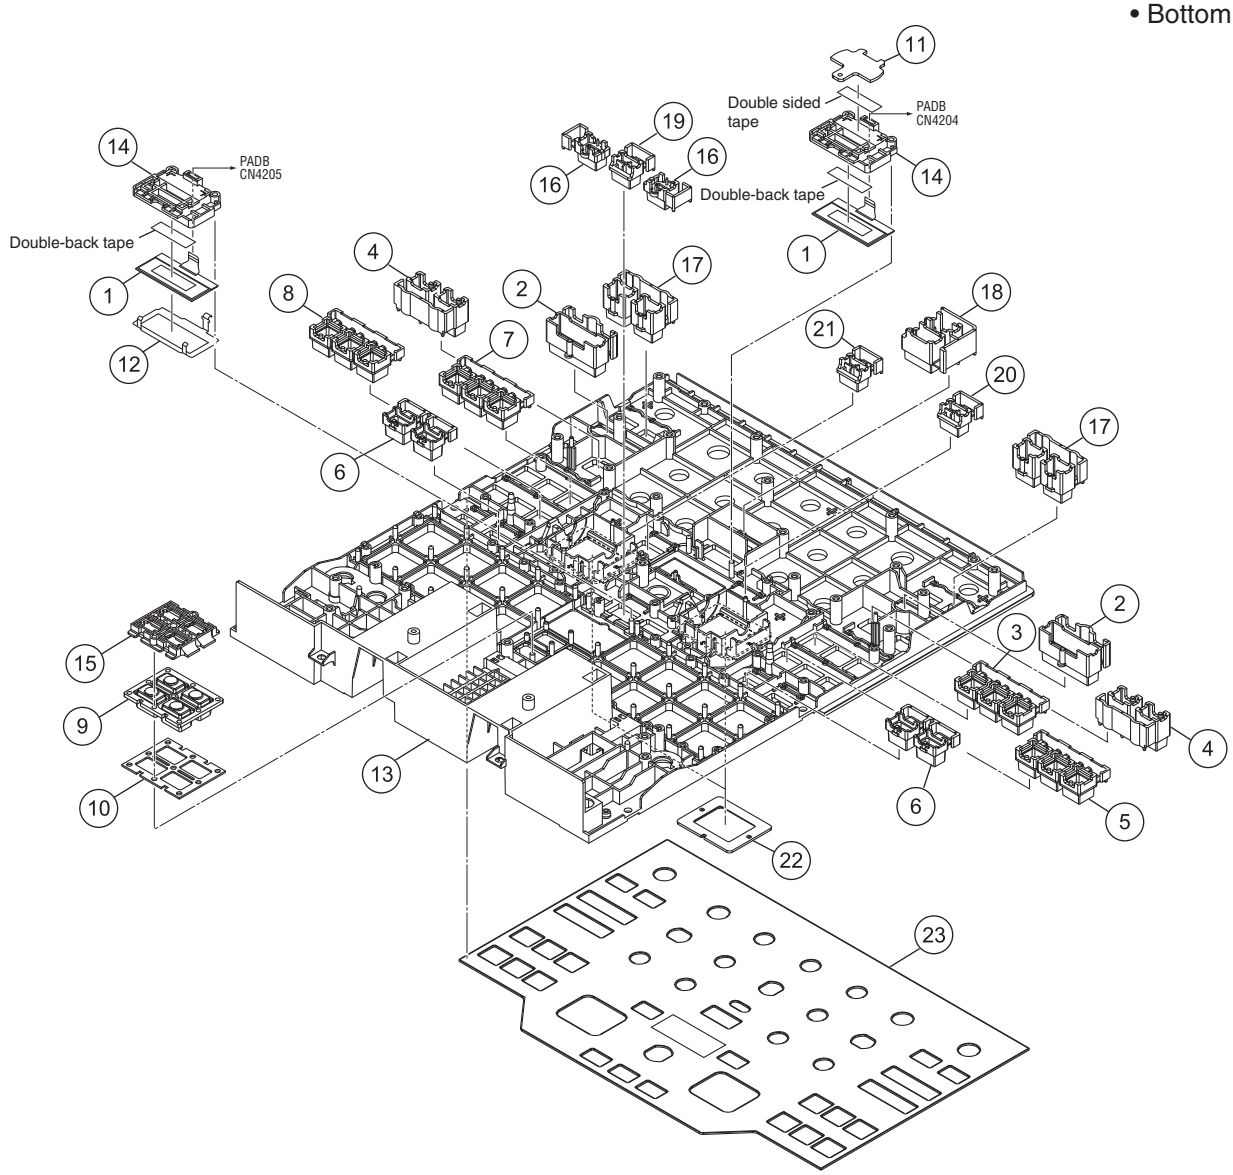

PANEL SECTION (2/2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Matrix OEL	MXS4057
	2	Button	DAC3082
	3	Button	DAC3084
	4	Button	DAC3090
	5	Button	DAC3093
	6	Button	DAC3094
	7	Button	DAC3095
	8	Button	DAC3096
	9	Button	DEB2015
	10	Sheet	DEC3604
	11	Spacer	DEC3641
	12	Shield Plate	DNF1969
⚠	13	Panel	DNK6438
	14	Holder	DNK6439
	15	Holder	DNK6443
	16	Button	DXA2289
	17	Button	See Contrast table (2)
	18	Button	See Contrast table (2)
	19	Button	See Contrast table (2)
	20	Button	See Contrast table (2)
	21	Button	See Contrast table (2)
	22	Panel	See Contrast table (2)
	23	Panel	See Contrast table (2)

(2) CONTRAST TABLE

DJM-S9/LSYXJ, DJM-S9/UXJCB, DJM-S9-N/LSYXJ and DJM-S9-N/UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-S9 /LSYXJ	DJM-S9 /UXJCB	DJM-S9-N /LSYXJ	DJM-S9-N /UXJCB
	17	Button	DAC3085	DAC3085	DAC3101	DAC3101
	18	Button	DXA2288	DXA2288	DXA2290	DXA2290
	19	Button	DAC3087	DAC3087	DAC3102	DAC3102
	20	Button	DAC3091	DAC3091	DAC3103	DAC3103
	21	Button	DAC3092	DAC3092	DAC3104	DAC3104
	22	Panel	DNK6436	DNK6436	DNK6457	DNK6457
	23	Panel	DNK6437	DNK6437	DNK6459*	DNK6459*

*The serial number is not printed on this part for service.