
9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

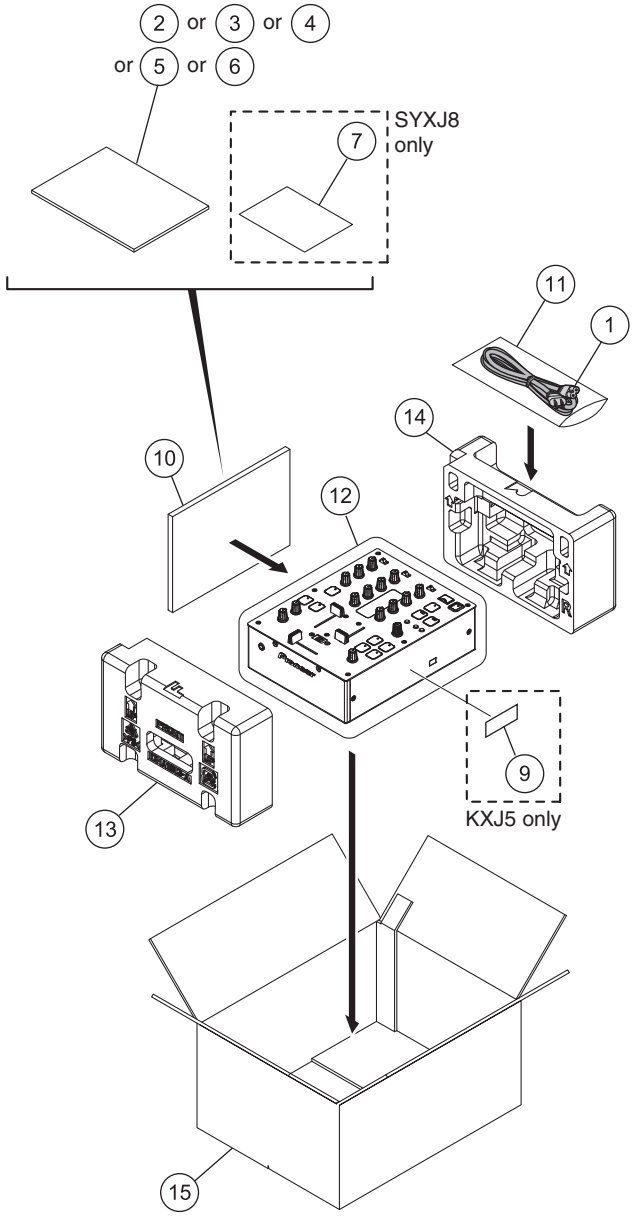

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
⚠	1	Power Cable	See Contrast table (2)
	2	Operating Instructions	See Contrast table (2)
	3	Operating Instructions	See Contrast table (2)
	4	Operating Instructions	See Contrast table (2)
	5	Operating Instructions	See Contrast table (2)
	6	Operating Instructions	See Contrast table (2)
NSP	7	Warranty Card (WY)	See Contrast table (2)
	8	•••••	
	9	Rycycle Label (M)	See Contrast table (2)
NSP	10	Polyethylene Bag	AHG7117
	11	Vinyl Bag	Z21-013
	12	Packing Sheet	AHG7015
	13	Pad F	See Contrast table (2)
	14	Pad R	See Contrast table (2)
	15	Packing Case	See Contrast table (2)

(2) CONTRAST TABLE

DJM-350/SYXJ8, CUXJ, LXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-350 /SYXJ8	DJM-350 /CUXJ	DJM-350 /LXJ	DJM-350 /KXJ5	DJM-350 /AXJ5
⚠	1	Power Cable	ADG1154	ADG7022	ADG1154	XDG3054	ADG7079
	2	Operating Instructions (En, Fr, De, It, Nl, Es, Ru)	DRB1501	Not used	Not used	Not used	Not used
	3	Operating Instructions (En)	Not used	DRB1502	Not used	Not used	Not used
	4	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1504	Not used	Not used
	5	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1503	Not used
	6	Operating Instructions (Zhcn)	Not used	Not used	Not used	Not used	DRB1505
NSP	7	Warranty Card (WY)	ARY7107	Not used	Not used	Not used	Not used
	9	Rycycle Label (M)	Not used	Not used	Not used	DRW2307	Not used
	13	Pad F	DHA1813	DHA1813	DHA1813	DHA1815	DHA1813
	14	Pad R	DHA1814	DHA1814	DHA1814	DHA1816	DHA1814
	15	Packing Case	DHG2963	DHG2964	DHG2966	DHG2968	DHG2967

9.2 EXTERIOR SECTION

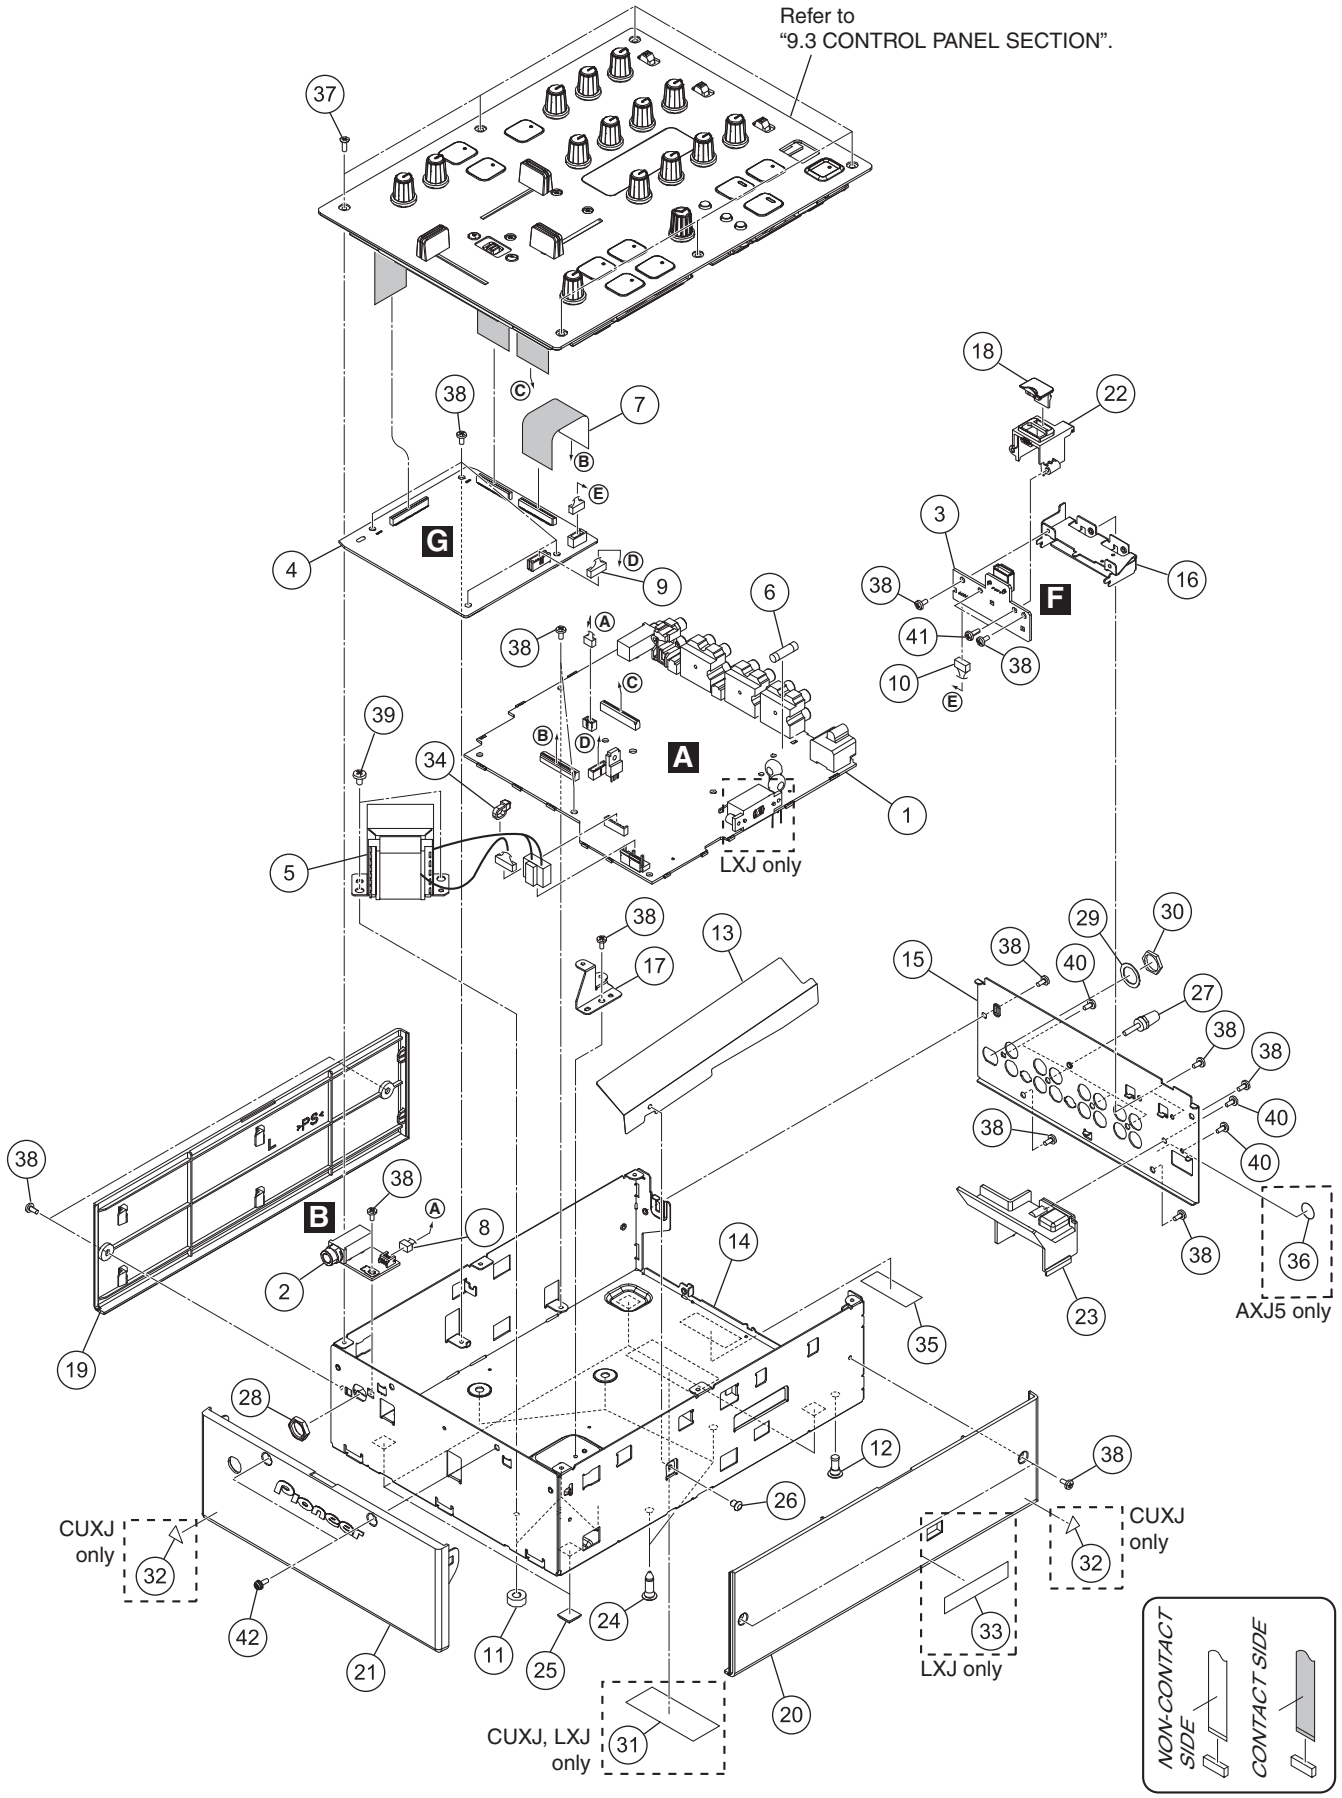

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	JACK Assy	See Contrast table (2)
	2	HPJK Assy	DWX3114
	3	USJK Assy	DWX3115
	4	MAIN Assy	DWX3112
⚠	5	Transfomer	See Contrast table (2)
⚠	6	Fuse (T400 mA)	AEK1050
	7	29P FFC	DDD1532
	8	Connector Assy 3P	DKP3868
	9	Connector Assy 6P	DKP3892
	10	Connector Assy 4P	DKP3893
NSP	11	Spacer	AEB7092
	12	PCB Holder	AEC7057
	13	Shield Sheet B	DEC3311
	14	Chassis	DNA1372
	15	Rear Panel	See Contrast table (2)
	16	USB Stay	DNF1854
	17	Main Stay	DNF1856
	18	USB Cover	DNK4999
⚠	19	Side Panel L	DNK5554
⚠	20	Side Panel R	See Contrast table (2)
⚠	21	Front Panel	DNK5556
	22	USB Holder	DNK5598
⚠	23	PCB Cover	DNK5765
	24	PCB Holder	PNW2029
	25	Rubber Foot	VEB1349
	26	Rivet (Plastic)	RBM-003
	27	Terminal Screw	AKE-031
	28	Nut M12	DBN1018
	29	Washer	DEC2920
	30	Nut (M12)	NKX2FNI
NSP	31	FCC Label	See Contrast table (2)
NSP	32	Label	See Contrast table (2)
NSP	33	V Select Label	See Contrast table (2)
	34	Binder	ZCA-SKB90BK
NSP	35	Label	VRW1629
NSP	36	CCC S & E Label	See Contrast table (2)
	37	Screw (FE)	DBA1290
	38	Screw	BBZ30P060FTB
	39	Screw	BBZ40P060FTC
	40	Screw	BPZ30P080FTB
	41	Screw	BPZ30P080FTC
	42	Screw	PBH30P080FTB

(2) CONTRAST TABLE

DJM-350/SYXJ8, CUXJ, LXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-350 /SYXJ8	DJM-350 /CUXJ	DJM-350 /LXJ	DJM-350 /KXJ5	DJM-350 /AXJ5
	1	JACK Assy	DWX3136	DWX3135	DWX3116	DWX3136	DWX3136
⚠	5	Transfomer	DTT1253	DTT1252	DTT1250	DTT1253	DTT1253
	15	Rear Panel	DNC1948	DNC1947	DNC1950	DNC1952	DNC1951
⚠	20	Side Panel R	DNK5555	DNK5555	DNK5601	DNK5555	DNK5555
NSP	31	FCC Label	Not used	Not used	DRW2299	Not used	Not used
NSP	31	FCC, Class B Label	Not used	DRW2300	Not used	Not used	Not used
NSP	32	Label	Not used	DRW1975	Not used	Not used	Not used
NSP	33	V Select Label	Not used	Not used	DRW2349	Not used	Not used
NSP	36	CCC S & E Label	Not used	Not used	Not used	Not used	DRW2310

9.3 CONTROL PANEL SECTION

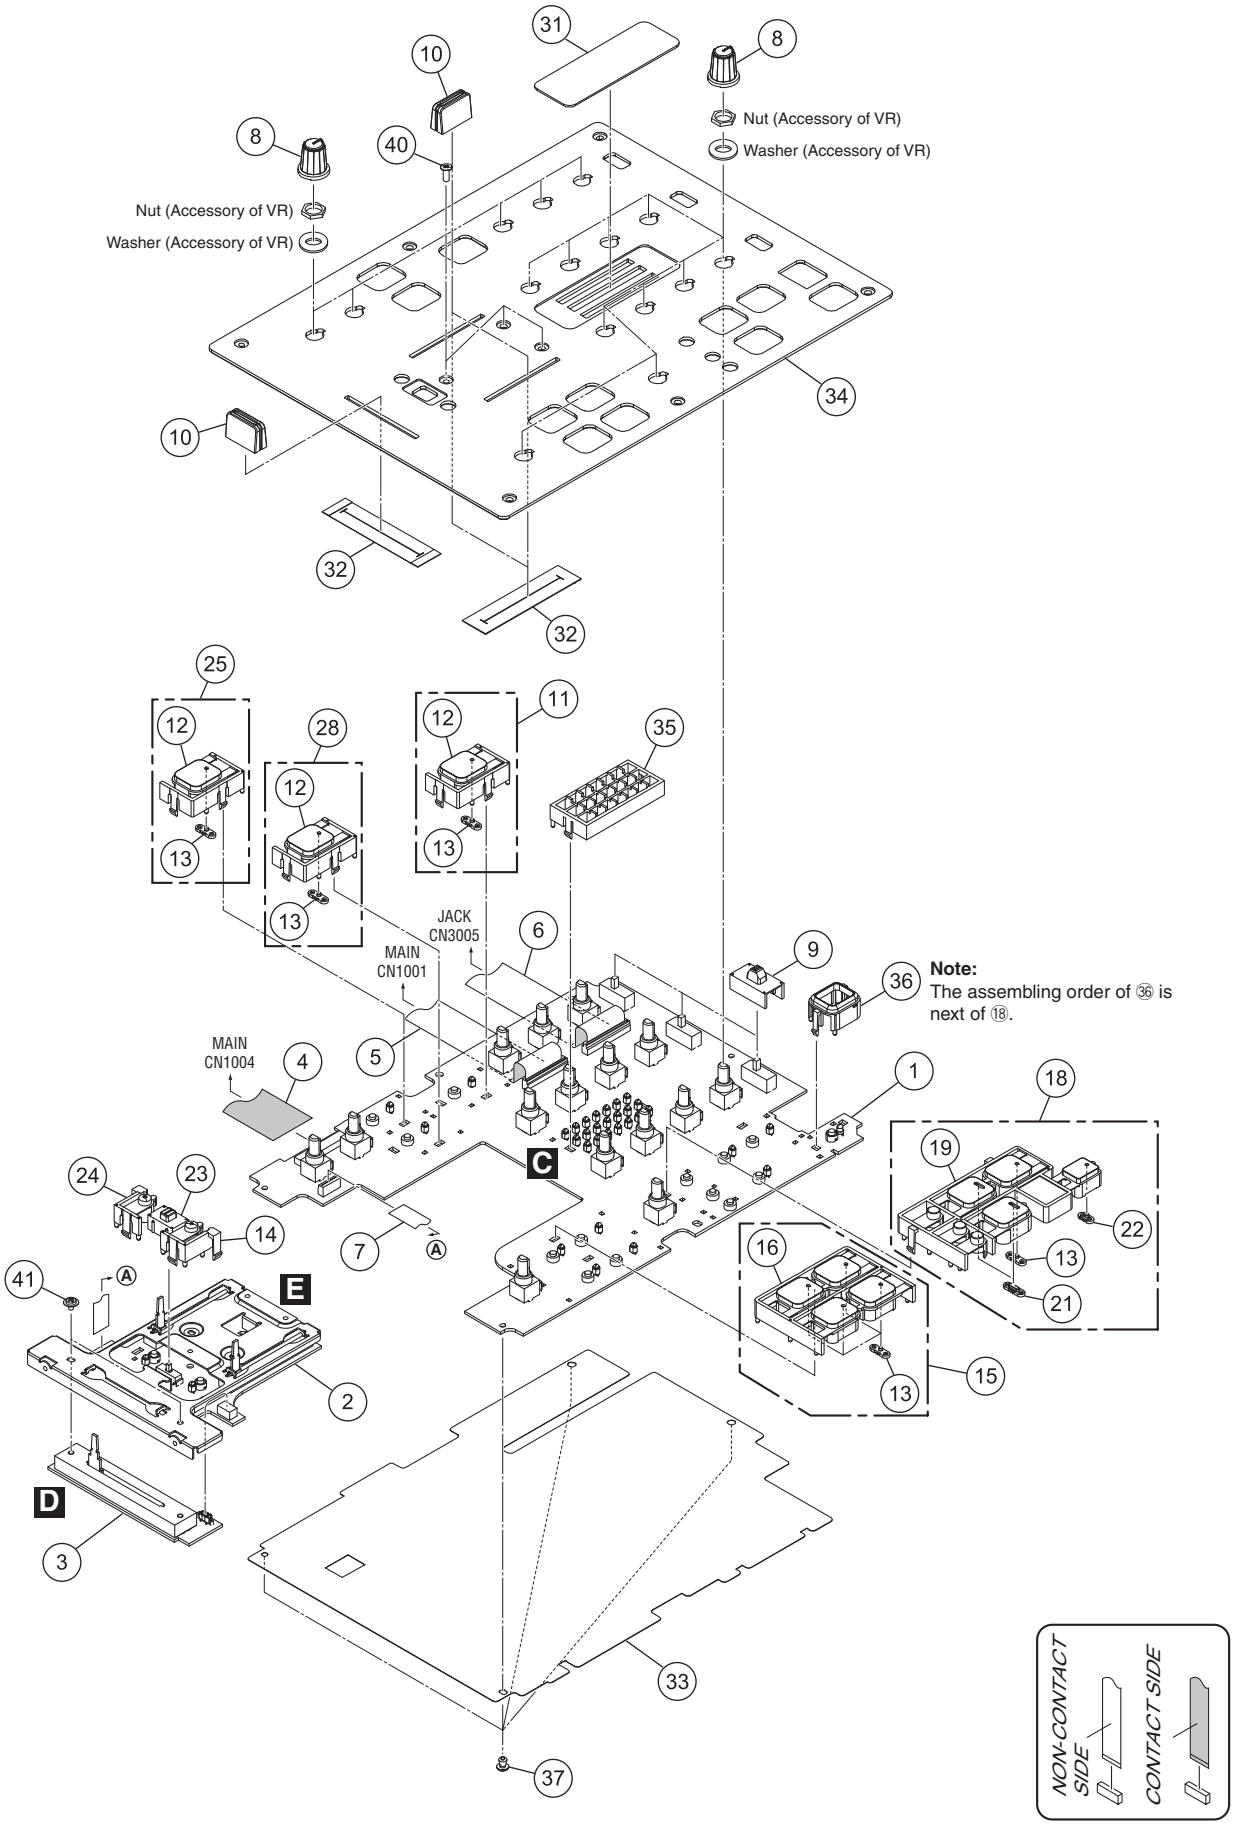

CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	VRSW Assy	DWX3117
	2	FADR Assy	DWX3118
	3	CRFD Assy	DWX3119
	4	31P FFC	DDD1529
	5	27P FFC	DDD1530
	6	29P FFC	DDD1531
	7	10P FFC	DDD1533
	8	Rotary VR Knob (B)	DAA1257
	9	SW Cap MIC	DAC2346
	10	Slider Knob	DAC2501
	11	Button MIC Assy	DAC2583
	12	Button CUE	DAC2582
	13	LED Lens	DNK5553
	14	Button Fader R	DAC2586
	15	Button EFFECT Assy	DAC2587
	16	Button EFFECT	DAC2588
	17	•••••	
	18	Button REC Assy	DAC2589
	19	Button REC	DAC2602
	20	•••••	
NSP	21	Lens REC	DNK5558
NSP	22	Lens STANDBY	DNK5729
	23	SW Cap Fader	DAC2591
	24	Button Fader L	DAC2593
	25	Button CUE1 Assy	DAC2600
	26	•••••	
	27	•••••	
	28	Button CUE2 Assy	DAC2601
	29	•••••	
	30	•••••	
	31	Level Plate	DAH2788
	32	Fader Packing	DEC2903
	33	Shield Sheet	DEC3224
	34	Control Panel	DNB1180
	35	Level Meter Holder	DNK4622
	36	STANDBY Guard	DNK5730
	37	Rivet (Plastic)	RBM-003
	38	•••••	
	39	•••••	
	40	Screw (FE)	DBA1290
	41	Screw	IMZ30P040FTC